


onn.TM

USER GUIDE

Portable Karaoke With Wireless Microphones

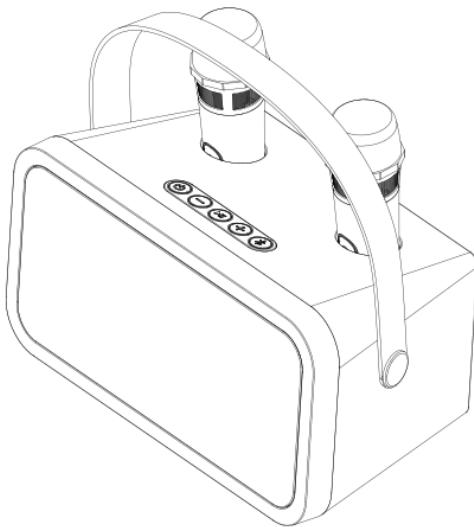

100130735_EN_10312024

Contents & Information

CONTENTS & INFORMATION

FEATURES

OVERVIEW

BUTTON FUNCTIONS

Portable Karaoke

Wireless Microphones

INITIAL SETUP

Charging your Microphones

Charging your Portable Karaoke

Bluetooth® Setup

MODES

Karaoke Mode

USB Mode

LED LIGHTS

VOICE CHANGING EFFECTS

LIGHT STATUS

Portable Karaoke

Wireless Microphones

TROUBLESHOOTING

FCC WARNING

FEATURES



- 8 voice-changing effects
- 6 LED light effects
- Bluetooth® with up to 33 ft (10 m) wireless range
- Built-in rechargeable battery with up to 9 hours of playtime
- 2 wireless microphones with volume control
- USB-C® Charging port
- USB Input

00130735



SCAN HERE FOR MORE PRODUCT INFORMATION AND LEAVE US A REVIEW!

Overview

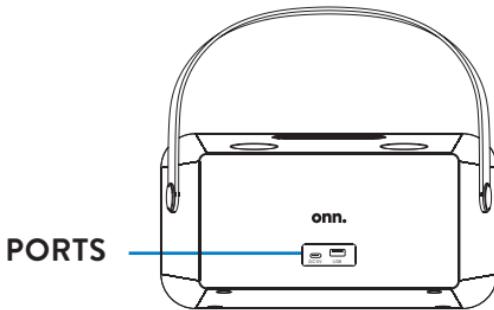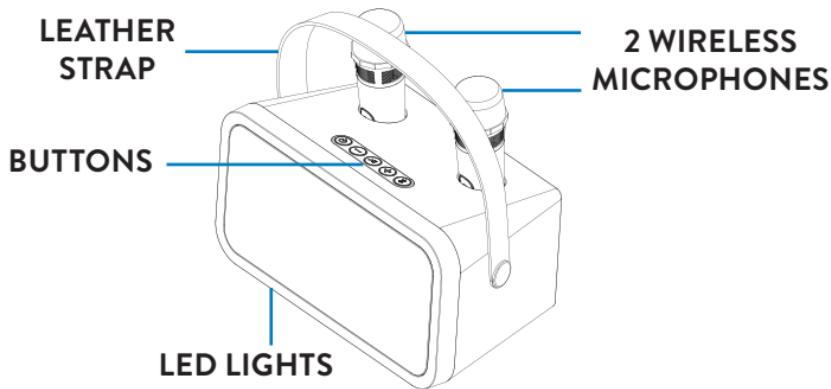

Button Functions

PORTABLE KARAOKE



Power Button

Press to change LED light effects.

Press and hold to turn the device on/off.



Volume Up/Next Button

Press to turn up the volume.

Press and hold to play the next song.



Pause/Play Button

Press to pause/play the current track.



Volume Down/Previous Button

Press to turn down the volume.

Press and hold to play the previous song.



Bluetooth® Button

Press to switch between Bluetooth®/USB modes.

Press and hold to disconnect Bluetooth®.

Button Functions

WIRELESS MICROPHONES



Power Button

Press to pause/play the current track.
Press twice to mute/unmute the mic.
Press and hold to turn the mic on/off.



Volume Up/Increase Echo

Press to turn up the volume.
Press and hold to increase echo.



Volume Down/Decrease Echo

Press to turn down the volume.
Press and hold to decrease echo.




Effects Button

Press to switch between 8 available voice effects.
Press and hold to remove original vocals.
Press and hold again to activate original vocals.

Initial Setup

CHARGING YOUR MICROPHONES

1. Charge your microphones by inserting them into the charging slots.

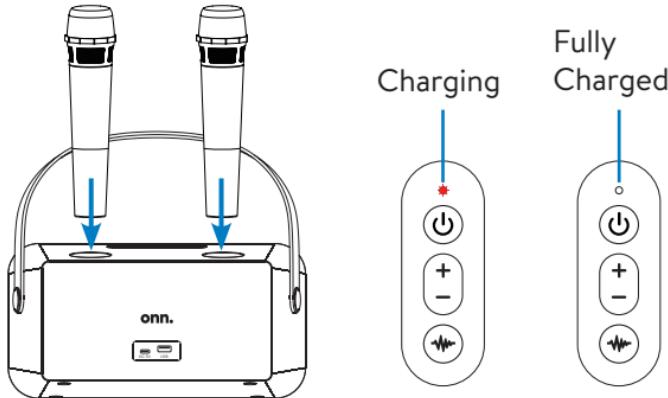


2. Red light indicator will start to blink which means the microphones are charging.
3. After 3 hours, your microphones will be fully charged (red light indicator will turn off) and ready for loads of karaoke fun.

Initial Setup

CHARGING YOUR PORTABLE KARAOKE

1. Plug the included USB-C® cable into the karaoke's charging port, and connect the other end of the cable to a power adapter (sold separately).

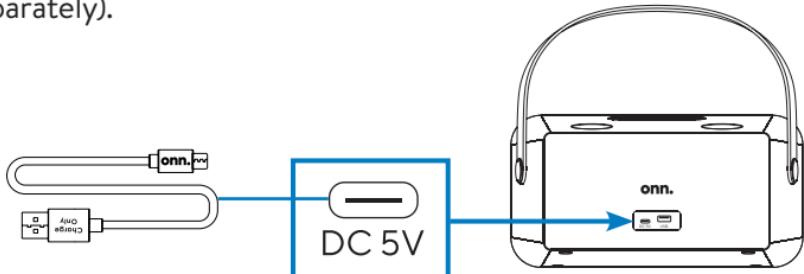


2. Allow approximately 3.5 hours to fully charge the battery (red light indicator will turn off).



Note: We recommend using a USB wall adapter with a 5V/2A output.

Initial Setup

BLUETOOTH® SETUP

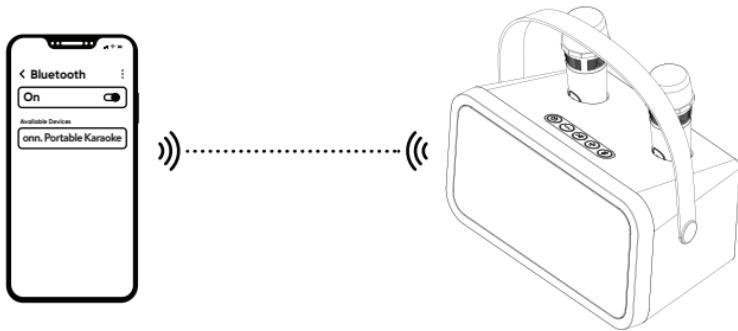

1. Once your karaoke and wireless microphones are fully charged, press and hold the Power button until you hear a prompt indicating the device has entered Bluetooth® pairing mode.
2. On your smartphone or tablet, search for the Bluetooth® device named “onn Portable Karaoke” and tap to connect.
3. A prompt will play once pairing is successful.

Modes

KARAOKE MODE

This device features Karaoke Mode, which allows you to eliminate the original vocals on any song you play via Bluetooth® wireless connection.

Press and hold the **Effects** button on either wireless microphone to eliminate the vocals on the song you are playing.

Press and hold the **Effects** button again to deactivate Karaoke Mode.

USB MODE

This device features USB Mode, which allows you to play preloaded music from a USB drive (sold separately). Insert your USB drive, and the device will automatically switch to USB Mode.

LED Lights

This device features 6 different LED light effects. Press the **Power** button once to cycle through all 6 LED light effects.

Voice Changing Effects

This device offers a unique experience with 8 voice changing effects. Press the **Effects** button on your wireless microphone to access and cycle through these effects.

1. Normal	5. High Pitch Voice 2
2. Deep Voice	6. Monster Voice
3. High Pitch Voice 1	7. Duck Voice
4. Baby Voice	8. Small Voice

Light Status

PORTABLE KARAOKE




Charging Indicator

Modes Indicator

● Red	Low Battery
★ Flashing Red	Charging (off when fully charged)
● Blue	Bluetooth® Mode
★ Flashing Blue	Bluetooth® Pairing
● Yellow	USB Mode

Light Status

WIRELESS MICROPHONES

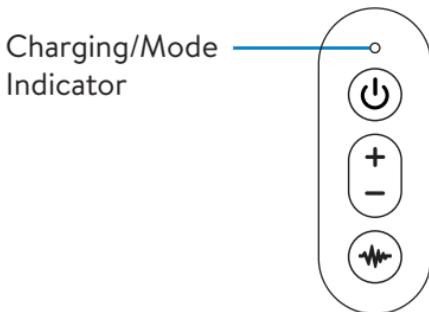


● Red	Low Battery
★ Flashing Red	Charging (off when fully charged)
● Blue	Bluetooth® Mode
★ Flashing Blue	Bluetooth® Pairing

Troubleshooting

If your onn portable karaoke is not functioning as expected, you may perform a reset. Press and hold the **Power** button for approximately 10 seconds until the device shuts down completely. Then, power it on again to enjoy your karaoke experience.

You may also reset your wireless microphones by pressing and holding the **Power** button on each microphone for 10 seconds. The microphones will power off and then power on again as usual.

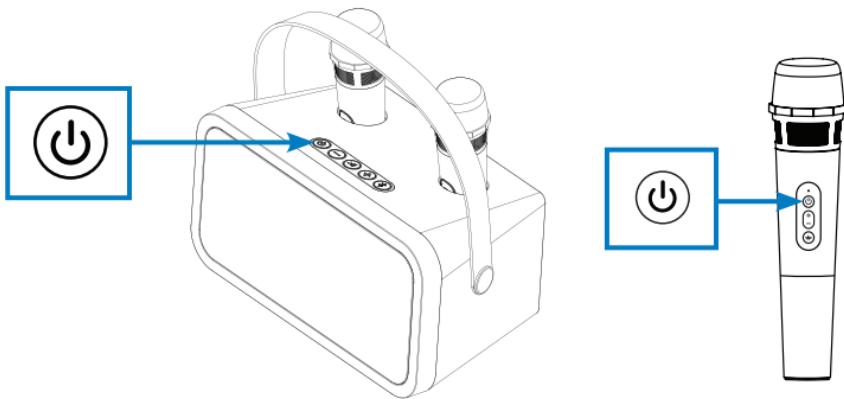

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Caution

Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

FCC Warning (Continued)

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

FCC ID: 2AVRV100130735W

FCC ID: 2AVRVK223M

Wireless Microphones
Model #: K223M



onn.TM

© 2024 Walmart Inc. onn. is a trademark of Walmart Inc. All Rights Reserved. Distributed by Walmart Inc., Bentonville, AR 72716
MADE IN CHINA.