



## nRFModule Operating Instructions

**The nRFModule will self-configure when plugged into a parent device:**

When plugged into a remote handset or other controller the nRFModule will self-configure as a transmitter:

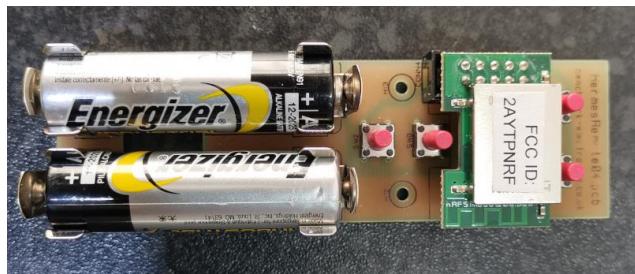

When plugged into a main board the nRFModule will self-configure as a Receiver:

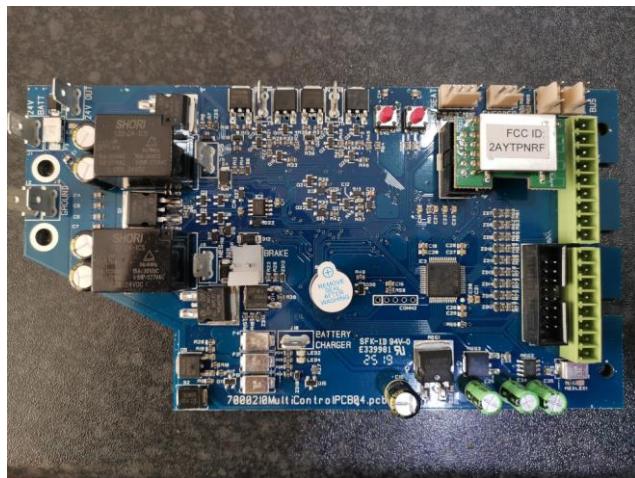

### **FCC Statement:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This module is not for sale to third parties.

Integration instructions are internal confidential manufacturing documents.

if FCC not viewable in host (due to potential enclosure) it should be labelled on host "Contains FCC ID: 2AVTPNRF"