 


BLUETOOTH SOUND BAR



USER MANUAL

GD-19

Warnings and Precautions

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

AVERTISSEMENT: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

CAUTION: Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.

 
 
WARNING: The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.

WARNING: Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

WARNING: Shock hazard - Do Not Open.

AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

12. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure compliance statement:
This device has been evaluated to meet the general RF exposure requirement



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

1

Features

- 900mm length
- Rated output RMS:60W
- Speaker unit: 2.5/15w full range speakers*2+ 2.5/15w Subwoofer speakers*2+Bass Radiator*1
- Functions: 2.1ch stereo,LINE IN,Bluetooth,USB, LED display, EQ, Remote control
- Materials: Plastic body+Metal grille
- Power supply: Power adaptor
- Frequency: 20-20KHz
- S/N: ≥ 80dB
- Bluetooth: Version 4.2+EDR, 10m


Includes

- Audio cable
- Mounting template
- Remote control: requires 1pcs CR2025 batteries (Battery include)
- User Manual
- Power adapter

Setup

Power


Plug the included AC/DC power adapter into the DC POWER INPUT on the sound bar and a standard AC power outlet.

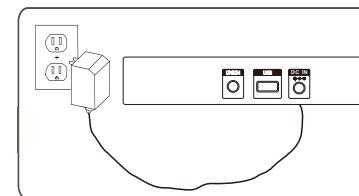

Remote

Battery Handling Methods

1. Figure open the battery cover and remove the CR2025 battery.
2. CR2025 battery updates.
3. Finally, the battery cover.

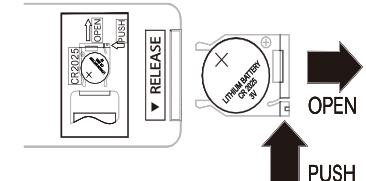

LED Indicator Light:

Display/Light	Status
Red light	Standby
	LINE IN Mode
	Bluetooth Mode
	USB Mode

Mounting


We recommend having this bar speaker professionally mounted.

The included spacers should be used at your discretion to extend the face of the bar speaker farther from the wall. These are typically used when mounting the bar speaker under a television, and the face of the bar speaker needs to be flush with the face of the television.

2


3

Input Interfaces

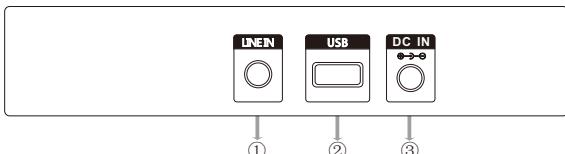

- ① **Line In Jack:** Connect the soundbar and LINE out device by 3.5mm audio cable
- ② **USB Interface:** MP3 music playback (support max 32GB U-disk), Software update
- ③ **DC IN:** Power Adaptor Input


Buttons

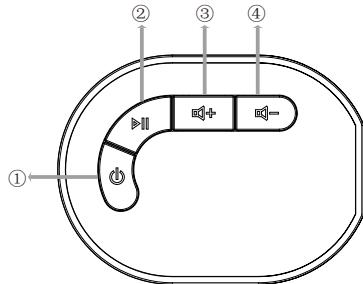

- ① **Power/Model:** Long press to Power on/off the soundbar, short press to switch among BT, USB and LINE IN mode
- ② **Pause/Play:** Short press to Pause/Play the music
- ③ **Volume +:** Short press to previous music, long press to increase the volume
- ④ **Volume - :** Short press to next music, long press to reduce the volume

4

Remote Control

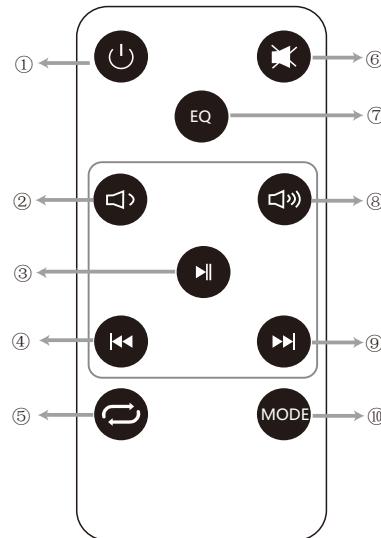

- ① Switch to Power on/off
- ② Volume -
- ③ Pause/Play
- ④ USB-Pre music
- ⑤ Repeat Play: One/All Music repeat play (USB Mode Only)
- ⑥ MUTE
- ⑦ Switch to change EQ
- ⑧ Volume +
- ⑨ USB-Next music
- ⑩ MODE: Switch to enter LINE IN/Bluetooth/USB mode

5

LINE Input

Prepare a Line In cable (Available from the accessories)

1. Plug in the power cable, LED display indicate by Red light;
2. Long press the power button on the control panel or short press the power button on remote control to power on the soundbar, red light turn off and display by flashing , the soundbar enter to Bluetooth Mode(Default mode)
3. Insert 3.5mm audio cable to LINE IN interface, the soundbar enter Line In mode automatically, display by ;
4. Ensure the audio sourcing in the status of line in working;
5. Your device can play music via the soundbar now.

USB

Prepare one piece U disk with MP3 music inside.(Not included in the accessories).

1. Plug in the power cable, LED display indicated by red light;
2. Long press the power button on the control panel or short press the power button on remote control to power on the soundbar, red light turn off and display by flashing , the soundbar enter to Bluetooth Mode(Default mode)
3. Insert U-Disk to USB interface, the soundbar enter USB mode automatically, display by ;
4. Ensure Mp3 songs available in the U disk
5. Your device can play music via the soundbar now.

6. USB play control by remote control only, Pause/Play: , Pre/next: ;
Repeat: Press once for single song repeat and twice for All songs repeat.

Bluetooth

Initial pairing your bluetooth device.

1. Plug in the power cable, LED display indicated by red light.
2. Long press the power button on the control panel or short press the power button on remote control to power on the soundbar, red light turn off and display by flashing , the soundbar enter to Bluetooth Mode(Default mode)

6

3. Using the native controls on your bluetooth device, search and select the soundbar pairing name "GD19" in your bluetooth settings to pair.
4. When successfully paired and connected, the LED display indicated by solid .
5. Short press POWER button to cancel current bluetooth pairing, it will automatically repair bluetooth device if the bluetooth is not close.

After initial pairing, the soundbar will stay paired unless unpaired manually by user or erased due to a reset of the device.

If your device should become unpaired or you find it unable to connect, repeat the above steps.

7