

Quick Start Guide

Model: Z4NEU3

WHAT'S INCLUDED

1 pair of Echo Frames,
Carrying case,
Clearing cloth,
Power adapter, and charging cable.

STATUS LIGHT COLORS

The status light is located on the top right side of the inner frame.

Pair Mode: Blue/Red blink

Active Alexe: Cyan/Blue blink

Errors/Mic & phone: Red blink

CONTROLS

Power on/reconnect/walk: Press the action button once

Pair with you frame off: press and hold the action button until the status light blinks red and blue, then release the button.

Power off: press and hold the action button until the status light turns red, then release the button.

Increase volume: press the front of the volume control.

Decrease volume: press the back of the volume control.

CARE INSTRUCTIONS

Not waterproof, avoid high heat, clearing your lenses

IMPORTANT PRODUCT INFORMATION

For safety, compliance, recycling, and other important information regarding your Device, please refer to the Legal & Compliance section in the Settings menu of your Device.