

INSTRUCTION MANUAL

Includes rechargeable battery

Thank you for choosing our RC car. In order to ensure the correct and pleasant use, please read the product manual and have a sufficient understanding of the product before use.

⚠ Warning:


Battery-powered products are suitable for children over 6 years of age. Like all electrical products, care should be taken to prevent electric shocks during use.

How to install the battery



1. Turn the switches on the toy car and the controller to the "OFF" position.
2. Use a screwdriver to open the battery cover.
3. Insert the battery as shown in the figure below.
4. Close the battery box.

How to use

1. Turn the switches on the toy car and the controller to the "ON" position.
2. Press and hold the button on the upper right of the remote control, press and hold for 2 seconds, the car will automatically demonstrate.
3. When the car starts to lose performance, power or function, it may be time to recharge the battery.

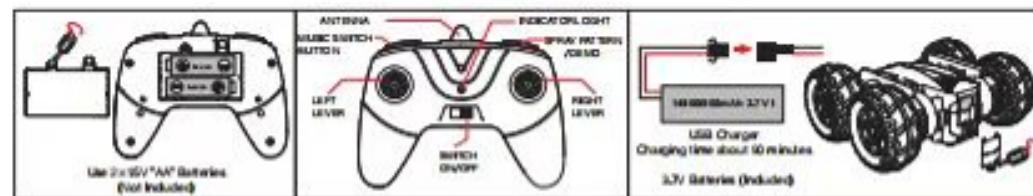

Instructions

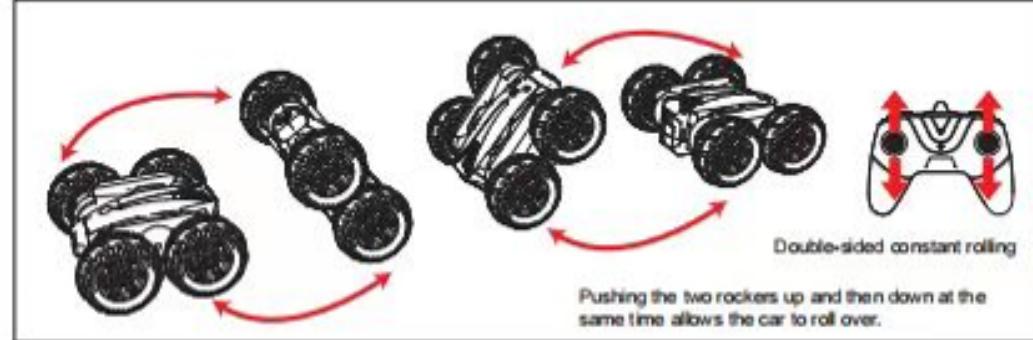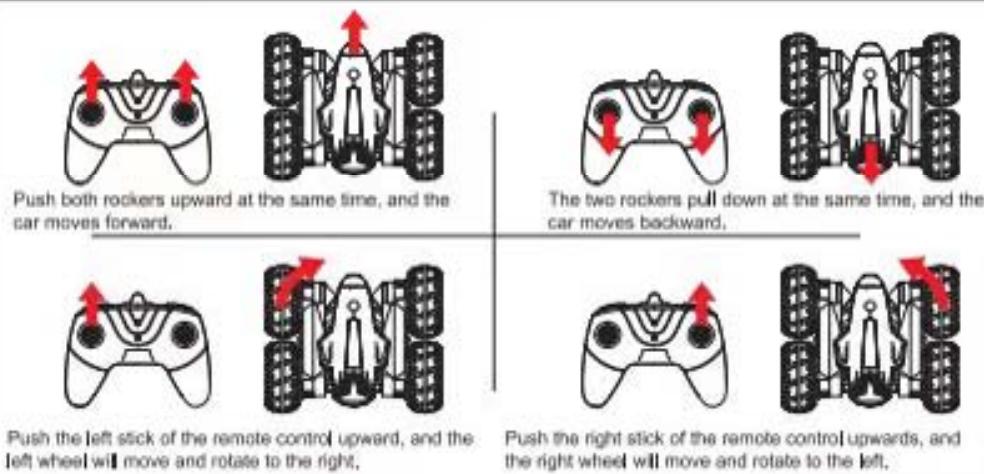

Double-sided constant rolling

Pushing the two rockers up and then down at the same time allows the car to roll over.



The left joystick is down, the right joystick is up, and the car rotates for a period of time, it will open and stand and Anticlockwise rotation.

The left joystick is up, the right joystick is down, and the car rotates for a period of time, it will open and stand and rotate clockwise.

Spray pattern



Open the cover, put clean water into the car, then press the button on the upper right of the remote control, the headlights will turn on and spray mist.

Precautions for battery use

1. The battery terminals must not be short-circuited;
2. Non-rechargeable batteries cannot be charged;
3. The rechargeable battery can only be charged under adult supervision;
4. Different types of batteries or old and new batteries cannot be mixed;
5. When disposing of the battery, do not throw the battery into the fire, the battery may explode;
6. Check whether the wires, plugs, shells and other parts of the battery charger are damaged regularly. If damage is found, stop using it until the repair is complete;
7. The exhausted battery should be taken out of the toy;
8. Keep the instructions and packaging for future reference, they contain important information;
9. The rechargeable battery should be taken out of the toy before charging.

Maintenance:

1. When the toy is not used for a long time, the battery must be taken out;
2. Gently wipe the toy with a clean dry cloth;
3. Keep toys away from direct sunlight and avoid high temperature environments.

Note:

1. In the case of insufficient power, the flip function will be lost in the game;
2. Please don't use it on smooth ground, otherwise the flip function will be lost during the game;
3. Please make sure that the battery is fully charged in the first time

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.