

The Product No: 82292

Transmitter (TX) test mode frequency range; 2407~2475 MHz.

1. Press "left upper key R" and "right lower key F" and turn on the transmitter. The transmitter will enter the launch test mode.
2. After pressing the "upper left" button again, the transmitter will send a signal at the intermediate working frequency (2433MHZ), and the LED light will flash at 1HZ
3. After pressing the "upper left" button again, the transmitter will emit a signal at the maximum operating frequency (2475MHZ), and the LED light will flash at 2HZ
4. After pressing the "upper left" button again, the transmitter will emit a single carrier signal at 2407MHZ operating frequency, and the LED light will stay on
5. After pressing the "upper left" button again, the transmitter will exit the test mode and enter the normal working mode

Channel List:

Channel	Frequency (MHz)	Channel	Frequency (MHz)
1	2407	26	2432
2	2408	27	2433
3	2409	28	2434
...	...	...	...
24	2430	68	2474
25	2431	69	2475