

Foldable bluetooth keyboard

User Guide

Ver:US-A0

KF8600



Package Contents


- foldable bluetooth keyboard:1pcs
- Micro usb charging cable line:1pcs
- User guide:1pcs

please read the user guide carefully and correctly use it



made in china

① Bluetooth Connect

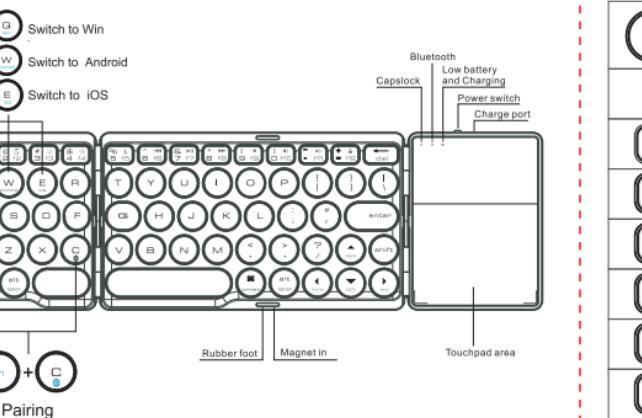

1. Switch the power switch to "ON", the bluetooth LED light up, then press the combination keys "FN+C" to enter the bluetooth pairing mode.
2. In your computer or phone's "Setting", turn on bluetooth, searching for bluetooth devices. When the " bluetooth keyboard " is founded, click it into pairing.
3. Enter the corresponding password on the keyboard according to the prompts of the computer device, then click "Enter" key to confirm and complete the connection. You can start typing comfortably now.

② Status Display Led

Connect : Open the power switch, blue lights up, press the connect button, blue light twinkles.

Charging : Indicator light will be on green, after fully charging, the light crush out.

Low Voltage Indication : When the voltage is below 3.3 V, red light twinkles.

Remarks: In order to prolong the life span of the battery, when you do not use the keyboard for a long time, please switch off the power.

③ Function Keys

fn + E	Switch to iOS	fn + W	Switch to Android
fn + =	function	fn + =	function
~ esc	Home	~ esc	Desk top
1 f1	Search	1 f1	Search
@ f2	Select all	@ f2	Select all
# f3	Copy	# f3	Copy
\$ f4	Paste	\$ f4	Paste
% f5	Cut	% f5	Cut
6 f6	Prev	6 f6	Prev
7 f7	Break	7 f7	Break
8 f8	Next	8 f8	Next
9 f9	Mute	9 f9	Mute
J f10	Volume -	J f10	Volume -
- f11	Volume +	- f11	Volume +
= f12	Lock screen	= f12	Lock screen
del	Delete	del	Delete
del	(Backspace)	del	(Backspace)

fn + Q	Switch to Win
fn + =	function
~ esc	Home page
1 f1	Search
@ f2	Select all
# f3	Copy
\$ f4	Paste
% f5	Cut
6 f6	Prev
7 f7	Break
8 f8	Next
9 f9	Mute
J f10	Volume -
- f11	Volume +
= f12	Lock screen
del	Delete
del	(Backspace)

Copyright
It is forbidden to reproduce any part of this quick start guide without the permission of seller.

④ TouchPad function

Function of Win10+ Version

1-Finger	2-Finger	3-Finger	1-Finger
Left Click	Right Click	Invoke Cortana	Left Click
Double Click	Move Cursor	Multitasking Gestures	Double Click
Move Cursor	Scroll/Pan	Type+Slide	Move Cursor
Pinch/Zoom	Pinch/Zoom	3-Finger	Pinch/Zoom
Type+Slide	Invoke Action Center	3-Finger	Type+Slide
			Long slide up Return to desktop

Notice:

For systematic reasons,
Touchpad can only be used with iOS 13 Version or above.

⑤ Keyboard Maintenance

1. Please keep the keyboard away from liquid or humid environment, saunas, swimming pool, steam room and don't let the keyboard get wet in the rain.
2. Please don't expose the keyboard at too high or too low temperature condition.
3. Please don't put keyboard under sun for a long time.
4. Please don't put keyboard close to the flame, such as cooking stoves, candles or fireplace.
5. Avoid sharp objects scratching products, timely to recharge products to ensure the normal use.

Troubleshooting

Please contact the after-sales service.

⑥ Other

This reason due to the product broken and damage is not include on the warranty.

Accident, misuse, improper operation, or any unauthorized repair, modified or removed

Improper operation or maintenance, when operation violation of the instructions or connection unsuitability power supply.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.