
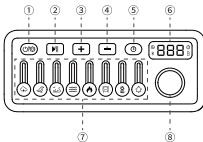


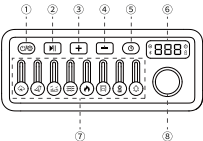



| <div>情景音箱床头灯</div> <div>Scene speaker and bedside lamp</div> <div></div> <div>S660pro</div>   | <div>使用说明</div> <div></div> <div><table><tr><td>① 开关/模式键</td><td>② 暂停/播放</td></tr><tr><td>③ 递增</td><td>④ 递减</td></tr><tr><td>⑤ 定时</td><td>⑥ 屏幕显示</td></tr><tr><td>⑦ 自然音推子</td><td>⑧ 旋钮开关</td></tr><tr><td> Type-C充电口</td><td></td></tr></table></div>  | ① 开关/模式键  | ② 暂停/播放    | ③ 递增       | ④ 递减     | ⑤ 定时             | ⑥ 屏幕显示                | ⑦ 自然音推子       | ⑧ 旋钮开关          | Type-C充电口 |   | <div></div> <div></div> <div>使用注意事项<div>本产品内置可充电锂电池,可循环使用,请使用配套的充电线将产品连接到普通的直流5V适配器进行充电。<br/>Ⓢ 首次使用请先为设备充满电。<br/>Ⓢ 使用时请远离水源和热源,请勿覆盖产品,以免损坏产品并产生安全隐患。<br/>Ⓢ 此设备光源不可替换,当光源到其寿命终时,应替换整个产品。</div></div>  | <div>白噪声与蓝牙切换</div> <div>在开启音频的状态下,短按【】键,可循环切换白噪声模式/蓝牙模式。</div> <div>白噪声模式:<br/>白噪声模式下,屏幕白噪声符号[]显示。<br/>八组白噪声(雨声-鸟鸣声-海浪声-溪流声-篝火-火车行驶声-虫鸣-钟声)可独立调节各自的音量,并随意组合。</div> <div>蓝牙模式:<br/>蓝牙模式下,屏幕蓝牙符号[]快速闪烁,蓝牙自动进入搜索模式与回连模式。<br/>1. 打开手机的蓝牙设备对本产品进行搜索。<br/>2. 搜索栏出现本产品链接名:S660Pro后,请点击连接。<br/>3. 配对连接成功后,即可使用。<br/>a. 当蓝牙配对连接成功时,屏幕蓝牙符号[]变为慢闪。<br/>b. 当蓝牙连接丢失时,屏幕蓝牙符号[]符号 变为快闪。<br/>c. 当有来电时,声音将自动切换回手机。<br/>d. 当蓝牙打开超过5分钟无配对连接时,将自动关闭蓝牙(注意:此时只是关闭蓝牙,灯光功能不受此控制)。<br/>f. 长按【】键,断开连接清除当前配对。<br/>g. 回连默认回连最后一台设备。</div> | <div>整体音量设置</div> <div>在播放音频的状态下,短按【】/【】键,有16档音量可供调节(L00-L15),L00为静音档。<br/>屏幕实时显示调节音量等级。<br/>每次打开音频时,音量默认为上一次设置的音量大小。</div> <div>定时关机设置</div> <div>在开机状态下,短按【】键,可开启/关闭定时关机功能。<br/>当定时关机开启时,屏幕符号[]长亮。<br/>长按【】键,进入设置定时时长模式,屏幕符号[]闪烁。<br/>旋转【旋钮】键开关可调节定时时长,顺时针递增,逆时针递减,每转动一次变化5分钟。<br/>定时时间范围:5-180分钟。</div> <div>充电设置</div> <div>充电时,屏幕电池符号[]长亮。<br/>充满时,屏幕电池符号[]熄灭。<br/>当剩余电量过低时,显示屏电池符号[]闪烁,此时应及时给设备充电。</div> | <div>夜灯与幻彩氛围灯切换</div> <div>短按【旋钮】键:可开启/关闭灯光。<br/>长按【旋钮】键:可切换夜灯/幻彩氛围灯模式。</div> <div>夜灯模式:<br/>夜灯开启模式下,旋转【旋钮】键:向右旋转灯光变亮,向左旋转灯光变暗,有30档亮度可供调节(F01-F30)。</div> <div>幻彩氛围灯模式:<br/>幻彩氛围灯模式下,旋转【旋钮】键,可切换氛围灯颜色:<br/>流光(A1)→呼吸渐变(A2)→七彩渐变(A3)→活力橙(A4)→蓝(A5)→紫(A6)→红(A7)→黄(A8)→绿味黄(A9)→绿(A10)→蓝味绿(A11),屏幕同步显示组别。</div> |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|---|---|---|------------|------------|----------|------------------|-----------------------|---------------|-----------------|-----------|---|--|--|--|---|---|-------------|--|--|------------|-------------------|---|-------------|------------------|--|------------|---|---|-------------|-----------------|--|------------|-------------------------------------|---|-------------|-----------------|--|------------|---------------------------------|---|-------------|----------------------------|--|------------|---|---|--------------|---|--|-----------|--|---|-------------|------------------------|--|------------|---|--|---|---|---|
| ① 开关/模式键  | ② 暂停/播放   |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ③ 递增  | ④ 递减  |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ⑤ 定时  | ⑥ 屏幕显示  |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ⑦ 自然音推子   | ⑧ 旋钮开关  |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| Type-C充电口   |   |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| <div>Instructions</div> <div></div> <div><table><tr><td>① Switch/Mode key</td><td>② Start/stop</td></tr><tr><td>③ Increase</td><td>④ Decrease</td></tr><tr><td>⑤ Timing</td><td>⑥ Screen display</td></tr><tr><td>⑦ Natural tone button</td><td>⑧ Knob switch</td></tr><tr><td> Type-C charging</td><td></td></tr></table></div>   | ① Switch/Mode key   | ② Start/stop  | ③ Increase | ④ Decrease | ⑤ Timing | ⑥ Screen display | ⑦ Natural tone button | ⑧ Knob switch | Type-C charging |           | <div></div> <div>Numerical display</div> <div>White noise- Blue tooth-   Timing  Battery symbol</div> <div>Attention<div>This product has built-in rechargeable lithium battery, which can be recycled. Please use the matching charging cable to connect the product to a regular DC 5V adapter for charging.<br/>Ⓢ Please fully charge the device for the first time.<br/>Ⓢ Keep away from water and heat sources, and do not cover the product to avoid damage and potential safety risks.<br/>Ⓢ This device light source is not replaceable, when the light source reaches the end of its life, the entire product should be replaced.</div></div> | <div><table><tr><th>Button</th><th>Operation</th><th>Function</th></tr><tr><td>①</td><td>Short press</td><td>Switch between white noise mode and Bluetooth mode</td></tr><tr><td></td><td>Long press</td><td>Turn on/off audio</td></tr><tr><td>②</td><td>Short press</td><td>Music pause/play</td></tr><tr><td></td><td>Long press</td><td>Disconnect to clear the current pairing (Bluetooth mode only)</td></tr><tr><td>③</td><td>Short press</td><td>Increase volume</td></tr><tr><td></td><td>Long press</td><td>Previous Song (Bluetooth mode only)</td></tr><tr><td>④</td><td>Short press</td><td>Decrease volume</td></tr><tr><td></td><td>Long press</td><td>Next song (Bluetooth mode only)</td></tr><tr><td>⑤</td><td>Short press</td><td>Turn on/off timed shutdown</td></tr><tr><td></td><td>Long press</td><td>Enter the time setting state (turn the knob to set)</td></tr><tr><td>⑦</td><td>Push upwards</td><td>Play the corresponding natural tone and increase the volume</td></tr><tr><td></td><td>Push down</td><td>Reduce the volume until it stops playing</td></tr><tr><td>⑧</td><td>Short press</td><td>Turn on/off the lights</td></tr><tr><td></td><td>Long press</td><td>Switch warm night light/colorful atmosphere light</td></tr></table></div> | Button   | Operation  | Function  | ① | Short press | Switch between white noise mode and Bluetooth mode |  | Long press | Turn on/off audio | ② | Short press | Music pause/play |  | Long press | Disconnect to clear the current pairing (Bluetooth mode only) | ③ | Short press | Increase volume |  | Long press | Previous Song (Bluetooth mode only) | ④ | Short press | Decrease volume |  | Long press | Next song (Bluetooth mode only) | ⑤ | Short press | Turn on/off timed shutdown |  | Long press | Enter the time setting state (turn the knob to set) | ⑦ | Push upwards | Play the corresponding natural tone and increase the volume |  | Push down | Reduce the volume until it stops playing | ⑧ | Short press | Turn on/off the lights |  | Long press | Switch warm night light/colorful atmosphere light | <div>White noise and Bluetooth switching</div> <div>When the audio is on, press the 【】key to switch the white noise Mode/Bluetooth mode.</div> <div>White noise pattern:<br/>In white noise mode, the screen white noise symbol [  ] is displayed.<br/>8 groups of white noise can be adjusted independently and combined at will(Sound of raining - Birdsong - Wave sound - Stream sound - Sound of bonfire - Sound of train - Chirping bell tone ).</div> <div>Bluetooth mode:<br/>In Bluetooth mode, the Bluetooth symbol [  ] on the screen flashes quickly, and Bluetooth automatically enters the search mode and callback mode<br/>Connect your phone:<br/>1. Turn on the Bluetooth device of the mobile phone to search for this product.<br/>2. After the product link name: S660Pro appears in the search bar, please click the connection.<br/>3. After the pairing connection is successful, it can be used.</div> | <div>a. When the Bluetooth connection is successful, the Bluetooth symbol [  ] on the screen blinks slowly.<br/>b. When the Bluetooth connection is lost, the Bluetooth [  ] symbol on the screen blinks quickly.<br/>c. When there is an incoming call, the sound will be automatically switched back to the phone.<br/>d. When the Bluetooth is on for more than 5 minutes without a paired connection, the Bluetooth will be automatically turned off<br/>(Note: the Bluetooth is only turned off at this time, and the lighting function is not controlled by this).<br/>f. Hold down the 【】key to disconnect and clear the current pairing.<br/>g. Bluetooth connects to the last device by default.</div> <div>Overall volume settings</div> <div>In the state of playing audio, short press the 【】/【】key, there are 16 levels of volume for adjustment (L00-L15), L00 is silent.<br/>Adjust the volume level on the screen in real time. Each time you turn on audio, the volume defaults to the volume you set last time.</div> | <div>Timed shutdown setting</div> <div>In the startup state, press the 【】key to turn on/off the timed shutdown function.<br/>When the timed shutdown is turned on, the screen symbol [  ] is long bright.<br/>Long press and hold the 【】key to enter the setting timing duration mode, and the screen symbol [  ] flashes.<br/>Rotation [knob] key switch can adjust the timing time, clockwise increase, counterclockwise decrease, 5 minutes per rotation.<br/>Timing range: 5-180 minutes.</div> <div>Charging Settings</div> <div>When charging, the screen battery symbol [  ] is long bright.<br/>When full, the screen battery symbol [  ] goes out.<br/>When the remaining battery is too low, the battery symbol [  ] on the display blinks, and the device should be charged in time.</div> | <div>Switch between night light and atmosphere light</div> <div>Short press the [knob] key: turn on/off the light.<br/>Long press the [knob] button : switch the night light/atmosphere light mode</div> <div>Night light mode:<br/>When the nightlight is on, rotate the [knob]: rotate the light to the right to brighten, rotate the light to the left to dim, there are 30 levels of brightness to adjust (F01-F30).</div> <div>Phantom atmosphere light mode:<br/>In the atmosphere light mode, rotate the knob key to switch the color of the atmosphere light:<br/>Streamer (A1)→ Breath gradient (A2)→ Colorful gradient (A3)→ Vibrant Orange (A4)→ Blue (A5)→ Purple (A6)→ Red (A7)→ Yellow (A8)→ Green yellow (A9)→ Green (A10)→ Blue green (A11), the screen synchronizes the display group.</div> |
| ① Switch/Mode key   | ② Start/stop  |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ③ Increase  | ④ Decrease  |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ⑤ Timing  | ⑥ Screen display  |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ⑦ Natural tone button   | ⑧ Knob switch   |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| Type-C charging   |   |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| Button  | Operation   | Function  |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ①   | Short press   | Switch between white noise mode and Bluetooth mode            |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|   | Long press  | Turn on/off audio   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ②   | Short press   | Music pause/play  |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|   | Long press  | Disconnect to clear the current pairing (Bluetooth mode only) |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ③   | Short press   | Increase volume   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|   | Long press  | Previous Song (Bluetooth mode only)                           |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ④   | Short press   | Decrease volume   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|   | Long press  | Next song (Bluetooth mode only)                               |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ⑤   | Short press   | Turn on/off timed shutdown                                    |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|   | Long press  | Enter the time setting state (turn the knob to set)           |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ⑦   | Push upwards  | Play the corresponding natural tone and increase the volume   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|   | Push down   | Reduce the volume until it stops playing                      |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| ⑧   | Short press   | Turn on/off the lights  |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
|   | Long press  | Switch warm night light/colorful atmosphere light             |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |
| <div>FCC Warning Statement</div> <div>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:<br/>- Reorient or relocate the receiving antenna.<br/>- Increase the separation between the equipment and receiver.</div> | <div>- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.<br/>- Consult the dealer or an experienced radio/TV technician for help.<br/>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:<br/>(1) This device may not cause harmful interference, and<br/>(2) this device must accept any interference received, including interference that may cause undesired operation.<br/>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</div> |   |            |            |          |                  |                       |               |                 |           |   |  |  |  |   |   |             |  |  |            |                   |   |             |                  |  |            |   |   |             |                 |  |            |                                     |   |             |                 |  |            |                                 |   |             |                            |  |            |   |   |              |   |  |           |  |   |             |                        |  |            |   |  |   |   |   |