



User Manual

In order to better use the product performance, please read the user manual carefully and charge the speaker kits fully before the first use.

Speaker Diagram	Speaker Operating Instruction	Troubleshooting	Specification																					
<p><b>Speaker Diagram</b></p> <p><b>Top View:</b></p> <ul style="list-style-type: none"><li>① Long Press: Power on/off</li><li>② Short Press: Light Switch</li><li>③ Short Press: Play/Pause</li><li>④ Long Press: Prev Song</li><li>Short Press: Vol-</li><li>⑤ Long Press: Remove Original Voice</li><li>Short Press: TF card /Bluetooth/AUX Mode Switch</li><li>⑥ DC 5V Charging Port</li><li>⑦ AUX</li><li>⑧ TF Card Slot</li></ul> <p><b>Bottom View:</b></p> <ul style="list-style-type: none"><li>① Long Press: Power on/off</li><li>② Short Press: Light Switch</li><li>③ Short Press: Play/Pause</li><li>④ Long Press: Next Song</li><li>Short Press: Vol+</li><li>⑤ Long Press: Remove Original Voice</li><li>Short Press: TF card /Bluetooth/AUX Mode Switch</li><li>⑥ DC 5V Charging Port</li><li>⑦ AUX</li><li>⑧ TF Card Slot</li></ul>	<p><b>Speaker Operating Instruction</b></p> <p><b>Mobile Phone Connecting via Bluetooth</b></p> <ol style="list-style-type: none"><li>1. Long press the power button for 3 seconds to turn on the speaker, and Bluetooth indicator will keep flashing.</li><li>2. Turn on the Bluetooth setting on the phone, choose the Bluetooth named "VS-6633" for pairing, You will hear a quick sound after connecting successfully</li><li>3. Now, you can play the music from the music player or Karaoke APPs on your phone.</li></ol> <p><b>Note:</b> The mic can't work with 2 bluetooth devices at the time. If you would like to connect a second device via bluetooth, please delete the first one from your mobile phone.</p> <p><b>Charging Description</b></p> <ol style="list-style-type: none"><li>1. When the battery is out of power, the machine will be off automatically.</li><li>2. Please use the original charging cable. When charging, the indicator turns red.</li><li>3. The charging time is about 4-5 hours. After fully charged, the indicator will be off automatically.</li><li>4. The working time is about 4-5 hours under normal operation.</li></ol> <p><b>FCC Statement</b> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Increase the separation between the equipment and receiver. —Consult the dealer or an experienced radio/TV technician for help.</p> <p><b>Caution</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p><b>FCC Radiation Exposure Statement</b> The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>	<table border="1"><thead><tr><th>Problem</th><th>Cause</th><th>Solution</th></tr></thead><tbody><tr><td>No sound from the speaker</td><td>The volume is too low</td><td>Turn up the volume of both the device and the speaker</td></tr><tr><td>Speaker doesn't turn on</td><td>Lower power</td><td>Charge the speaker</td></tr><tr><td>Fail to connect Bluetooth</td><td>Has connected other device</td><td>Delete it from Bluetooth</td></tr><tr><td>Sound distortion</td><td>Volume is too high or the power is too low</td><td>Turn down the volume of your device or charge the speaker</td></tr><tr><td>Not playing music when plugged into a TF card</td><td>The format is wrong or loose contact</td><td>Change the music format, or unplug and plug into the TF card again</td></tr><tr><td>Speaker not charging</td><td>Something wrong with the charging cable or loose contact</td><td>Unplug the charging cable and plug it into again. Or try a different charging cable</td></tr></tbody></table>	Problem	Cause	Solution	No sound from the speaker	The volume is too low	Turn up the volume of both the device and the speaker	Speaker doesn't turn on	Lower power	Charge the speaker	Fail to connect Bluetooth	Has connected other device	Delete it from Bluetooth	Sound distortion	Volume is too high or the power is too low	Turn down the volume of your device or charge the speaker	Not playing music when plugged into a TF card	The format is wrong or loose contact	Change the music format, or unplug and plug into the TF card again	Speaker not charging	Something wrong with the charging cable or loose contact	Unplug the charging cable and plug it into again. Or try a different charging cable	<p><b>Model No:</b> P 6 <b>Mic Connection:</b> Wireless connection <b>Mic:</b> HiFi Pickup <b>Speaker:</b> 5W*2 <b>Frequency Response Range:</b> 50Hz- 20KHz Distortion: &lt;=3% <b>Maximum Sound Pressure Level:</b> ≥ 90dB Bluetooth Transmission Distance: 10M <b>Mic Connection Distance:</b> 10M <b>Input Charging Voltage:</b> 5V <b>Battery Specification:</b> 3.7V 3000mAh battery Working Time: 4-5H <b>Charging Time:</b> 4-5H <b>Working Temperature:</b> -10°C-45°C</p> <p><b>Warning:</b></p> <ol style="list-style-type: none"><li>1. If your machine is emitting smoke or experiencing any other abnormal behavior, please contact our customer service for assistance.</li><li>2. If the machine has been rained on or exposed to moisture, please place it in a well-ventilated area to dry.</li><li>3. Please do not use high temperatures to bake the machine, as this can cause damage or lead to the malfunction of internal components.</li><li>4. This product should not be exposed to conditions of excessive heat, such as direct sunlight or fire.</li><li>5. Please do not throw away the machine to prevent it from dropping and getting damaged.</li><li>6. When using a power adapter for power, the power adapter should meets CCC certification and standard requirements.</li></ol> <p><b>Made in China</b></p> <p><b>CE</b> <b>FC</b> <b>ROHS</b> </p>
Problem	Cause	Solution																						
No sound from the speaker	The volume is too low	Turn up the volume of both the device and the speaker																						
Speaker doesn't turn on	Lower power	Charge the speaker																						
Fail to connect Bluetooth	Has connected other device	Delete it from Bluetooth																						
Sound distortion	Volume is too high or the power is too low	Turn down the volume of your device or charge the speaker																						
Not playing music when plugged into a TF card	The format is wrong or loose contact	Change the music format, or unplug and plug into the TF card again																						
Speaker not charging	Something wrong with the charging cable or loose contact	Unplug the charging cable and plug it into again. Or try a different charging cable																						