


K7 Series Smart Lock

Main Parts and Diagram

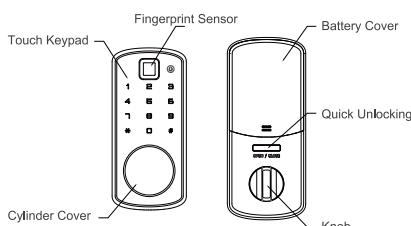


Thanks for choosing our K7 smart lock.
Please check the user manual carefully before operation and installation.
If you disassemble, update or repair the lock by yourself rather than under our instructions, all losses would be borne on your sides.

Packing

| NO | Model Type | Quantity | Note |
|----|---------------|----------|--------------|
| 1 | Front Plate | 1 | |
| 2 | Back Plate | 1 | |
| 3 | Mortise lock | 1 | |
| 4 | Battery cover | 1 | |
| 5 | Accessories | 1 | |
| 6 | Battery | 2 | 2pcs / group |

6. Combine the lines to the plug on the back plate, then install the back plate on the back pad. Please fasten the extra lines to the back pad rather than stuff the lines to the holes.

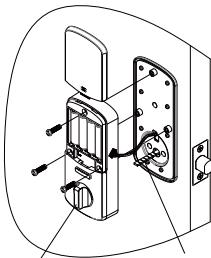


Please keep the knob vertical as the diagram show when install
Adjust the length of the cylinder trail based on door thickness. If too long, cut it with tongs

7. After installation, please test it with battery

Test: When insert the battery, please touch the screen to activate. If do not work, please check:
1. Battery condition
(A: Poor battery B: "+" "-" are inserted correctly C: The battery is too loose or with deviation.)
2. Lines condition
(A: The line is not inserted rightly B: The plugs are damaged)


Fingerprint Gathering Way

 Right Fingerprint Registration



Please register with the finger print center part


Wrong Operation

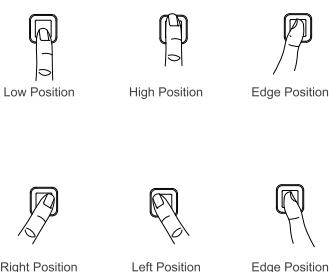


Installation

Installation Diagram

1. Prepare one cross point screwdriver before installation

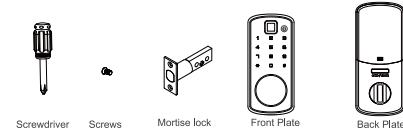

2. Slide the battery cover and unscrew the 3pcs screws, then take off the back plate and pad. Finally, adjust the direction switch part to right position based on the door's direction. (Right to R, Left to L)

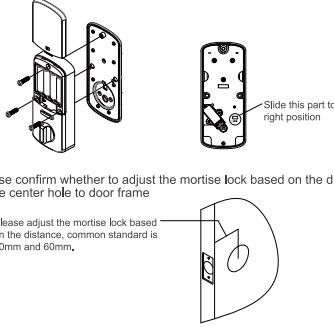

3. Please confirm whether to adjust the mortise lock based on the distance from the center hole to door frame

Please adjust the mortise lock based on the distance, common standard is 70mm and 60mm.

The default backset of the mortise lock is 60mm. If need to change, please follow the below instruction:



(1) Hold the rear part of mortise lock and rotate the head clockwise until the clip come out totally.



(2) Pull the head of mortise lock with a distance




(3) Rotate the head counter-clockwise until the clip get in totally




(4) Finally, the backset of the mortise lock is adjusted from 60mm to 70mm,

4. When you install the mortise lock, please keep the latch retracted for left to outside or right to inside direction. For the right to outside or left to inside direction please adjust the latch release with screwdriver.

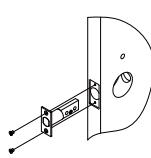


5. Install the front plate and back plate as the diagram, the cylinder trail of the front plate need be horizontal.

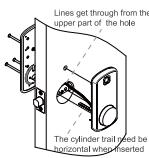

This diagram is with right to outside direction while the latch is released

Emergency Power and System Resetting

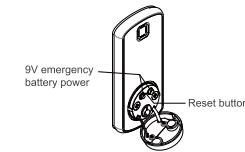

(1)If the battery is dead, you can disassemble the cylinder cover and charge it by one 9V emergency battery
(2)If the system crashed, you can insert one pin to the reset button to reset the system
(3)If the electronic parts do not work, you can open the door by the mechanical key.


Restore Factory Mode Setting




Factory mode setting button

If you forget the admin password, you can remove the battery cover and insert one pin to the factory mode setting button. Keep pressing it for 3s until one "DING" sound, the system would be reset and all data would be cleared.

Unlocking Diagram

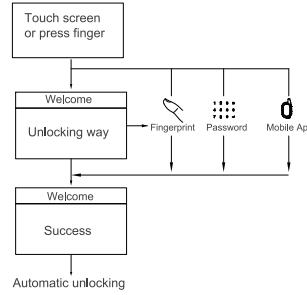

Keyboard Function

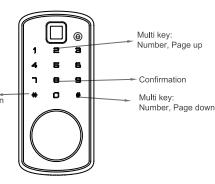

Locking and Unlocking Way

Locking: Outdoor — Press the "⊗" button to lock

Automatic — After unlocking, it would lock in 30s automatically

Indoor — Press the "⊗" button to lock

Turn the knob

Unlocking: Outdoor — Fingerprint, Password, Bluetooth Mobile APP, Mechanical key

Indoor — Press the "⊗" button to lock

Turn the knob

Mobile APP

Press this key to lock

Press this key to lock or unlock


Remove the knob cover, insert the key to unlock

Turn this knob to lock or unlock

Fingerprint, Password, Mobile App

User Manual

Icon Detail:

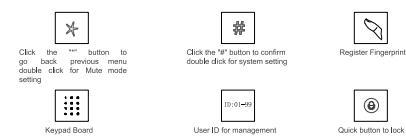

Demo Mode

After installation, the system is at demo mode, any fingerprint or password can open the door. You can try the system under the voice prompt

