






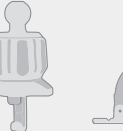
>
2E747

EN

Thanks for choosing Lisen! To bring you a fantastic experience, please read the manual before using.

ACCESSORY LIST


Wireless charger body Magnetic lead sheet


Hurricane outlet chuck Adhesive base

SPECIFICATIONS

NAME
CAR MAGNETIC WIRELESS CHARGING BRACKET

MODEL
2E747

MATERIAL
ABS/PC/ALUMINIUM ALLOY/STAINLESS STEEL

INPUT
5V=2A 9V=2A 12V=1.5A

OUTPUT
5W/7.5W/10W/15W

SIZE
60MMX60MMX80MM


WEIGHT
205G

COMPATIBLE DEVICES
HEADPHONES: AIRPODS PRO (WITH MAGSAFE BATTERY COMPARTMENT) / AIRPODS PRO 2ND GENERATION
IPHONE 12/13/14 SERIES NAKED/WITH MAGSAFE CASE/THIRD PARTY CASE WITHOUT MAGSAFE CASE REQUIRES ADDITIONAL MAGNETIZER (SEE TUTORIAL BELOW)
WITH WIRELESS CHARGER DOES NOT SUPPORT MAGSAFE PHONES, YOU NEED TO USE A MAGNETIZER (SEE TUTORIAL BELOW)
WITHOUT WIRELESS CHARGER PHONE, NEED TO USE MAGNETIZER (ONLY CAR MOUNT FUNCTION, NO WIRELESS CHARGER FUNCTION)


Suggestions for choosing and using the air outlet hook clip and sticky base.

INSTALLATION STEPS


1.Loosen the fixing nut in a counter-clockwise direction.

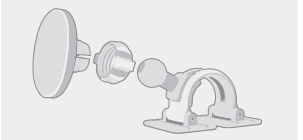

 
3. Open the wet towel and wipe clean the position to be pasted to prevent dust or foreign matter in the pasting position from affecting the effect of adhesive pasting.



 4.After wiping the wet towel, use a dry towel to wipe clean the area where the wet towel has been wiped.




he wiped position and press hard to make it flat, and it can be used normally after standing still for 24 hours; The object touches the adhesive so as not to affect the effect of the adhesive)

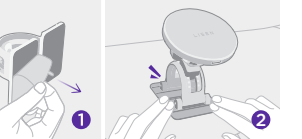


INSTALLATION STEPS

1.Loosen the fixing nut in a counter-clockwise direction.

 
2.Tighten the fixing nut.




3.Turn the hook clip adjustment knob anti-clockwise to adjust the hook length to the maximum.




fit your vent.

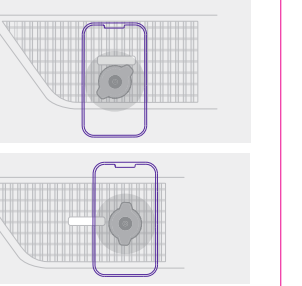

 
(2)If the size of your vent is small and the support ring is inconvenient to fit, the support ring may not be used.




tlet of the car and turn the hook clip adjustment knob to lock the blade.

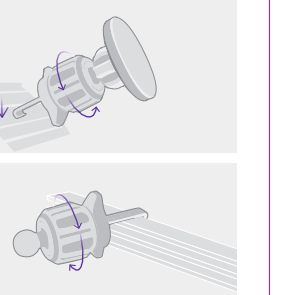


5.When taking off, loosen the hook clip adjustment knob and detach the bracket from the blade. (The blade should be kept horizontal so that the blade and the surface of the air outlet are perpendicular to each other).



6.when adjusting the angle of use, slightly twist and loosen the nut to adjust to a comfortable angle before twisting the nut can.

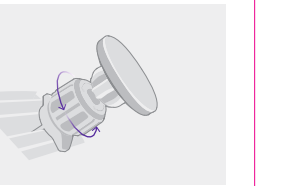

Tips: uneven surface of mobile phone cases, liquid silicone cases, oil sprayed cases, fabric and leather cases are not suitable for this magnetizer.




If your case does not have the magsafe function, please follow the steps below to use the magnetic pad to achieve the magnetic suction function.

1. Open the paper towel package, first wipe the back of the phone/phone case with a wet paper towel, and then dry it with a dry paper towel;

2.If the mobile phone (case) is made of glass or you do not want to stick the magnetic sheet directly on


the mobile phone (case), you can use the PE film first, tear the PE film and stick it on the center of the back of the mobile phone/mobile phone case;

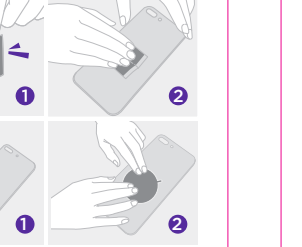

3.Place the magnet locator on the back of the phone/case, aligning the edges of the phone and making sure the top and bottom/left and right scales are the same; remove the protective film from the magnet

and stick it to the centre of the magnet locator.

4.Tear off the protective film on the back of the magnetic ring. Put it in the hollow position in the middle of the positioning and press it gently with your hands. After confirming that the position of the magnetic ring is in the middle of the positioning film, remove the positioning film; press for about 5 seconds and place it for 6 used as a child.

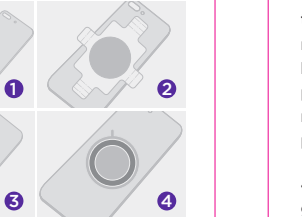

NOTE

1.About using non-standard car charger: please use QC3.0 or PD18W or above.

2.Metal accessories (iron pieces, finger rings) or credit cards can interfere with charging. Cases containing metal, such as Pitaka, Evutec and Spigen QNMP, will trigger foreign object detection and interrupt charging.

3.Using the phone for GPS navigation or listening to music while charging can significantly affect the charging speed. When using GPS applications, the power consumption may be higher than the charging speed.

4.It is normal for the wireless charger to heat up slightly during use. If

you experience severe heating, please suspend use and contact our after-sales email.

PRODUCT WARNINGS

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation .If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

A distance of 15 cm shall be maintained between the antenna and users, and the transmitter may not be co-located with any other transmitter or antenna.