

每面47.2*85mm


展开尺寸:425*170mm

105g哑粉纸


正反面 双色印刷 K 100 C 100

9页8折风琴折


Beam Mobile

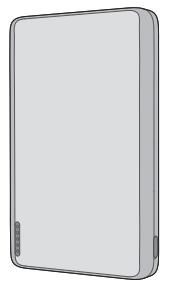

ACCESSORY LIST

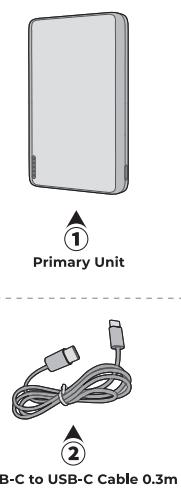


PRODUCT OVERVIEW

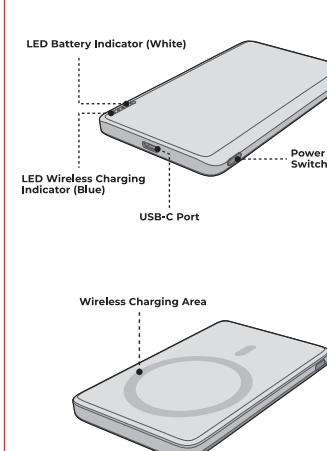

CHARGING INSTRUCTION

POWER SWITCH GUIDE


To Activate: Press 1 time
To Deactivate: Press 2 times

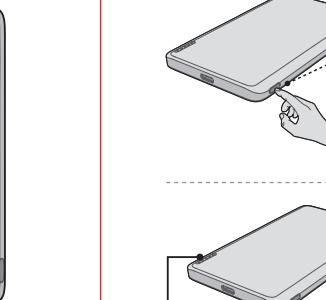

Low Power Charge Mode:
While the power bank is on, press and hold the power switch for 2 seconds to activate this mode. The LED indicators will sequentially light up in a marquee pattern. The device will automatically stop charging after 2 hours.

To return to Normal Charge Mode:
Press and hold the power switch for 2 seconds. The LED indicators will stay lit, signaling that Normal Charge Mode is active.

LED INDICATION GUIDE

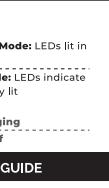


WIRELESS CHARGING GUIDE


When the device is powered on, simply place your phone on the wireless charging area. Charging will begin automatically.




CHARGE THROUGH CABLE


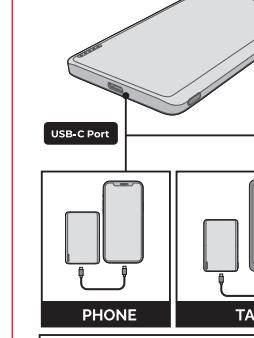


POWERBANK RECHARGE

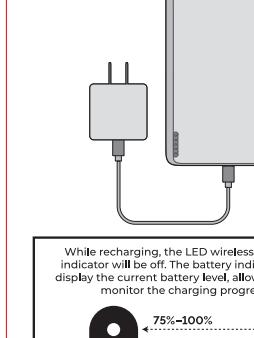

LED INDICATION GUIDE

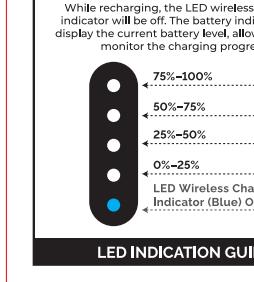

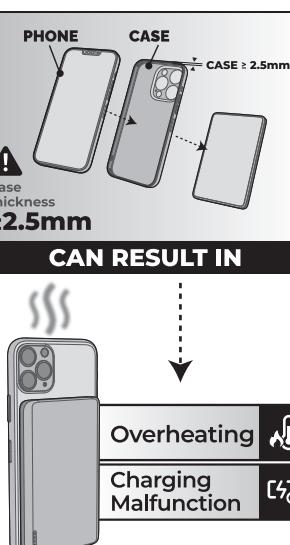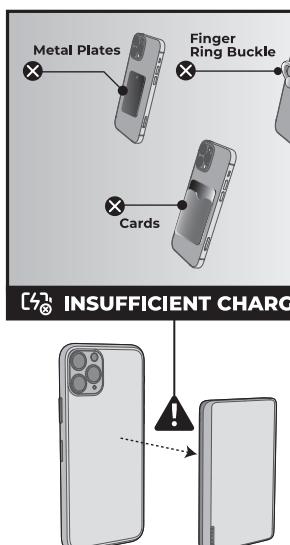PRODUCT PARAMETER	PRACTICES TO AVOID	PRACTICES TO AVOID	FCC Warning	NOTES
NAME OF PRODUCT MAGNETIC WIRELESS CHARGING POWER BANK	BATTERY TYPE LITHIUM POLYMER CELL	PRACTICES TO AVOID 	FCC Warning <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.</p> <p>INSUFFICIENT CHARGING</p> 	<p>01- Please use the original or certified charging cables.</p> <p>02- Avoid using the product in environments with extremely high or low temperatures.</p> <p>03- Avoid contact with liquids.</p> <p>04- Prevent the product from dropping, being squeezed, or impacted.</p> <p>05- Do not throw the product into fire.</p> <p>06- Keep the product out of reach of children.</p> <p>07- Cease using the power bank if it becomes submerged in water.</p> <p>08- Stop using the power bank if it emits an odor, becomes deformed, or overheats.</p> <p>09- Do not expose the product to fire or temperatures above 100°C (212°F) as it may cause explosions.</p> <p>10- Do not damage or puncture the power bank's casing. Damage to the casing can lead to overheating, fire, or explosion.</p> <p>11- Do not disassemble this product. For repairs or maintenance, please take it to qualified service personnel. Incorrect reassembly could pose a risk of fire or personal injury.</p> <p>12- Unplug the charger after the power bank is fully charged to prevent battery damage. Turn off the power bank when not in use for extended periods.</p> <p>13- Exercise close supervision when using the product near children to reduce the risk of injury.</p> <p>14- Do not use magnetic suction wireless charging if there are metal plates, finger rings, or credit cards on the back of the phone or phone case.</p> <p>15- The product may heat up noticeably when watching videos or playing music on your phone during wireless charging, which can also significantly slow down the charging process.</p> <p>16- Minor heating is normal during wireless charging. Contact our customer service via email if severe heating occurs.</p>