

Warranty Card

Applicable for

- Since buying date, the user enjoys one year free repair services under normal use. After one year, will be charged according to each component part cost.
- In case change component part, will be charged according to our company's component part cost list.
- The following situations without free repair services in warranty period
 - 1) Damage caused by natural earthquake, rat disaster, and unnormal use.
 - 2) Damage caused in transportation, fall, and unproper storage.
 - 3) Consumable component, such as spare parts, batteries, light bulbs, etc.
 - 4) Warranty information records is not complete, no purchase date, no buying shop seal, etc.
 - 5) Featured using environment, such as humidity, sulfur area, high salty and on board, etc, easy corrosion area.
 - 6) Using not according to the instructions.
 - 7) Special offer.
- When return to factory for repair, the user should make sure the product packed properly to avoid any damage during transportation.
- Factory not responsible for the damages caused by the users themselves unproper disassembly.

Thank you for choosing the I80A white noise machine. To make it easy for you to experience the product, we are provide the detailed instructions. You can know the details of the product introduction, usage, etc. Please read the manual carefully before using this machine. If there are any error of typographical or translation, Thanks for your understand.

Important Safeguards:

To make ensure the user use the product correctly, and the product good working, basic precaution should always be followed, including the followings:
-Do not hit the item seriously.
-Do not touch chemicals such as benzene and thinner.
-Do not disassemble, repair or modify by yourself.
-Dispose of used packaging and used electronic products separately.

Technical Parameters:

- Output Power: 3W+3W
- Power Input: 5V / 2A
- antenna frequency : 2.402~ 2.480Ghz
- AC Power Adapter and Type-C Cable 1.5 meter
- Speaker Parameters: $\Phi 40MM$ $4\Omega 5W \times 2$

Important
Thank you for purchasing our products.
To guarantee your rights, please fill in this form properly. Thank you

Name
Address
Telephone
Invoice number
Purchase date
Item number
Dealers

! Note: this field requires the dealer's seal!

! Warning: please keep this warranty paper for repair presentation.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

I80

White Noise Wireless Speaker

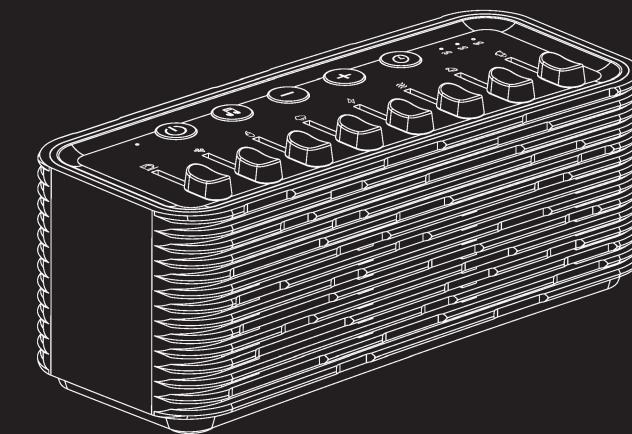

USER MANUAL

① Timer Button:

In the natural sound or Bluetooth mode, short press the timing key to select the 30, 60 and 90 minute timing function, and the sound will slowly decrease in the next 10 minutes until the timing time reaches the point.

3.) NATURAL SOUNDS

② Coffee:

Push the volume slider up to the loudest, and push the volume slider down to close the coffee sound.

③ Night Wind

Push the volume slider up to the loudest, and push the volume slider down to close the night wind sound.

④ Fire:

Push the volume slider up to the loudest, and push the volume slider down to close the fire sound.

⑤ Rain:

Push the volume slider up to the loudest, and push the volume slider down to close the rain sound.

⑥ Thunder:

Push the volume slider up to the loudest, and push the volume slider down to close the thunder sound.

⑦ Waves:

Push the volume slider up to the loudest, and push the volume slider down to close the waves sound.


⑧ Bird:

Push the volume slider up to the loudest, and push the volume slider down to close the bird sound.

Function:


- Wireless Speaker
- 8 Unique Natural Sounds, DIY Support
- Earphone output: 3.5mm

Operation Instructions

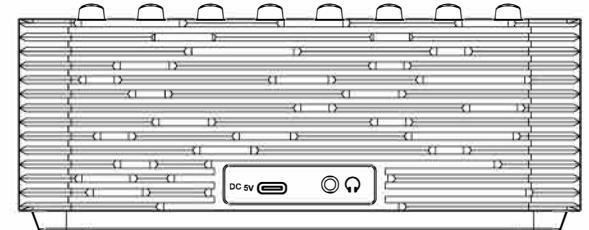

1) 8 Unique Natural Sounds Function

Plug in the type-c 5V/2A power adapter at the DC 5V back of the product, the product enters the standby state after power on. Long press the **Power ON / OFF** button to enter the natural sounds function (Indicator light always on). Long press the **Mode Switch** button to enter the 8 Natural Sounds function, 8 different natural sounds can be DIY arbitrarily, through the volume slider to combine different sounds. Though the **Volume Up** and **Volume Down** button to adjust the total volume.

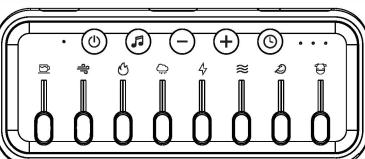

2) Button Function

① Power ON / OFF Button:

Long press to Power ON/OFF the function. Short press is for MUTE function (Indicator light is flashing).

② Mode Switch Button

Long press to switch between natural sounds and wireless speaker mode. Short touch to choose natural sounds in natural sound mode; but in wireless speaker mode, short touch is for play and pause function.

③ Volume Down Button:

In natural sound mode, short touch for Vol down, no function for long touch. In wireless speaker mode, short touch for Vol down and long touch for previous track.

④ Volume Up Button:

In natural sound mode, short touch for Vol up (it will be warning at full volume), no function for long touch. In wireless speaker mode, short touch for Vol up (it will be warning at full volume) and long touch for next track.