

80*80mm
双面印刷

Linkind

Wi-Fi CCT Smart Filament LED Bulb Operation Manual

Scan the QR
code to watch the
How-To videos



Troubleshooting

1. Cannot connect the bulb to AiDot App.
 - Check whether the bulb is powered on.
 - Check whether the Wi-Fi of your smartphone is enabled, Please make sure Wi-Fi connected to your smartphone is 2.4GHz (5GHz Wi-Fi is not supported).
 - Please check whether Bluetooth and GPS are turned on.
 - Make sure your smartphone is close to the bulb in the first configuring network.
 - Check if you have entered the correct Wi-Fi password during Wi-Fi setup. Make sure the distance between the bulb and router is less than 50ft.
 - Check whether the home network is stable. If not stable, let the blub connect to another phone's hotspot.
2. Can I use group control with voice assistance?
 - Please make sure your bulb is connected to Wi-Fi before using voice assistance.
 - Please set voice group control in Alexa/Google Assistant/Smarththing App.
3. What is the maximum number of bulbs I can connect via Bluetooth?
 - Up to 6 bulbs can be connected usual, but the specific quantities is based on the brand of your smartphone.
4. How many bulbs can be connected to one phone?
 - Up to 50 bulbs can be connected to one phone if the network is normal.

Frequently Asked Questions

1. Can Linkind Smart Bulbs connect the wall dimmers?

Our bulbs cannot be found directly by Alexa, or through Alexa's "discover devices" function. You need to connect the bulbs to the AiDot app first, and then connect the AiDot to the Alexa app so that the bulbs added to the AiDot can be synced to the Alexa app.

 - After you have connected your device to AiDot App, go to the AiDot > Integration > choose Amazon Alexa.
2. How to Connect Alexa, Google Home or SmartThings?

Function Introduction



APP
control



Voice
control



Dimming &
Tunable




Timing &
countdown

- 1 -

Installation Instructions

1. After installing the bulb, power on the bulb.
2. The bulb will gradually blink twice under the warm white light, and the bulb will enter the state of distribution network.
3. To connect bulb to the Internet, download the Aidot APP and follow the APP guidelines.

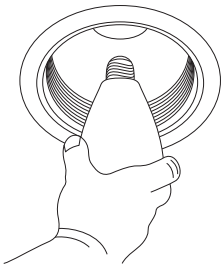

- 2 -

Quick Start Guide

1. Scan the QR code below, or search for "AiDot" in App Store or Google Play.



Google, Google Home and Google Play are trademarks of Google LLC.

2. Create an account and sign in. Tap '+' to add the "Wi-Fi Light Bulb".



3. Follow the instructions on the App.
(Note: Please turn on Bluetooth and location.)

- 3 -

Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

- 6 -

Cautions

To avoid personal injury and/or possible product damage, the following cautions must be followed:

1. Risk of electrical shock. Disconnect power at fuse or circuit breaker before installing or servicing.
2. To prevent early lamp failure, lamp should only be installed in operating environments ranging between: -20 °C and +40 °C (-4°F and +104°F).
3. Suitable for damp locations.
4. Not for use with dimmers.
5. Lamp dims via wireless control and will not operate with a dimmer switch.
6. Not for use in totally enclosed luminaires.
7. Not for use in emergency light fixtures or exit signs.
8. Ensure fixture can support the added weight of the lamp/bulb.

Contact Us

SPRING SUNSHINE TECHNOLOGY CO., LIMITED
FLAT/RM 01-04, 24/F, FU FAI COMMERCIAL CENTRE,
27 HILLIER STREET, SHEUNG WAN, HK
☎ Phone: 1-877-770-5727 (Mon.-Fri. 9 to 5 PST)
✉ Email: service@linkind.com
🌐 http://www.linkind.com
Made in China

Manufacturer: Leedarsen IoT Technology Inc.
Address: No. J511, 2nd Fanghu North Rd, Huli District, Xiamen, China
📱 @linkind_lights
📧 @linkindofficial
📷 @linkindofficial

- 7 -

- 4 -

- 5 -

v1.1