

Touch Pico projector

【Instruction manual】

CATALOG

Quick instructions

Part name

Accessories

Notice

Instructions for use

Usage problem

Quick instructions


Important:

Please connect to the network before use.

1, three modes

① Desktop mode:


Use your finger for desktop to

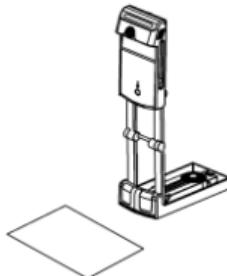

② Wall mode:

Use the stylus to touch:

③ Roof mode

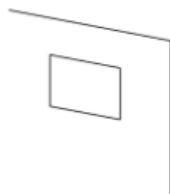

Note: 1 The touch position is not accurate. Please click the remote control auto calibration button and wait for about 10 seconds.


The screen can be automatically corrected successfully;

2 Touch failure, please use the remote control to


[App Center] - [Touch Adjustment],

Then click the remote auto calibration button.

Name of each part

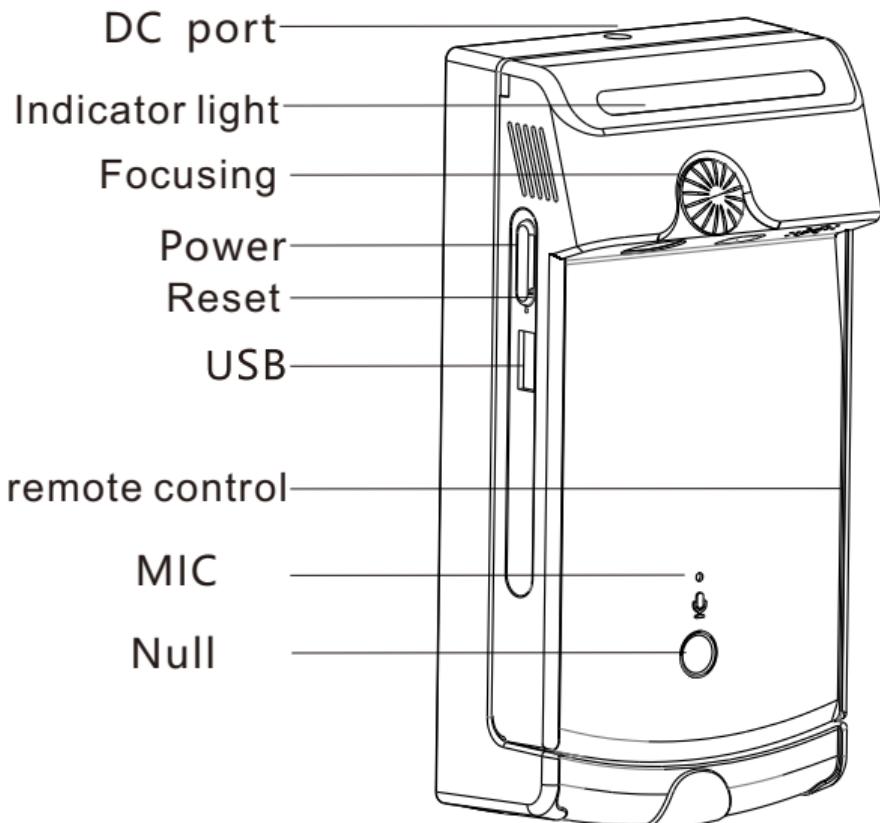


Accessories

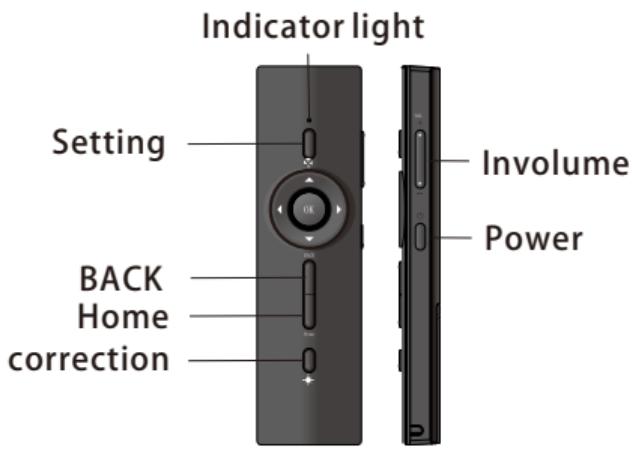

Remove the battery protection film before use

remote control

Touch Pen

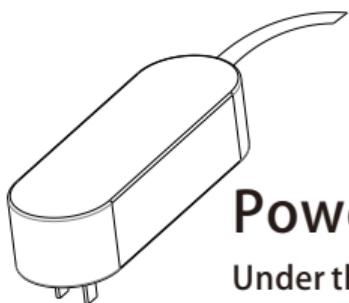

Power Adapter

Under the lining of the box



Attention



Prohibited



Do not tamper with

Do not disassemble or repair other than the repair technician.

Note: Remodeling this product may cause fire, electric shock, Injured or malfunctioning.



The power plug is broken and the plug is inserted into socket. Do not use when loose.

Note: It may cause electric shock, short circuit, or fire.



Do not plug or unplug the power supply when your hands are wet.



Do not look directly at the light source with your eyes.




Do not expose to direct sunlight or specular reflections of sunlight. If used, it will cause the touch to fail.



Please do not brush the machine, it may cause the product function to be invalid or It is damaged or damaged.

【Desktop mode】

1 adjust the bracket to make the screen to the desktop;
2 If the picture is not clear, please rotate the focus knob;

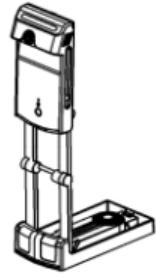

3 can perform finger touch operation;
4 If the touch position is not accurate, please click the remote control auto correction button and wait for the appointment.
10 seconds, the automatic correction can be successful;

Note: 1 Use finger touch to ensure that the product is at the same level as the projected image;

2 screens and light film areas are best not to have debris, which will affect your touch experience;

3 When the remote control is operating, please face the remote control reception on the right side of the product.

【gesture】 :



touch



slide



enlarge



Home




Within 1 cm outside
the screen
adjust the volume



Within 1 cm of the outside of
the screen **Back**

【Wall mode】

- 1 cast the picture on the wall;
- 2 If the picture is not clear, please rotate the focus knob;
- 3 using the stylus to touch;
- 4 The touch position is not accurate. Please click the remote control auto calibration button and wait for about 10 seconds. The automatic calibration is successful.

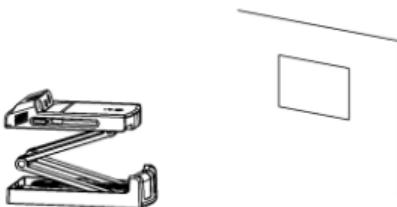

- 1 When auto calibration, please do not stand between the screen and the product;
- 2 When the automatic correction is performed, the screen size is about 40 inch;
- 3 Do not perform automatic correction in direct sunlight.

【Off】

Press and hold the power button for 3 seconds to turn off; or press the power button for 3 seconds to directly shut down..

【Charging】

It can be used with charging, charging time is about 3 hours, and it is used for about 2 hours after being filled.

The peak power is about 70 minutes.

Tips for using questions

1, boot does not start?

May be out of power, please use the dedicated power adapter to charge after use, or Used while charging;

2. Does speech recognition not respond?

1 Please connect to the network and click the voice button;
2 turn up the volume;

4. Is the machine slowing down?

There may be too many programs installed, please delete the programs that are not used in time;

Press and hold the power button for 3 seconds to shut down, then turn it off and then turn it back on;

5, the stylus is invalid?

Please replace the battery.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.