


Wireless Earbuds

User's Guide

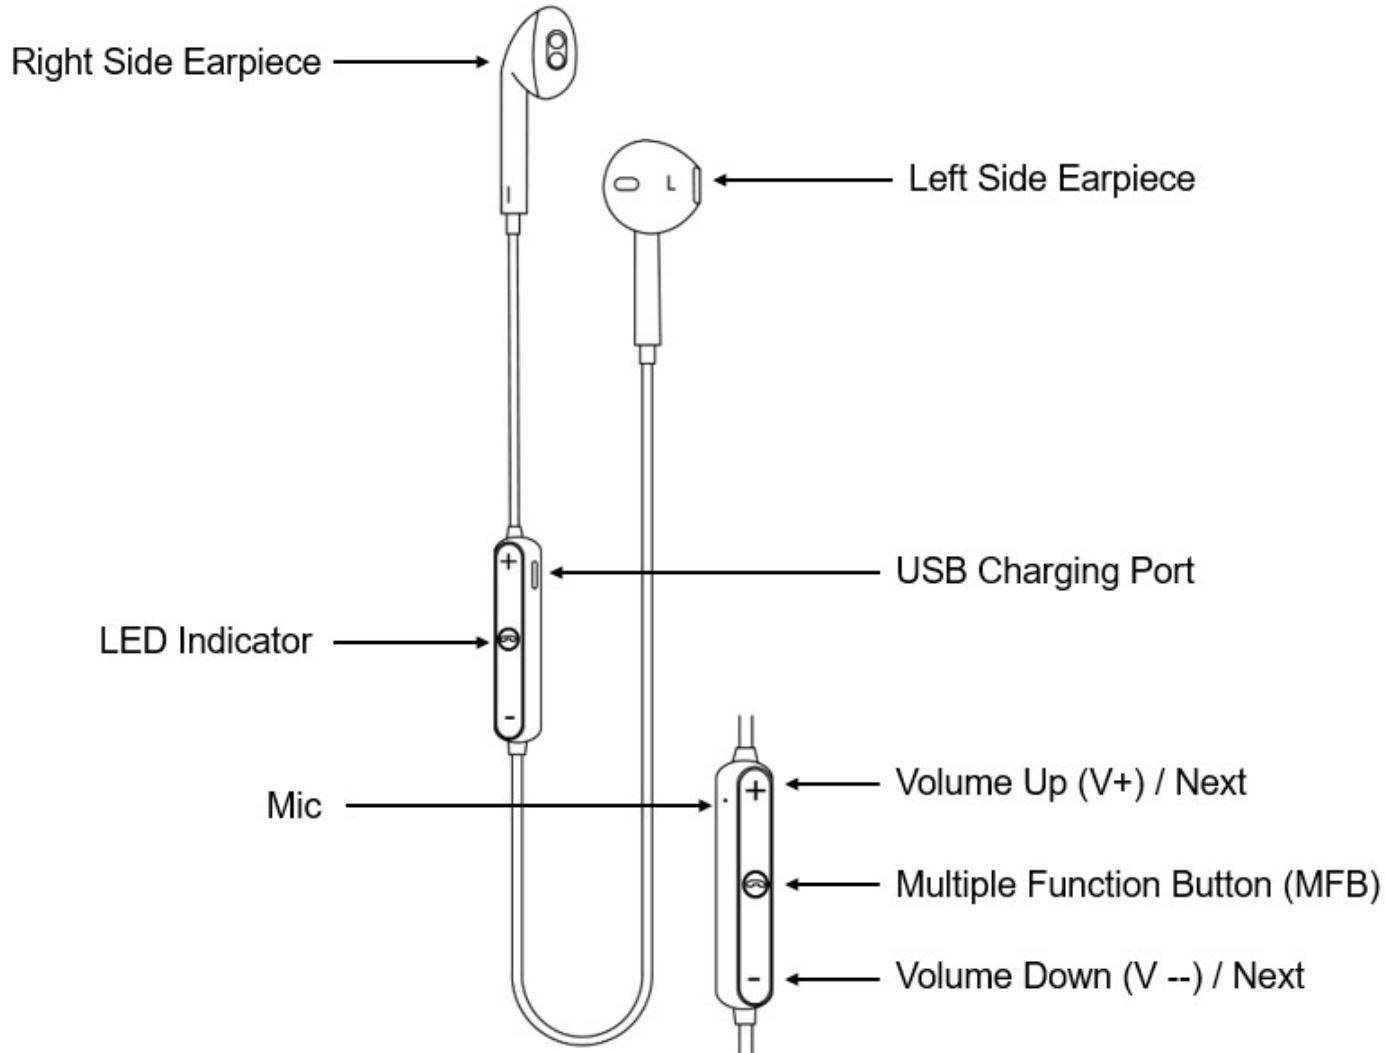

Includes:

- Wireless earbuds
- Charging cable
- User's Guide

IMPORTANT: Read the safety information in this guide before using.

Instructions

Charging the earbuds:

When using the earbuds for the first time, please follow steps below to fully charge the earbuds before use.

- 1) Make sure the earbuds are turned off.
- 2) Use the included charging cable only.

- 3) Plug the small end of the charging cable into the earbuds USB Charging Port.
- 4) Plug the other end of the charging cable into a USB wall charger or computer that is powered on.
- 5) When charging, the LED Indicator will show a red light.
- 6) When the earbuds are fully charged, the LED indicator will show a blue light.
- 7) After the earbuds are fully charged, remove the charging cable from the USB wall charger or computer, then remove the earbuds from the charging cable.
- 8) Make sure the earbuds are fully charged before use. Repeated undercharging of the earbuds will cause degradation of the battery performance.
- 9) Charge the earbuds upon hearing the “Battery Low” voice reminder.

Note: It takes approximately 1.5–2 hours to fully recharge the earbuds. Once the LED Indicator shows a blue light, remove the earbud from the charging cable to avoid overcharging. DO NOT overcharge the earbuds; it may cause overheating. Keep your earbuds and charging cable in a well-ventilated area when in use or charging.

Pairing the earbuds with your cell phone:

- 1) Make sure the earbuds and your cell phone are next to each other.
- 2) Turn on the earbuds by pressing and holding the Multiple Function Button (MFB) for about 3 seconds, until the blue light flashes with voice prompts “Power On”.
- 3) Release the MFB, then the earbuds will enter into pairing mode automatically, with its blue & red lights flashing alternately.
- 4) Go to your cell phone’s Bluetooth section and turn on the Bluetooth function.
- 5) The earbuds pairing name is “Bluetooth Music”, search and click on “Bluetooth Music” from your Bluetooth section to connect.
- 6) After the earbuds connect with your cell phone successfully, a voice will prompt “Connected”, and the LED Indicator will flash a blue light intermittently.
- 7) If the Bluetooth function is turned on to the last paired device, the earbuds will automatically connect with voice prompt “Connected”.
- 8) If your earbuds haven’t been used for a long time, they may need to connect manually again. If this is the case, follow steps 1–5.

Note:

- Due to different phone compatibility, some cell phones may need to input “0000” to authorize the pairing.
- When the earbuds are on, but not paired with your cell phone, the earbud will exit the pairing mode and will automatically turn off in 10 minutes.

How to Use:

Power On	If the earbuds are off, press and hold MFB for 3–5 seconds to turn on. You will see a blue light flash and hear the “Power On” voice prompt.
Power Off	Press and hold MFB for 3–5 seconds to turn off the earbuds. You will see a red light flash and hear the “Power Off” voice prompt.
Pairing Mode	After turning on the earbuds, they will automatically enter into pairing mode. To pair the earbuds with your cell phone, please refer to “Pairing the earbuds with your cell phone” section above.

Play / Pause	To play videos or music from your cell phone, single click on MFB once to play. Single click on MFB again to pause the video or music.
Volume up / down	Volume up: Press and hold "+" until your desired volume level is reached. Volume down: Press and hold "--" until your desired volume level is reached.
Go to next / previous song	Next song: Click "+" once. Previous song: Click "--" once.
Answer a call	Single click on MFB once.
End a call	To end a call, single click on MFB once.
Reject a call	Press and hold MFB for about 2 seconds.
Last number redial	Double click MFB when the earbud is on standby.
Wake up voice assistant	In music and standby mode, press and hold MFB for about 2 seconds. This function works only if your cell phone has voice control function, please refer to the instructions of your cell phone for details.

Earbud status Guide:

LED Indicator	Voice Prompt	Earbud Status
Blue light flashing	Power On	Power on
Red light flashing	Low Battery	Power off
Blue & red lights flashing alternately	N/A	In pairing mode
Blue light flashing intermittently	Connected	Pairing successful
Blue light flashing when the earbud is powered on	Incoming call number	Incoming call

Troubleshooting:

Pairing fails ---

Turn off the earbuds and repeat steps 1–5 in “Pairing the earbuds with your cell phone“ section.

If pairing still fails, check the following ---

- Make sure the earbuds and your Bluetooth device are next to each other and there are no obstacles in between.
- There is no signal interference nearby (See “Connection is not stable” below for troubleshooting).
- Reboot the Bluetooth device.

Connection is not stable ---

Bluetooth signal is transmitted wirelessly and signals can be affected, which results in intermittent sounds in the earbuds. This happens when:

- The distance between the earbuds and the Bluetooth device is at the edge of the Bluetooth pairable distance, which is within 32 feet.
- Transmitted signals encounter obstacles, such as walls or closed doors.
- You are near common sources of interference, such as microwave ovens, fluorescent lights, wireless video cameras, and cordless phones.
- Wi-Fi device is in use near the earbuds (if they both use the same 2.4 GHz frequency band).
- There are other Bluetooth devices being turned on/off nearby.

To resume stable connection between the earbuds and the Bluetooth device, try to avoid above conditions. Try to pair again following the steps in the “Pairing the earbuds with your cell phone” section.

Technical Specification

Type	Wireless earbuds
Model number	BL6
FCC ID	2AWEA-BL6
Trade Name	Langsdom
Bluetooth Version	Wireless V4.1
Bluetooth Profile	HSP, HFP, A2DP & AVRCP/Handfree
Connectivity Type	Wireless
Effective Range	Within 32 feet
Microphone	Built-in
Input	DC: 5V/130mA
Output Power	2 x 20mW
Battery	3.7v/80 mAh polymer li-ion battery
SNR	S/N ≥95
Talking Time	Up to 4 hours
Music Time	Up to 3-4 hours
Charging Time	About 1.5 hours to 2 hours
Standby Time	About 40-50 hours
Rechargeable	USB micro 5 pin cable
Music Selection	Previous / next

Safety Information

- **WARNING!** Longtime exposure to loud music or sounds may cause hearing damage. It is best to avoid high volume levels when using these earbuds, especially for extended periods of time.
- **Important!** The operation of switches on your audio device may cause clicks, which at high-volume setting may affect your hearing. Always set the volume control to minimum before switching between different audio devices.
- Use caution when using your earbuds while operating a vehicle or engaging in any activity that requires your full attention. Check and follow local laws regarding earbuds use.

- Using these earbuds may limit your ability to hear noises around you, regardless of listening volume. Sounds that you rely on as reminders or warnings may sound unfamiliar when using earbuds. Be aware of how these sounds may vary so you can recognize them as needed.
- This product contains magnets that may interfere with medical devices. If you have a pacemaker or other electric medical devices, please consult with your physician before using this product.
- Do not leave this product in excessive heat or cold for a prolonged period of time. Keep or use this product at normal temperature.
- This product is not waterproof. Please be careful not to drop into water or any liquid.
- Do not use harsh chemicals or strong detergents to clean this product.
- Keep this product away from metal, water, and chemical solvents.
- Do not use this product during a thunderstorm. It may cause the irregular work and increase the risk of electric shock.
- Do not use the earbuds if the sound is distorted.
- If the product becomes damaged, it cannot be fixed. Do not disassemble, repair or modify this product by yourself. Should any part break, dispose of immediately.
- This product includes a built-in, non-removable, rechargeable, lithium-ion battery. Battery is not replaceable. DO NOT try to remove or replace the battery from the product, improper replacement or repair could damage the battery, cause overheating, or result in injury.
- **CAUTION:** Dispose of exhausted product responsibly. DO NOT dispose of earbud or charging cable in fire. Battery may explode or leak. The lithium-ion battery must be recycled or disposed of separately from household waste. Dispose of batteries according to your local environmental laws and guidelines.
- This is not a toy. Keep product away from pets and young children.
- If you have any allergic reactions to the product, seek medical advice right away. Take the product and packaging with you.

FCC Warning

FCC identifier code:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DO NOT DISCARD. Keep this user's guide for future reference.



www.scholastic.com

Scholastic Inc., 557 Broadway, New York, NY 10012

TM & © 2020 Scholastic Inc. All rights reserved.

ISBN 978-1-338-69106-1

Made in Guangzhou, China