

VIVITAR®


# PARTY SPEAKER

WIRELESS LIGHT UP WITH MICROPHONE



USER'S MANUAL: PARTY-SPKMIC-FD

## USING YOUR MICROPHONE

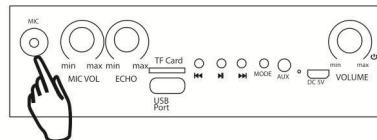

Plug in the included microphone's cable into the Mic Jack on the top of your speaker



Slide the switch up and down to turn the microphone ON and OFF.

## IMPORTANT SAFETY PRECAUTIONS


When using your Vivitar Party Speaker, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not allow children to play with your speaker without adult supervision.
3. Do not expose your speaker to excessive heat, flames, or fire.
4. Always press all buttons or switches carefully. Do not manhandle your speaker.
5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
6. Do not expose your speaker to temperatures above 104°F/ 40°C. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
8. Do not drop, crush, throw, or expose your speaker to excessive trauma.
9. Your speaker is not intended for commercial use.
10. Do not place near objects that generate a strong magnetic field.
11. Unplug your speaker when not in use for long periods of time or during lightning storms.
12. Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
13. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.


### BATTERY WARNING:

-The device is equipped with an integrated lithium battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.  
-Do not dispose of in fire or expose to excessive heat.  
-Do not crush, puncture, incinerate, or short circuit external contacts.  
-Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

## MICROPHONE CONTROLS

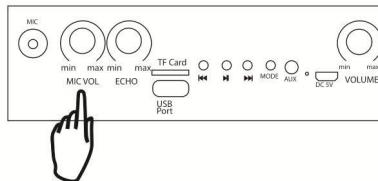

1. Turn the Mic Volume knob right to increase the and left to decrease the sound of the microphone.

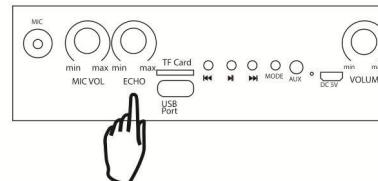


2. Turn the Echo knob right to increase and the left to decrease the echo function of your microphone.

## IMPORTANT SAFETY PRECAUTIONS

When using your Vivitar Party Speaker, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not allow children to play with your speaker without adult supervision.
3. Do not expose your speaker to excessive heat, flames, or fire.
4. Always press all buttons or switches carefully. Do not manhandle your speaker.
5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
6. Do not expose your speaker to temperatures above 104°F/ 40°C. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
8. Do not drop, crush, throw, or expose your speaker to excessive trauma.
9. Your speaker is not intended for commercial use.
10. Do not place near objects that generate a strong magnetic field.
11. Unplug your speaker when not in use for long periods of time or during lightning storms.
12. Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
13. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

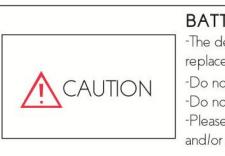

### BATTERY WARNING:

- The device is equipped with an integrated lithium battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

-1-

## INTRODUCTION

Thank you for purchasing the Vivitar Party Speaker, item PARTY-SPKMIC-FD. Turn a gathering into a party with this light up Bluetooth speaker, compatible with most mobile devices and tablets. For additional fun, plug in the included microphone to sing along with your friends and favorite tunes. Please read this manual carefully before using your speaker.

## PACKAGE CONTENTS

- Vivitar Party Speaker
- Microphone
- USB Charging Cable
- User's Manual with Warranty Information


## SPECIFICATIONS

Bluetooth Specification: V5  
Bluetooth Range: Up to 33 feet  
Power Supply: DC 5V  
Battery Type: 3.7V 1200mAh Lithium Battery  
Charge Time: Approximately 1-2 Hours  
Play Time: Approximately 1 Hour\*


\*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

-2-

## MICROPHONE CONTROLS

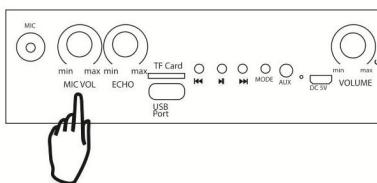

1. Turn the Mic Volume knob right to increase the sound and left to decrease the sound of the microphone.

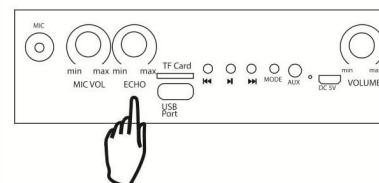


2. Turn the Echo knob right to increase and the left to decrease the echo function of your microphone.

-9-

## MAINTENANCE AND CARE


- Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging or inserting any cables.
- Use a soft cloth to clean your speaker.
- Make sure your speaker is dry before using and before connecting cables to ports.
- Never use any harsh chemicals or detergents to clean your speaker.
- Always store your speaker in a cool, dry location.
- Never tug or yank on either any cables while they are connected to your speaker. Connect and disconnect these cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold, high humidity or excessive moisture/ water.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

-10-

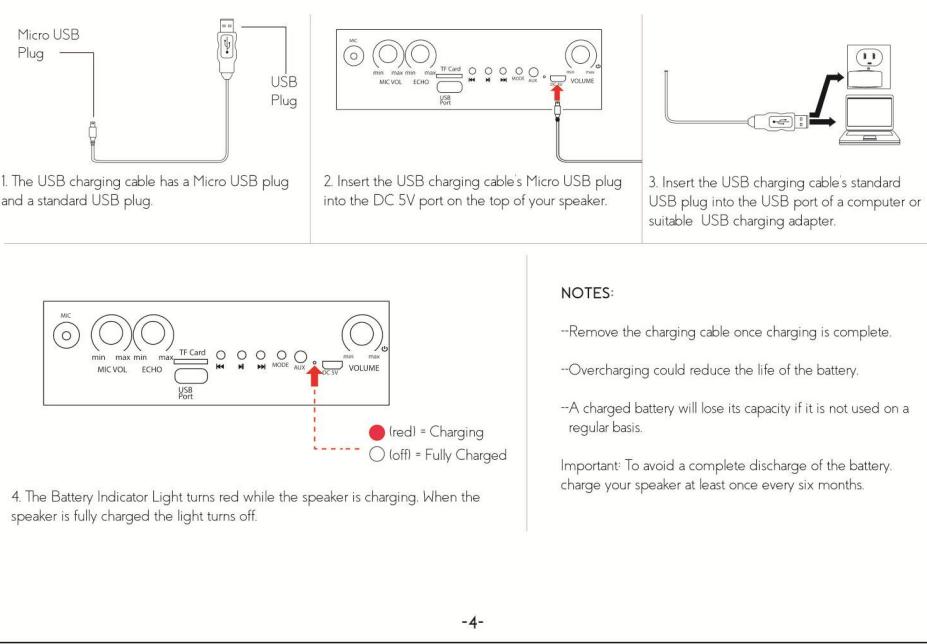

-4-

## BLUETOOTH PAIRING

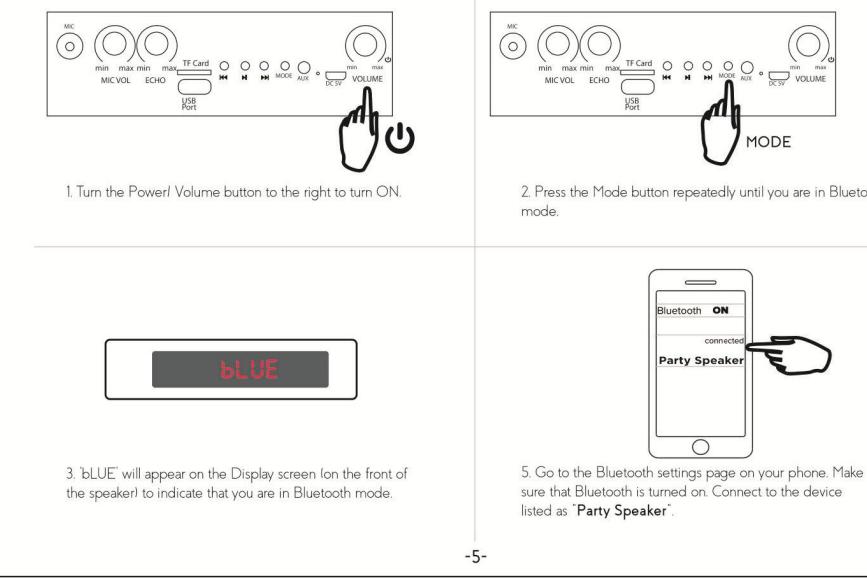

-5-

## FCC STATEMENT

FCC ID: 2AWEMPARTYSPKMIC

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

-12-

## VIVITAR ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

### What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

### To Obtain Warranty Service and Troubleshooting Information:


Call 1-800-592-9541 or visit our website at [www.vivitar.com](http://www.vivitar.com).

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairable.

-13-

## SELECTING A MODE

Mode Button  
(press repeatedly to toggle through the various modes)

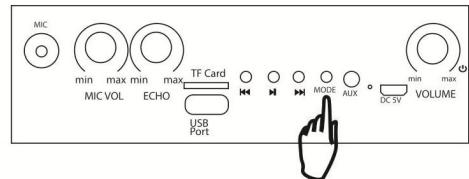

When your speaker is powered on, you can press the Mode Button repeatedly to choose where your speaker will play music from. You can select from the following modes as shown on the Display Screen:

**BLUE:** Select this mode to play music from an audio source connected via Bluetooth connection. See instructions on the previous page to connect your phone or tablet to your speaker via Bluetooth.

**LINE:** Select this mode to play music from an audio source connected to the speakers Auxiliary Input Jack.


**USB:** Select this mode to play music from a thumb drive or similar device inserted in the speaker's USB Port.

**TF:** Select this mode to play music from a TF or Micro SD memory card inserted into your speaker's TF Memory Card Slot. Your speaker can play .MP3. or .WAV music files stored on your memory card.


**Fn:** Select this mode to listen to FM radio stations. When selected, the station you are tuned in to will display on the screen. Make sure the antenna on the rear of your speaker is fully extended in order to maximize reception. Press and hold the **FF** button in order to search for available stations. Or press the **◀◀** button, or **▶▶** button repeatedly to toggle through stations.

-6-


## MUSIC CONTROLS

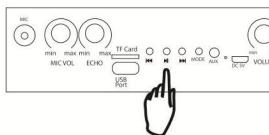

1. Press the Play button to play and pause music.

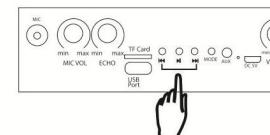

2. Press the Next and Previous buttons to go to the next or previous track.

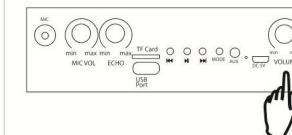

3. Turn the Power/ Volume Control knob to increase and decrease the speaker's sound.

-7-

## VIVITAR ONE YEAR WARRANTY (CONTINUED)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

-14-

**VIVITAR**

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.