




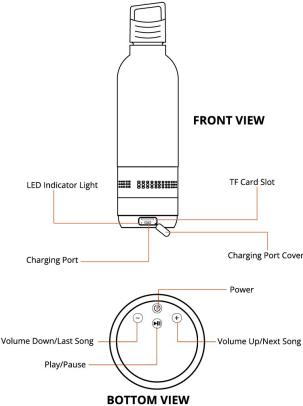 
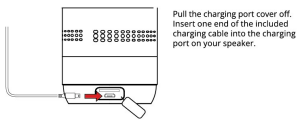 
 
 
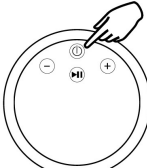 





# 风琴5折6页 折成型尺寸70X100mm


<div></div> <div>Water Bottle with Wireless Speaker 2 in 1 Bottle Speaker</div> <div></div> <div></div> <div>For Items: AI6005, AI9003</div> <div>Quick Start Guide</div>	<div>WHAT'S INCLUDED</div> <div></div> <div>Water Bottle with Wireless Speaker</div> <div></div> <div>USB Cable</div>	<div>A CLOSER LOOK</div> <div></div> <div>FRONT VIEW</div> <div>LED Indicator Light</div> <div>TF Card Slot</div> <div>Charging Port</div> <div>Charging Port Cover</div> <div>Power</div> <div>VOLUME DOWN/Last Song</div> <div>Play/Pause</div> <div>VOLUME UP/Next Song</div> <div>BOTTOM VIEW</div>	<div>CHARGING</div> <div></div> <div>Pull the charging port cover off. Insert one end of the included charging cable into the charging port on your speaker.</div> <div></div> <div>Insert the other end into the USB port of a computer or suitable USB charging adapter.</div> <div></div> <div>● Charging (Indicator is RED) ○ Charging Complete (Indicator Off)</div> <div>NOTE: Charging takes approximately 1-2 hours to complete.</div>	<div>POWERING ON/OFF</div> <div></div> <div>Press and hold the power button for approximately 3-4 seconds to power on or power off your speaker.</div>	<div></div> <div></div> <div>60022 Sakar International 199 Carter Drive Edison, NJ 08817 www.sakar.com Support: (877) 397-8200 aws.support@sakar.com</div>
--	---	---	---	---	--

## BLUETOOTH PAIRING




Pairing Mode  
(Blue Light Flashing)

Once powered on, your speaker will go into pairing mode. The LED indicator will turn blue and flash rapidly.




Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA Get Fit AI6005".




Paired  
(Blue)

Once paired, the LED indicator will stop flashing and remain blue. Note that the light may flash slowly while music is playing.


## LISTENING TO MUSIC




Press the play/pause button to play or pause a track.



Press the + button to skip to the next track in a playlist. Press and hold the + button to increase volume.



Press the - button to go back to the last track in a playlist. Press and hold the - button to decrease volume.



Insert a TF memory card or similar Micro SD memory card into the TF Card Slot before powering on your speaker. When powered on your speaker will play mp3 audio files stored on the memory card. Remove the memory card from the slot and your speaker will go to Bluetooth mode.

## SPECIFICATIONS

BLUETOOTH VERSION: 5.1  
WORKING DISTANCE: UP TO 10 METERS  
BOTTLE CAPACITY: 400mL  
PLAY TIME: UP TO 4 HOURS\*  
CHARGE TIME: Approximately 1-2 HOURS  
NET WEIGHT: 255g  
BATTERY: 350mAh Lithium Ion Battery  
SIZE: 68mm (diameter) x 250mm  
INPUT POWER: 5V DC

\*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

## SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge your speaker in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. Make sure the charging port and charging cable are completely dry before charging. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

**Maintenance and Care**

- When cleaning or rinsing the bottle, separate the bottle from the speaker. Do so, hold the bottle and twist the speaker in a counter clockwise direction until it screws off.
- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold.

\*Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

## FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

## WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

**What is Not Covered by Warranty**

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

**To Obtain Warranty Service and Troubleshooting Information:**

Call (877) 397-8200 or visit our website at [www.aiwa.co](http://www.aiwa.co).

To receive Warranty Service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.