

## Instruction Sheet of Remote Controller GYDSRGBFC-1:

1、To put the CR2025 button battery into the battery casket as per the instructions on remote controller

### 2、Description for Buttons:

2.1、There are 3 function areas on remote controller:Gray Area(ON、OFF、Auto), Blue Area(Jump、Fade、Flash White、Chase), Purple Area(Steady、Fade、Flash White、Flash out、Chase、Wave with 8 color options)

2.2、The color options are available to change when push the buttons Steady、Fade、Flash White、Flash out、Chase、Wave in purple area, The available colors are Red、Green、Blue、Yellow、Purple、Teal、White、Multi

2.3、The color options are invalid in purple area when functions are located in Blue or Gray area

2.4 Here are the details as follows.

Button	Description	Button	Description	Button	Description
	On		Jumping Combination		Off
	Fading Combination		Flash White Combination		Chasing Combination
	Steady On		Fading		Flash White
	Flash Out		Chasing		Waving
	Red		Green		Blue
	Yellow		Purple		Teal
	White		Multi		Auto running

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.