


BOOMBOX

Water Proof Bluetooth Speaker


Welcome to MIATONE BOOMBOX

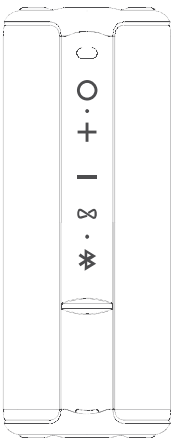

Package Contents:

- 1x BOOMBOX Speaker
- 1x Micro USB Charging Cable
- 1x Aux-in Cable
- 1x User Guide

Product Diagram

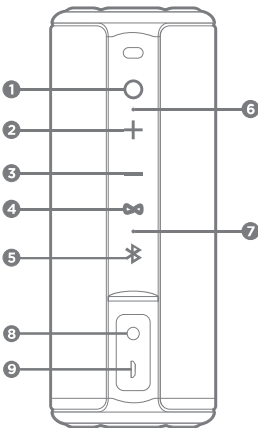

- 1 Power On / Off - Play / Pause
- 2 Volume Up / Next Track
- 3 Volume Down / Previous Track
- 4 TWS (True Wireless Streaming)
- 5 Bluetooth Reset - Answer / Reject Call
- 6 Power LED
- 7 Working Statue LED
- 8 Audio Port
- 9 Charging Port

How to Use

Charging Your Speaker

1. Connect one end of the USB charging cable to the charging port on your speaker. Plug the other end of the cable into a suitable USB port on your computer.
Note: A full charge takes approximately three hours.
2. A white LED light will turn on to indicate that the unit is charging. The white light will turn off when the battery is fully charged.

Power On / Power Off

Power on: Press and hold the  button for 3 seconds to power on the speaker. The working statue LED will flash.

Power off: Press and hold the  button for 3 seconds to power off the speaker. The working statue will turn off.

Pairing Bluetooth Devices with Your Speaker

In order to pair your Bluetooth audio device with your Bluetooth Speaker for the first time, follow the steps below:

1. Make sure your Bluetooth audio source is close to the speaker.
2. Press the  button for 3 seconds to power on the speaker. The white LED will flash.
3. Enable Bluetooth on your device (phone or audio device). Refer to the manufacturer's instructions for details.
4. Search for Bluetooth devices and select "BOOMBOX". If required, enter the password "0000" to confirm and complete the pairing process.
5. The speaker will beep when the devices are paired. The white LED will switch on and your portable device will display the connected Bluetooth icon.

Note:

- The unit will power off automatically if no connection is made within 10 minutes.
- The unit will not automatically connect to a new device when switched on, please follow above step how to connect to your device.

Bluetooth Music Playback

1. Open the music player and select a song to play. Press the  button to pause the music and press it again to play music.
2. Press the  button to increase the volume or press and hold to skip to the next song.
3. Press the  button to decrease the volume or press and hold to skip to the previous song.

Bluetooth Phone Calls

1. Press the  button to answer an incoming call. Press again to end the call.
2. Press and hold the  button for 2 seconds to switch between speaker and phone to answer the call.

Aux-in Mode

1. Use the aux-in cable provided to connect the speaker to your mobile phone or computer.
2. Press the  button to play music and press again to mute the music.

TWS Function

If you have two BOOMBOX speakers, you can use TWS to play music in stereo.

1. Make sure the two BOOMBOX speakers are not connected over Bluetooth.
2. Power on both speakers and press the  button on one speaker. The LED will flash in blue and white and 3 seconds later two speakers will automatically connect to each other. You will hear a tone, one light is twinkling in white and the other keeps lighting in Blue, that means TWS connection is successful.
3. Search for Bluetooth devices and select "BOOMBOX" on your Bluetooth device.

Reset

Press and hold the  button for 2 seconds to reset the speaker.

Troubleshooting

Q: My speaker will not switch on.

A: Please recharge it and make sure it has enough power. Plug the unit into a charger and see if the power LED indicator turn on.

Q: Why can't I pair this speaker with other Bluetooth devices?

A: Please check the following:

- Your Bluetooth device supports the A2DP profile.
- The speaker and your device are next to each other (within 1m).

Specifications

Bluetooth Version: V4.2
Maximum Output: 16W
Built-in Power: Li-ion 2500mAh
SNR: >75dB
Wireless Working Frequency: 80HZ-20KHZ
Wireless Transmission Distance: up to 33 ft (10M)
Charging Time: about 2-3 hours
Playback Time: up to 10 hours
Charging: DC 5 V± 0.5/700mA
Size: Dia 73mm*185mm

Care and Maintenance

1.  This logo means that no naked flames, such as a candle can be placed on or near the device.
2.  The electrical and electronic equipment are part of a separate collection. Do not throw electrical or electronic equipment away with unsorted municipal waste, but ensure that it is collected separately. Collection systems and locations (sorting centres, rubbish dumps) are provided for you by local councils and retailers. By entrusting your end-of-life product to the proper recycling process, you are helping to protect the environment and your health.
3. Use this device in temperate climates only.
4. This device may be used by children aged 8 years or older and by those with reduced physical, sensory or mental abilities, or those lacking experience or knowledge, provided they are correctly supervised, or if the instructions related to the use of the device have been adequately given and if the risks involved have been understood. Children must not play with this device. Children should not clean or maintain the device without supervision.
5. The electrical socket must remain easily accessible if it serves as the means of disconnection.
6. Always unplug the device before cleaning it.
7. Clean the device with a soft dry cloth only. Never use solvents.
8. Attention should be drawn to the environmental aspects of battery disposal.
9. The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
10. Use the apparatus in moderate climate only.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

www.miatone.com

Copyright © 2020 MIATONE Inc. All rights reserved.
Bluetooth is a registered trademark of Bluetooth SIG, Inc.
MIATONE products are registered trademark of MIATONE in the US.
Service contact: support@miatone.com
MIATONE Inc.Oxnard, CA 93022