

**BAUHN**<sup>®</sup>  
EFFORTLESS TECHNOLOGY



# WATER BOTTLE WITH BLUETOOTH SPEAKER & LED LIGHTS

Model Number: 711654 (YS-BS0459W)

INSTRUCTION MANUAL



WATER BOTTLE WITH BLUETOOTH SPEAKER & LED LIGHTS

## Warranty Details

---

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

# Content

Warranty	1
Content	2
Welcome	3
General Safety Instructions	3
FCC Instructions	4
Package Contents & Description of Parts	5
Instruction for Use	6
Speaker Pairing	7
Speaker Button Functions	8
LED Changing Mode	9
Products Specifications	9
Troubleshooting	10

# Welcome

Congratulations on choosing to buy a Bauhn® product.

All products brought to you by Bauhn® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

## General Information and Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the speaker.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

## Care and Maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

# FCC Instructions

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## RF exposure:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

# Package Contents

- Water Bottle with Bluetooth Speaker & LED Lights
- Type-C Charging Cable
- Instruction Manual

## Description of Parts



1. On/Off / Light button
2. Volume decrease / Previous track
3. Play/Pause / Phone button
4. Volume increase / Next track
5. LED indicator / Light ring
6. Charging Port (back)
7. Carabiner

# Instruction for Use

## Charging the Speaker

For best results, fully charge the unit before use.

1. Connect the Type-C charging cable (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 1 - 2 hours to fully charge the battery.

## Speaker

### Turn On/Off the Speaker

Long press the ON/OFF button to turn on/off the speaker.

## **Pairing your device with the Speaker**

Your Bluetooth Speaker can stream audio from any Bluetooth enabled device within the range of up to 33 feet. Simply follow the below steps.

1. Turn ON the speaker.
2. An indication would be heard, and blue LED flashes rapidly. The speaker is now entering “pairing” mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for available Bluetooth devices.
5. The Bluetooth Speaker would appear as “BAUHN BOTTLE SPKR”, in the list of searched devices. Select it from the available list of devices.
6. You might be prompted with “Pair with BAUHN BOTTLE SPKR?” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
7. If required, enter the password ‘0000’ to confirm pairing.
8. Once paired successfully, an indication tone would be heard, and blue LED will stay on.
9. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

## **Listening to Wireless Music**

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase/ Decrease Volume	Playing music	Press and hold the volume increase/ decrease button.
Pause	Playing music	Short press Play/Pause button once to pause music
Play	Pause	Short press Play/Pause button once to resume music
Previous Track	Playing music	Short press the Previous track button to the previous track
Next Track	Playing music	Short press the Next track button to the next track

Note: An indication tone will alert you when the volume is adjusted to maximum level.

### Making a call with the Bluetooth Speaker in Bluetooth mode

Function	Operation	Button
Answer a call	Incoming Call	Short press the Phone button to answer an incoming call
Reject Incoming Call	Incoming Call	Long press the Phone button
End a Call	Incoming Call	After your phone conversation, short press the Phone button.
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

## **Color Changing LED light Mode** (LEDs are not replaceable)

1. Turn on the speaker, play music after Bluetooth pairing.
2. Short press the light button each time to change 9 different color changing LED light patterns.
3. Short press the light button twice to turn on/off the LED light.

## **Product Specifications:**

Water bottle capacity: 24oz

Bluetooth version: 5.3

Bluetooth range: 33 feet

Speaker output: 3W

Unit size: Dia. 3" x 10.5" H

Unit weight: ~7.8 oz

Power input: DC 5V

Charging time: 1 - 2 hours

Play time: 2 - 3 hours (moderate volume)

Built-In Rechargeable Lithium Battery: 3.7V / 400mAh

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

# Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
No sound	Volume in minimum position.	Increase the volume.
	The connected device is not in play mode.	Play the music in the connected device and make sure the volume level is in high level.
Sound distortion	Volume level too high	Decrease the volume.