

YS-BT0217

(247949)

Bluetooth Earbuds



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Bluetooth Stereo Earbuds
- USB charging cable
- 2 different sizes of silicon tips included
- Instruction Manual

Key Features

- Keep earbuds together all the time
- Connect to any Bluetooth enables device
- Listen to music wirelessly
- Built-in Mic
- Control buttons for ease-of-use
- Built-in rechargeable battery
- Answer & end a call at click of a button
- Built-in Volume & Media Control (pause/play)
- Connects to previously connected device automatically

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use the unit with wet hands.

Do not put objects into any of the openings.

Keep the unit free from dust, lint etc.

Do not use this unit for anything other than its intended use.

Keep the unit out of reach of children.

This product is not a toy.

Do not use the handset at excessive volume levels, as damage to hearing may occur.

Description of Parts:



1	Speaker
2	Built-In Microphone
3	Charging port (side)
4	Volume Decrease (-) / Previous Track
5	MF (Multi-Function) / Phone button
6	Volume Increase (+) / Next Track
7	LED Light Indicator

INSTRUCTIONS FOR USE

Charging Instructions

The Bluetooth Earbuds come with a built-in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied USB Cord to charge the Bluetooth Earbuds. Please charge for about 2 hours.

Connect the USB charging cable to a computer USB port and the Micro USB plug to the charging port of the device. The Red LED light turns on while the device is charging. It takes around 2 hours for the unit to fully charge. When the battery is fully charged, the LED light will turn off.

Switching on/off the device

Press and hold the **MF** button for 2-3 seconds to turn ON/OFF the device.

Pairing the device with Bluetooth devices (phone or music device)

Ensure the device is turned off, then press and hold the **MF** button for 2-3 seconds to turn on, and the LED flashes red and blue. Place the Bluetooth Earbuds and Bluetooth device (phone or music device) so that they are no further than 3 feet apart;

Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the “**PX EARBUDS**” from the list of available Bluetooth devices.

If required, enter the password ‘0000’ to confirm & finalize pairing.

Once paired successful, you would hear an indication tone and the LED flashes blue.

You can now start to use the device.

If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.

Once you have paired the Bluetooth Earbuds with a device, the Earbuds will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

The Bluetooth Earbuds will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Once the Bluetooth Earbuds is paired with your device the music will transmit through the Bluetooth Earbuds. Please refer to your device's user manual for further information.

Function Summary

Listening to Music

Once the Earbuds are paired with your device you can stream music wirelessly through the Bluetooth Earbuds. Should you encounter any problems while streaming please refer your device's user manual for further information.

Control Function

Function	Operation	Button
Increase Volume	Playing music	Long press the + button will increase the volume
Decrease Volume	Playing music	Long press the - button will decrease the volume
Pause	Playing music	Short press on the MF button will pause the music
Play	Pausing	Short press on the MF button will restart the music
Previous track	Playing music	A short press each time on the - button will return you to the previous track
Next track	Playing music	A short press each time on the + button will take you to the next track

An indication tone will alert you when the volume is adjusted to either minimum or maximum level.

Making a call with the Bluetooth Earbuds in Bluetooth mode

Basic operation

Function	Operation	Button
Answer a call	Incoming Call	Press the Phone button once to answer an incoming call
Reject a call	Incoming Call	Press and hold the Phone button 2-3 seconds
End a call	Incoming Call	After your phone conversation, short press the Phone button.
Increase Volume	During a call	Long press on the + button will increase the volume
Decrease Volume	During a call	Long press on the - button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.

- Certain functions and indication tone maybe vary depending on your mobile phone.

LED indicator

Please refer to the below tables for a list of the LED statuses whilst using the Bluetooth Earbuds.

Charging Indication

LED indicator	Status of the BT Earbuds
Red LED	Charging
Red LED off	Charging Completed

LED Indication

LED indicator	Status of the BT Earbuds
LED flashes red and blue alternately	Pairing mode

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

Specifications

Bluetooth specification	Bluetooth 5.0
Operating distance	33 Feet
Working time	Up to 3 hours
Charging input voltage	DC 5V
Charging time	< 2 hours
Speaker Power	2 x 5mW
Built-In Battery	55mAh

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.