



Wireless Headphone  
Neck Fan



Charging Port

Microphone

Retractable  
Headphones

Adjust fan  
position  
using the  
bendable  
arms

Rotating  
Fans

Volume  
Track Fwd /  
Back

Fan Control Button

Bluetooth® Button

## USING THE BLUETOOTH® NECK FAN

### Controlling the Fans

- Press the “Fan Control Button” once to turn on the fans. The fans will start on slow speed.
- Repeatedly press the button to increase the speed to medium, fast or turn the fans off.



Tip. The fans are attached to bendable arms. Adjust these arms to maximize the cooling effect.

### Using the Bluetooth® Headphones

- Press and hold the Bluetooth® button to start the pairing mode. The LED indicator will flash alternating red & blue.
- Look for the Bluetooth device “Odyssey BT” in your phones settings and initiate pairing. When pairing is complete the LED indicator will stop flashing and light a steady blue.
- Once you pair your smart device the headphones will automatically pair, every-time you press the Bluetooth® button.
- Short press the Volume/Track Fwd Back button to change tracks.
- Long press the Volume/Track Fwd Back button to change volume settings.
- When you receive a phone call you can talk using the headphones and built in mic. To pickup or hangup calls, simply short press the Bluetooth® button.

## CHARGING THE BLUETOOTH® NECK FAN

### Charging the Bluetooth® Headphones

- Use the included charging cord to connect to the charging port USB mini port on the rear of the headphone's neckband.
- Charging time takes approx. 2-3 hrs.
- The charging lamp illuminates red when charging. When the light turns blue the battery is fully charged.
- Note: Maximum charging power is 5v1a. Exceeding this power may damage the device.



Tip. The headphones operate for approx. 3-4hrs on a full charge.

## SAFETY NOTICES

- Do not immerse the unit in a liquid or place in washing machine.
- Do not use the unit while bathing or raining.
- Do not set or store the unit in a location where it may fall into a tub or pool.
- If the unit does not work properly after it has been broken or immersed in water, stop using it.
- Keep the unit away from heat sources such as heaters, stoves, and other heat generating equipment.
- Keep the unit away from open flames, flammable substances or steaming gases such as gas stoves, ovens, gasoline, etc.

## WARRANTY

### 60 DAY LIMITED WARRANTY

Odyssey Marketing/ Odyssey Toys warrants to the original purchaser when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**\*\* THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES. EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.\*\***  
©2017 Odyssey Marketing Corp.

**FCC STATEMENT:** This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

## CUSTOMER SERVICE

For Customer Service please email: [Care@OdysseyToys.com](mailto:Care@OdysseyToys.com)

Please note the units model number and name in your email:  
Model no. ODY-861 & 862 • Tech - Bluetooth® Neck Fan

[www.OdysseyToys.com](http://www.OdysseyToys.com)



Please do not return this product to the store.

For questions or assistance on installation, parts or operation contact: Odyssey Toys at 1-(305)-933-4480.

Hours of operation: 10:00am - 5:00pm EST

Email: [Care@OdysseyToys.com](mailto:Care@OdysseyToys.com)

or visit us online at: [www.odysseytoys.com/support](http://www.odysseytoys.com/support)

20855 NE 16 AVE C-5, Miami FL, 33138

MADE IN CHINA

