


SHENZHEN JHS TECHNOLOGY CO. , LTD

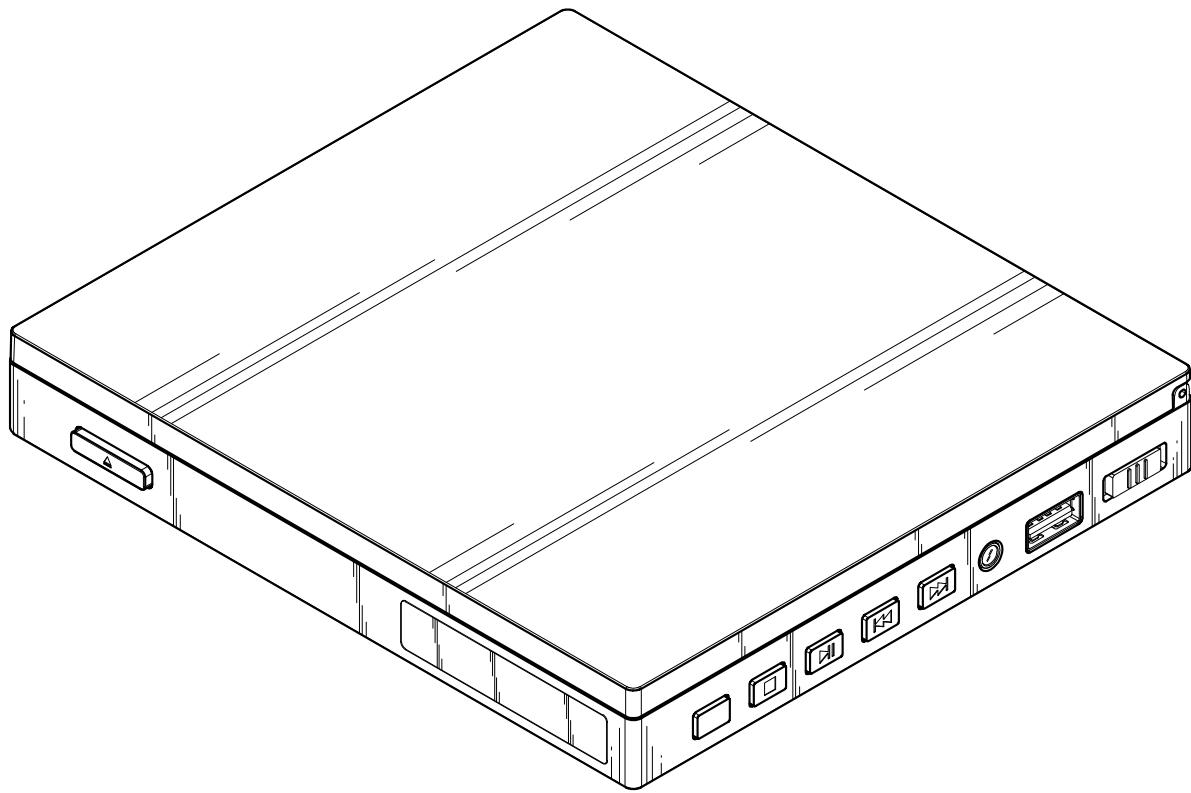

User Manual

**MINI FASHION Bluetooth
DVD Player**

Caution:

1. Please be sure to read this user manual before use of the device.
2. While using the device, all operation should strictly follow the instructions in this manual.
3. Keep device in place with enough air flow, and be left 5-10 centimeters distance away from other items.
4. Avoid placing the device near any heat source, like radiator, heater, cooker, or other heating device.
5. Avoid the power cable being stamped or squeezed, especially connector tip and corner position.
6. Please use the supplied accessories for safety concern.
7. In case of extreme weather or left unused for a long time, please unplug the power.
8. All maintenance work should be conducted by qualified technician. If any damage causing the device unable to work normally, please be sure to repair it in time.
9. Avoid locations subject to extreme heat, fire or moisture.
10. Do not place any danger source on top of the device, like item containing fluid,



Warning:

Do not disassemble the device.
Do not place device on top of other electronic items.
Do not look directly at the laser beam inside the device.



NOTE:

Any operation or adjustment against the product manual may cause serious laser radiation or other danger situation.

CLASS 1
LASER PRODUCT

This device is classified as Class I laser product. While using the device, please strictly follow this user manual, otherwise laser radiation may be caused.

Specifications

Model	DVD-918
Frequency response	60Hz-16KHz , ±3dB
Signal to Noise Ratio	>57dB
Total Harmonic Distortion	<1. 5%
MP3, link input	650mV
Rated Voltage	5V--2A
Tuning range	FM : 87.5-108MHz
Power	10W
Material	PC+ABS
Dimension	153x140x30mm
Weight	270 g


Kind Remainder:

1. When reading files from multiple directories (such as MP3, AVI, USB flash drive):
 - a) By default, this device would only show the directory after files successfully read, and unsupported format would not be displayed;
 - b) This device allow you play audio and video file. When playing audio file, use Direction button on remote control and move the cursor to the directory of playlist to back to parent folder;
 - c) When playing video file, use RETURN or STOP button to back to the menu interface. (Please refer to step 2 mentioned above for detailed operation).
2. Turn page function when reading mp3 file
 - a) As auto turn page function is void in case of folder delamination, press EDIT button to cancel folder delamination.
 - b) In case of folder delamination, press STOP button first, then press "PREV"/"NEXT" button to turn page.


Remote Control

1. The sensitivity of remote control can be influenced by light and environment.
2. Please take out the battery inside remote control in case of unused for a long time, to avoid the battery's unexpected leakage and corroding the remote control.
3. Normally, the included battery can last one year's usage, but it also depends on your using frequency. In case of remote control not working within a short distance, please replace the battery.
4. Please Note: Insulator need to be taken out before using the remote.

Remote Control


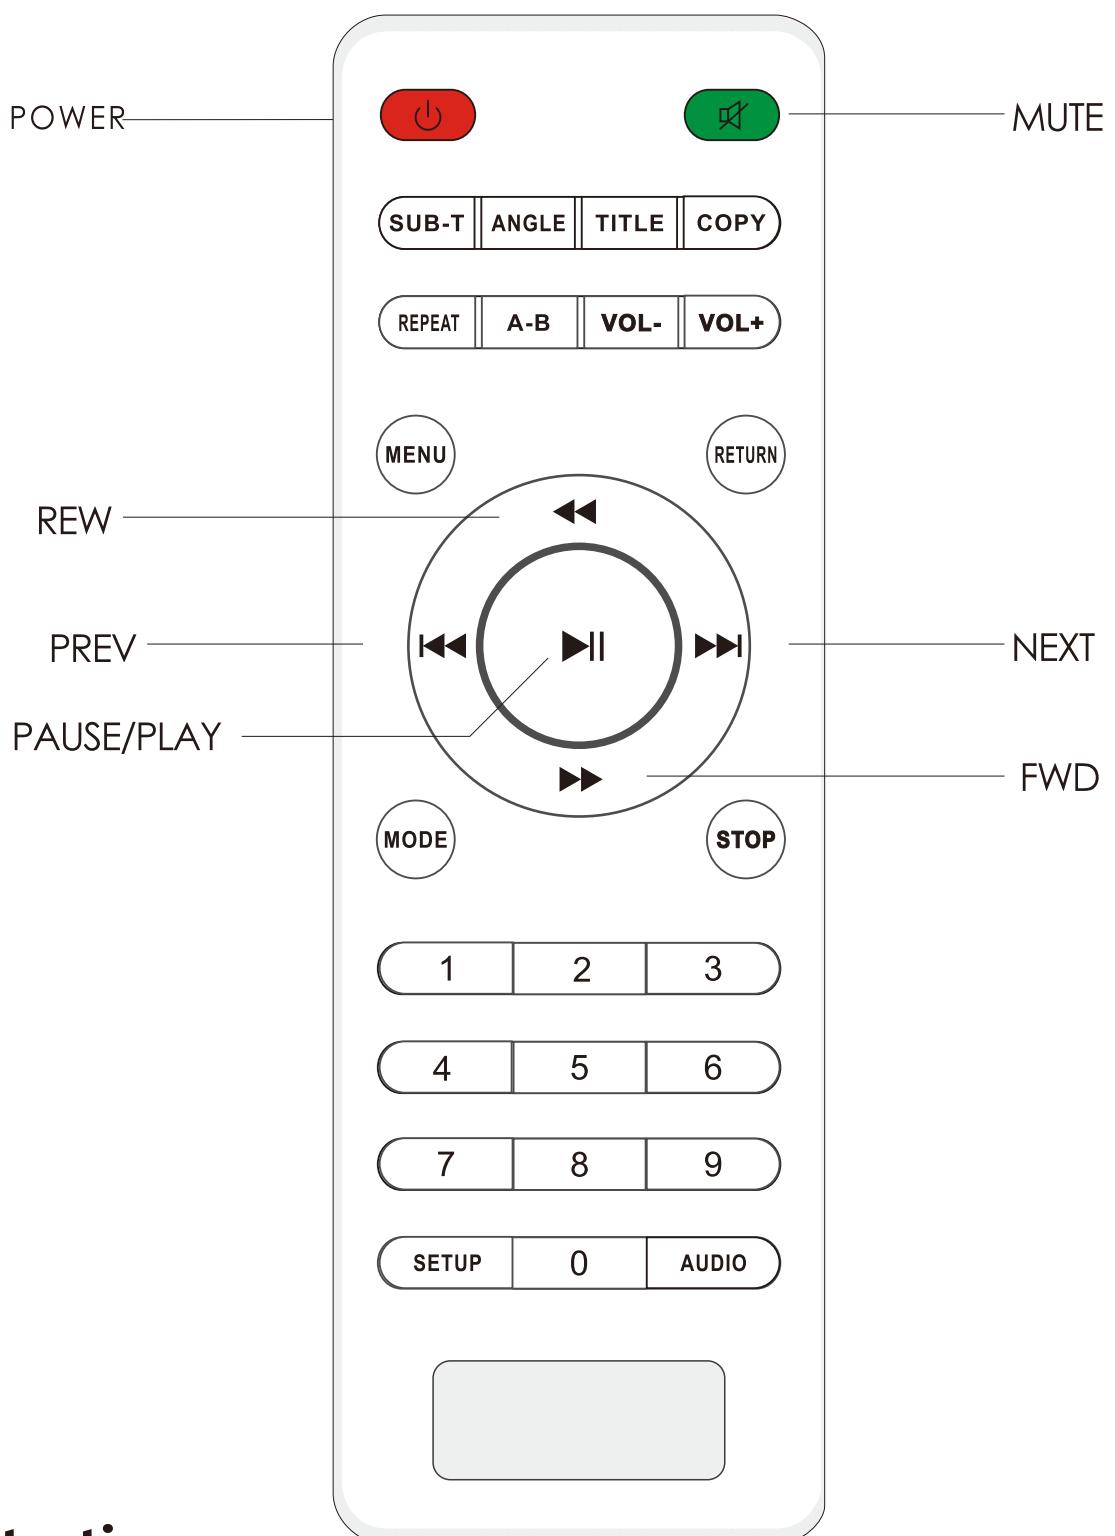


Illustration

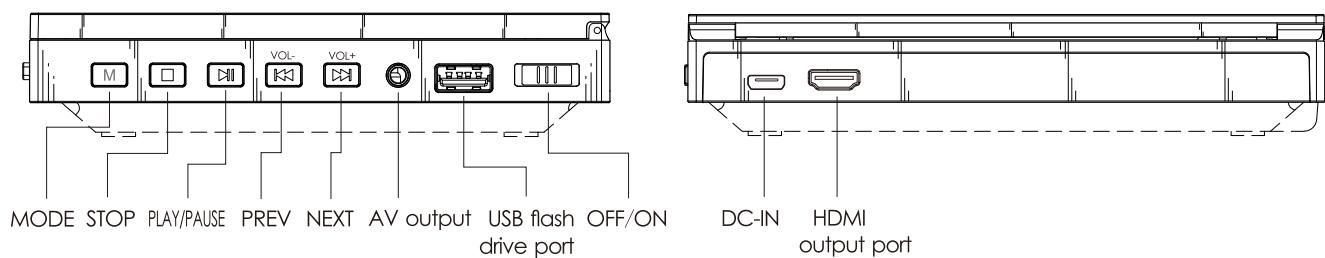

Quick Instruction For Use:

1. Plug the USB connector into power adapter first.
2. And then plug the power adapter into power socket(Voltage:110-240V).
3. Remove the protection card of laser head from the device before using it.
4. Put the CD disc into the player and make the power on by pulling the power cable of the device. At this moment, the DVD working status will be shown on the LED display and the CD disc starts to rotate. It will play beautiful music or other listening materials after 10-20secs rotating.
5. Press the corresponding mode button on the remote control to switch if you want to change the function.
6. Turn on the bluetooth of device while connecting bluetooth between the phone and device, and then turn on the bluetooth of your phone for connecting.
7. Pull the power/switch cable again to turn the power off, the music will stop playing accordingly.

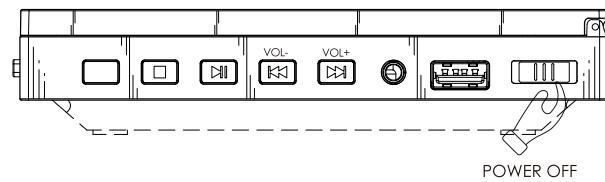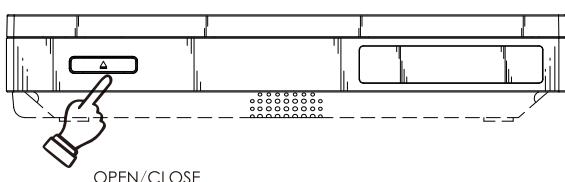


Note:

Press the square button to open the dust-proof case. Please take out the chip-protection card before putting CD, and lock the case afterwards; This player adopt cable pulling switch design, to turn on the device, you must pull the cable after connecting power.


Connect to TV

1. AV port

If your TV has AV port, please use the supplied AV cable to connect, and switch your TV to AV mode after connected.

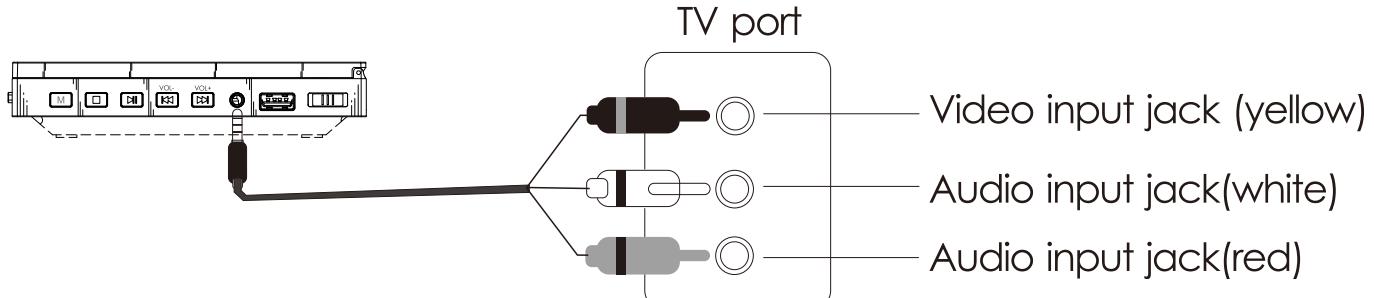

HDMI port

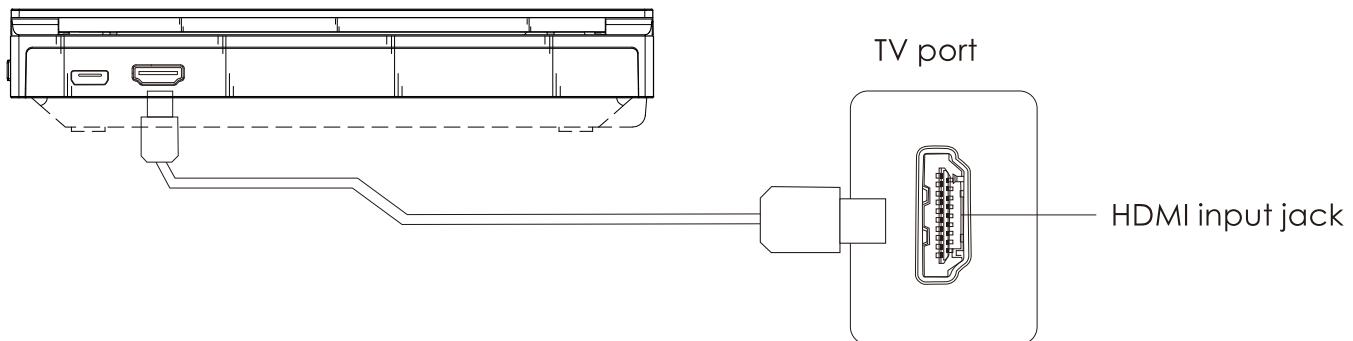

1: POWER

- Before power on (pull the power cord to power on the device), please check whether the player is properly connected with other audio device. Plug the power adapter to 220V power outlet.
- Put CD into the player with cover side facing upwards.

2: LED DISPLAY

Display for the songs time and mode

3: Sub-Title

Sub-title button apply for DVD and Super video CD: When pressing it for the first time, it would display current sub-title language mode; For DVD and Super video CD with multiple sub-titles, press this button to switch to language you prefer; TV screen would display the selected language code, like "language: 1 English or open."

4: DVD/USB

In case of USB flash drive, press MODE button on remote control or topside MODE button on the device to switch to USB mode, the device would automatically read files from USB flash drive.

5: ANGLE

Press Angel button to get different video angels.

6: TITLE

Title button apply for DVD table of the contents.

Note:

- In case "PBC" is on, this operation would turn on/off PBC while programming.
- Enter number according to the prompt of cursor, press PAUSE/PLAY button to play.

7: Copy key

Press COPY key to copy MP4, MP3, CD to USB disc.

8: SYS

System button apply for DVD, Super video CD, VCD, CD, CD-G, HD-CD, WMA, AVI, Mp3, J PEG: For pressing for the first time, it would display current system. Three systems are available, press SYS button to switch video output system.

Note: This device offer TV AUTO system, and automatically choose optimized resolution depending on different disks (Note: full screen is not available for wide screen format); In order to adopt to the different system setting of PAL and NTSC TV, press SYS button to choose video mode in case it does not show full screen or no color. When some function of the disk are unable to fully displayed in certain system, "AUTO" is recommended.

9: FWD/REW

Press FWD button to fast forward, no sound output during this period;

Press REW button to rewind, no sound output during this period.

10: Audio/Channel

Choose Left/Right channel, this button apply for DVD, VCD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3/JPEG disk.

Note:

- a) For pressing the first time, it would display current channel.
- b) Press AUDIO button to switch channel.
- c) For disk with dual language, press AUDIO button to switch language.

11: Number button

12: OK/Enter: Press OK button to choose the file or enter into next catalog.

This Enter together with button PLAY

13: MENU

- a) MENU button apply for DVD.
- b) Press MENU button to display main menu of DVD disk, use Direction button to move cursor and choose file.

14: RETURN

While playing DVD disk, press RETURN button to back to main menu.

Note: RETURN button is void while playing MP3, CA and VCD1.1 disk.

15: PLAY/PAUSE

PLAY/PAUSE button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3 and J PEG. Press PAUSE button to stop; Press again to back to playing status.

16: OSD

OSD: on-screen display, OSD is on by default, displaying current playing time and mode.

17: PREV/NEXT

PREV/NEXT button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI and MP3/JPEG.

- a) Press NEXT button to skip next file.
- b) Press PREV button to skip previous file.

Note: In case of playing Super Video CD and "PBC" off, press NEXT button would stop playing if current song is the last song; In case current song is the second song, press PREV button would stop. PREV/NEXT button would be void if current song has stopped; In case of DVD disk, the result may vary depending on the different structures of disk.

18: VOL+/VOL-

VOL+/VOL- button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI and MP3/JPEG.

Note:

- a) You can also adjust volume via Volume button on TV or Amplifier.
- b) Press VOL+ to volume up, press VOL- to volume down.
- a) Volume is non-adjustable when playing DVD disk source code output.

19: MUTE

MUTE button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI and MP3/JPEG. Press MUTE button to close sound output, TV screen display MUTE; Press MUTE button again or VOL+/VOL- button to open sound output.

20: STOP

21: REPEAT

Repeat selected single song or whole disk.

- a) Single repeat

Press repeat button for the first time to repeat current chapter.

- B) Repeat whole disk

Press LOOP for the third time to repeat the whole disk.

22 : FM

Press MODE button on the remote control or the topside MODE button on the device to switch to FM mode when the device is on; Press LEFT/RIGHT button to search video channel, and once searching out, it would stop at current channel

23: Bluetooth(version 4.2)

Press MODE button to switch to BLUETOOTH mode when device is on. After you hear voice prompt from the speaker, enable Bluetooth on your phone, search and connect to DVD player.

24: MP3

This device is compatible with CD-ROM, CD-R, CD-RW, DVD-ROM, DVD-R, DVD-RW, DVD+R and RVD+WR with MP3/WMA file, and support disk with multiple catalogs.

Other functions: When playing MP3 disk, MUTE, VOL+/VOL-, PLAY/PAUSE and PREV/NEXT button work the same way as playing other disks.

25: AVI, XVID

Put a disk containing AVI or XVID file, the device would auto search and enter into option interface.

a) Press UP/DOWN button to choose catalog or file name; Press OK button or PLAY/PAUSE button to enter into selected catalog and play selected file.

b) In normal playing state, press STOP/RETURN button to stop playing and return from catalog option interface.

26: Setting

Regular setting: Press SET button to go into system setting interface

Press UP/DOWN button to choose and OK button to confirm; Press again to return from system setting.

a) TV system

Normal/Full screen:

When connect to normal TV, it would display wide screen with part of screen automatically cut(auto system is recommended).

Screen Protect:

Screen protect function is available and recommended to enable.

High resolution output:

HDMI output is optional.

b) Screen aspect ratio

Choose screen aspect ratio depending on different TV size.

c) Memory function

Memory function is on by default; When player is under normal playing state, in case of power down, it would restore to its last stop position and play when power on again. This function can be turned on/off.

27: MODE

When device is on, the default mode is Disc; Press MODE button on remote control, the displayed mode would be disc, USB, blue and FM mode; LCD screen would display relevant abbr. when switching mode.

28: A-B

Press A-B button on remote control for the first time to choose the start point, press A-B again to choose the end point; Then device would repeat the selected content.

Maintenance

1. Please keep device in place with enough air flow, avoid place subject to direct sunlight, extreme heat or moisture; Please use cloth dipped with diluent detergent to clean the device, avoid strong solvent, like alcohol, benzene or thinner;
2. Use clean and soft cloth to wipe disk from central area to outside;
3. Avoid putting disk in place subject to heat while cleaning; Do not bend the disk, and no sticker should be attached; Put it back into its storage case to avoid being scratched.
4. After using it for a long time, in case laser lenses get dirty and cause sound stuck, please use camera lens brush to clean dust, and use hair dryer(set to cold wind) to blow it for a while; Or use clean cotton bud dipped with a small amount of anhydrous alcohol to wipe laser lenses, then use clean cotton bud to wipe it.

Troubleshooting

Malfunction	Possible reason	Solution
Device not working	Device plug not fully inserted into power outlet	Fully insert device plug into power outlet
Unable to play	Disk not properly placed	Keep cover side upwards and place the disk again
	Incompatibility issue	Replace to other compatible disk
No sound output	Wrong operation	Follow instruction on the user manual when operating
	Volume setting low/dirty	Volume up
Sound stuck	Disk or laser lenses get dirty	Clean disk or laser
	Disk got scratched or curved	Replace the disk

 
After-sales Warranty Policy

From the date of its original purchase, VIFLYKOO provide 12 month limited warranty, for malfunction caused by non man-made factors, we would be responsible for replacement or refund at no extra charge.

Non-Warranty Provisions

1. The malfunction and damage caused by incorrect use, unauthorized repairs, misuse, modification, improper use of supplied power accessories, and alteration of tamper proof sticker;
2. Expire warranty period;
3. The product malfunction and damage caused by force majeure;
4. The product malfunction caused by incorrect operation.

Accessories:

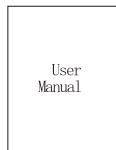


User
Manual



USB
adaptor



 Desk
stand

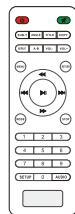

Remote
control



AV
cable



HDMI
cable



USB-Micro
cable

Product Warranty

Product name/serial number: _____

Order number: _____

User address: _____

Malfunction description: _____

Date of Purchase: _____

Telephone: _____

Maintenance log: _____

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference

received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.