




Touch Panel Smart Valve User Manual

Version:Rev.00

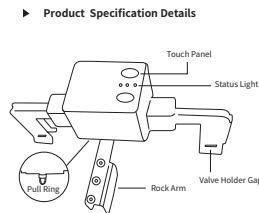

Model: WP-02SF
Product Name: Touch Panel Smart Valve
Power Supply:
Input: 100-240V AC
Output: 12V/1.5A DC
Valve Pressure: 1.6Mpa
Pipe Size: 1/2" 3/4" 1" 1.25"
Opening Time: 8-10 Seconds
Closing Time: 8-10 Seconds
Turning Torque: 30-60 kg.cm
Valve Type: Ball Valve

► Product Specification Details With Z-Wave 700 SIP Module




- High Performance 32bit
- Low Consumption
- High Performance of Receiver
- Internet Security Supported
- Using Transmission Speed
1-EU-983.4MHz
2-US-988.4MHz
3-HK-919.8MHz 4-NZ-921.4MHz / AUS-921.4MHz

► Product Performance



- (1)Valve
- (2)User Manual
- (3)Certificate
- (4)Power supply
- (5)25/38mm Tube bank:2
- (6)Ø2.5mm Allen wrench

► Product Setup

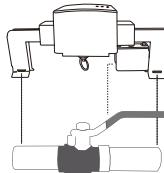

► Contain

- A.Loose all the three socket screws on the rocker arm with the Allen wrench(included in the package).

- B.Use your flathead screwdriver/ Phillips screwdriver to get two 25/38mm tube banks through the tube. Then get the tube banks through the valve holder gap. Put the handle into rock arm.

- C.Check if the rock arm and the valve handle are concentric, then tighten two tube banks.

- D.Fix the rock arm with valve handle, and tighten all the three socket screws on the rocker arm with the Allen wrench.

- E.Connect the power supplier DC output cable with the valve DC cable.

- F.Plug the power supplier in corresponding outlet.

► Product Adjustment

- A.Turn on the valve and touch the OPEN or CLOSE button, the handle will do corresponding motion.

- B.The rock arm will turn clockwise until the water is off when pressing and holding CLOSE button, at the same time the green light will be on. If the handle doesn't rotate 90 degrees, you may tug and hold the pull ring and turn the valve handle to the right position manually.

- C.Then release the pull ring, the valve will read the correct position and angles automatically.

- D.When pressing and holding OPEN or CLOSE, the rock arm will turn constantly. You may adjust your preference water flow with different angle.

- E.When the red light appears, the valve is on and working. When the green light appears, the valve is off.

► Link with Smart Center Hub

- A.Use with your smartphone APP or Hub controller to get in the "Add Device" menu.

Download Aiga Smart APP

- B.Click "Delete Device" and press the OPEN button for three seconds at the same time. Blue light will be blinking and the device will clear the parameter.

- C.Click "Add Device" and press the OPEN button for three seconds at the same time. Blue light will be permanent shining and a correspond symbol will appear on the menu list.

- D.Turn on or off your valve and control the status through your smartphone APP or Hub controller.

► After Sales Warranty

One Year Warranty for normal usage .



<https://www.glorkylin.com/>

FCC Warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.