


CONTROLS AND CONNECTIONS

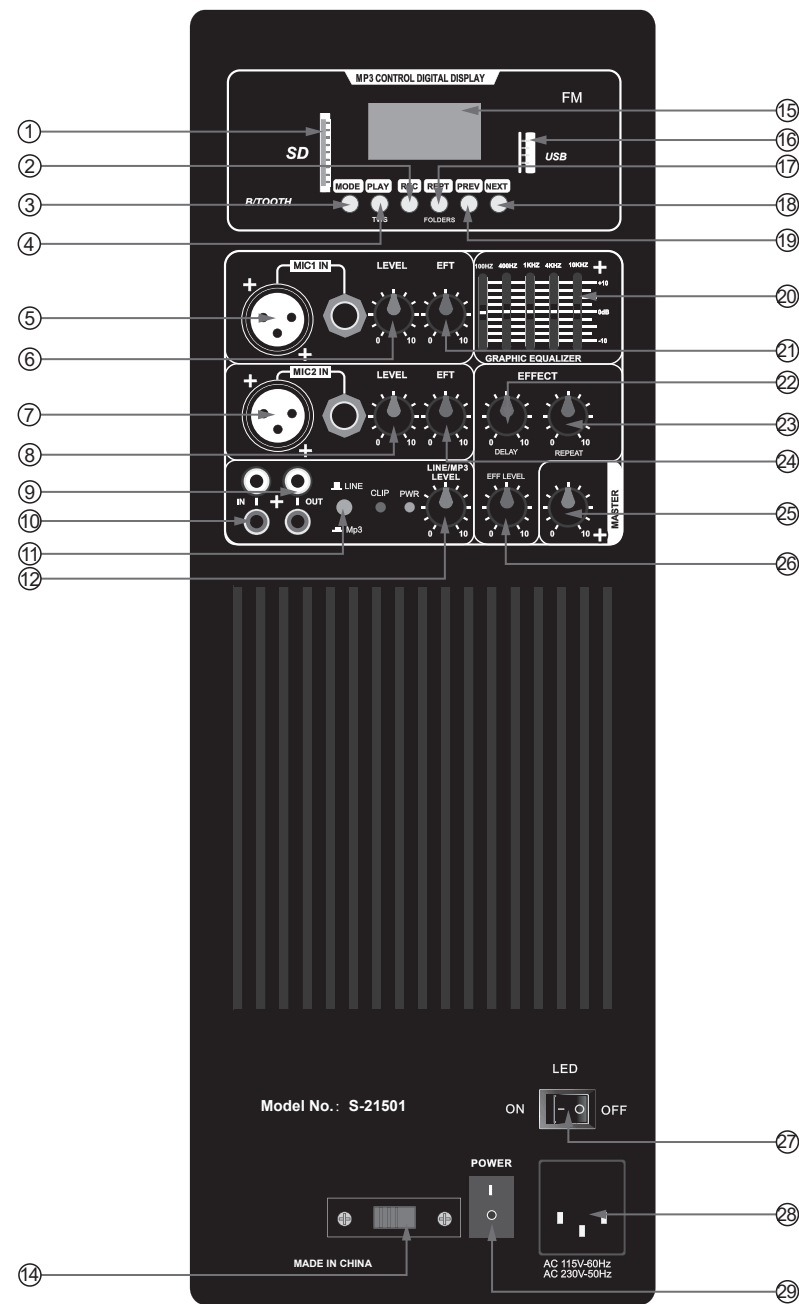



- ① SD input
- ② Recording
- ③ Mode(USB,SD,FM,BLUETOOTH)
- ④ Play/Pause /FM SCAN
- ⑤ XLR&6.35MM MIC1 input
- ⑥ Volume control
- ⑦ XLR&6.35MM MIC2 input
- ⑧ Volume control
- ⑨ RCA Line output
- ⑩ RCA Line input
- ⑪ MP3 / Line button
- ⑫ MP3&Line level control
- ⑭ Voltage button (AC 115v 60Hz/ AC230V 50Hz)
- ⑮ LCD screen
- ⑯ USB input
- ⑰ Recycle(single song recycle all songs recycle)
- ⑱ Next song/Next channel
- ⑲ Previous song/Previous channel
- ⑳ 5 Band EQ control
- ㉑ EFF control
- ㉒ Delay volume control
- ㉓ Repeat volume control
- ㉔ EFF control
- ㉕ Master volume control
- ㉖ EFF level volume control
- ㉗ LED lights switch
- ㉘ Fused IEC mains inlet
- ㉙ Mains power switch





MASTER

SLAVE



1.Press MODE button to transfer the speaker under Bluetooth mode.

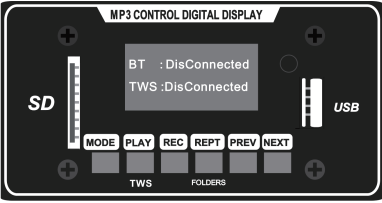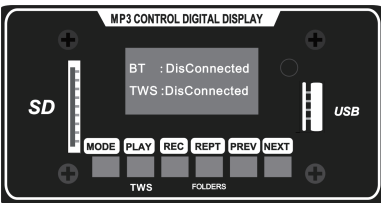

2. Press PLAY button 3s-5s to initiate the connectivity.

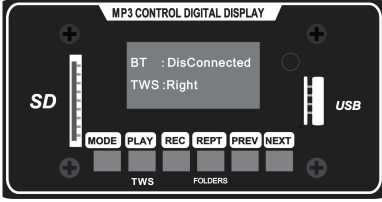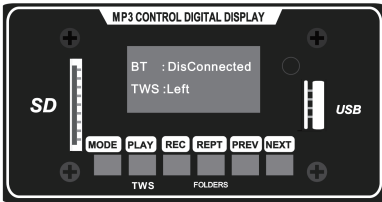

3. Connect the Bluetooth with your phone.

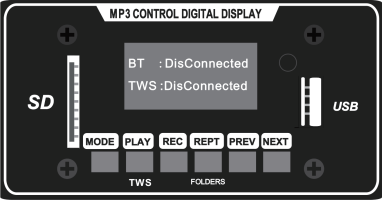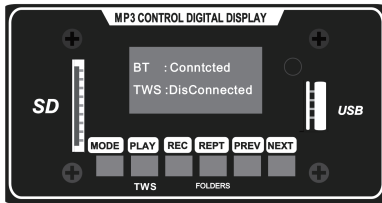

BT: Connected .(The phone only can be connected with MP3 module on the MASTER speaker)

BT: Disconnected .(Phone was disconnected with MP3 module)

TWS: Disconnected .(There's no interconnection on TWS)

TWS:SLAVE .(TWS connected successfully, Slave, right channel)

TWS: MASTRE. (TWS connected successfully, Master, left channel)

SPECIFICATION

RMS: 250W

Music: 500W

Woofer: 2x15" 50 OZ Y30 magnet

Tweeter: 1.35" 13 OZ 8 ohm, Ti driver

Voice Coil: 25.6"

Frequency response: 40hz-20Khz

Coverage: H90°x V 60°