

The image is a detailed quick start guide for the Arize ASL220 Smart Lock. It is organized into several sections: 1. \*\*At a Glance\*\*: Shows the lock's front and back panels with labels for the Touch Keypad, Battery Cover, Keyway, Thumbturn, and Indoors unlock button. 2. \*\*Warning\*\*: A note about unauthorized changes to the device. 3. \*\*Installation\*\*: Step-by-step instructions with diagrams for preparing a Phillips screwdriver, identifying the exterior and interior assemblies, and adjusting the lock body's center distance (60mm or 70mm). 4. \*\*Usage Operation\*\*: Instructions for first use, calibrating the lock, unlocking with a password, and setting an initial password. 5. \*\*Pairing Mode\*\*: Instructions for pairing the lock with a mobile app. 6. \*\*Reset\*\*: Instructions for resetting the lock. 7. \*\*IC warning\*\*: FCC compliance information. 8. \*\*FCC Statement\*\*: A detailed statement about the device's compliance with FCC rules, including sections for English and French, and a radiation exposure statement. 9. \*\*Radiation Exposure Statement\*\*: A statement that the device complies with FCC radiation exposure limits. 10. \*\*FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY\*\*: A declaration that the equipment is in compliance with the FCC rules. The guide is presented in a clean, white layout with black text and diagrams.