

ENGLISH

ELECDER

FCC ID: 2AWQU-NANOBUDS

Elecdcer D18
Wireless Earbuds

Specifications


Bluetooth version	V5.0
Operation distance	10 m
Auto coding format	SBC AAC APTX
BT profiles support	HSP HFP A2DP AVRCP
Battery capacity	400mAh for each earbuds
Bluetooth transmission range	2402MHz-2480MHz
Power (Bluetooth)	8dBm
Earbuds weight	5g each
Earbuds	22*40mm

How to Wear?

The correct way of wearing
Put earbuds in the ear and gently rotate until 45° above
(as shown below).



Product Overview

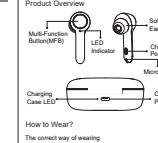

Power ON/OFF

Power ON:
When you open the charging case (with battery power inside), it will be power ON automatically and the blue LED will turn on.

Power OFF:
When the earbuds L & R are in power OFF after taking out of the charging case, long touch the L & R earbuds bottom to turn it on and the blue LED will turn on.

Power ON:
When you put the L & R earbuds into the charging case, long touch the L & R earbuds bottom to turn it off and the blue LED will turn off.

Note: Under BT disconnection status more than 5 mins, the L & R earbuds will be power OFF automatically.

Pairing

Stereo Mode:
1. Take out both earbuds from the charging case, the L&R earbuds will be automatically connected. Blue LED will turn on.



Monaural Mode:

1. Take out L or R earbuds from the charging case. Blue LED will turn off.



Multi Functions

Charging Mode:

1. Charging the earbuds
Take earbuds into charge case



* Charging: Red LED is on
* Full charged: Blue LED is on & turned off after about 10s

2. Charging the case by Type-C cable



* Charging: Red LED is on
* Full charged: Blue LED is on & turned off after about 10s

EARBUDS MAINTENANCE:

- Keep the earbuds away from high temperature and direct sunlight.
- Do not put the earbuds directly in the sun to burn, or the earbuds will be damaged, which will shorten the life of the earbuds (internal department of the earbuds).
- Do not try to disassemble the earbuds body.
- Do not drop the earbuds on a hard surface.
- Do not use sharp chemicals or detergents to clean the earbuds.

WARRANTY REGULATIONS:

The following conditions are not covered by the warranty:

- Because of buying second-hand or used products.
- Because of damage caused by natural disasters.
- Damage caused by human error, open flames, radioactive substances, toxic substances, liquids, sharp objects, etc.
- Do not drop the earbuds on a hard surface.
- Do not use sharp chemicals or detergents to clean the earbuds.

WARRANTY AND AFTER SALES:

If you need after-sales of any help, please contact us by the email "support@elecdcer.net", we will do our best to solve your problem.

For more information, please visit <http://www.elecdcer.net>

Thank you for purchasing your new Elecdcer D18 true wireless earbuds.

We recommend that you spend some time reading this instruction manual so that you fully understand all the operating features of the device.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Safety Rules

1. Charge the earbuds and the charging case at least once every 6 months.
2. Do not expose the product in extreme temperature (below 0 °C or above 45 °C).
3. Do not use sharp objects to clean the product.
4. Do not drop or knock the product on hard surfaces.
5. Do not use sharp chemicals or detergents to clean the product with sharp objects.
6. Do not try to take the product apart.

-01-

-02-

-03-

-04-

-05-

-06-

-07-

-08-

-09-

-10-

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.