 


User Manual

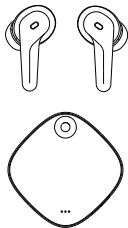

True Wireless Earbuds

Model NO.: PT-600

Thank you for purchasing your new PT-600 true wireless earbuds.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

 
Safety Rules

1. Charge the earbuds and the charging case at least once every 6 months.
2. Do not store the product in extreme temperature (below 0℃ or above 45℃)
3. Do not use chemicals or detergents to clean the product.
4. Do not drop or knock the product on hard surfaces.
5. Do not scrape the surface of product with sharp objects.
6. Do not try to take the product apart.

In the Box

Wireless Earbuds
Portable Charging Case
Type-C Charging Cable
User manual
Ear-Tips x 4 (S/M/L)

Product Overview



1. Touch Area
2. Microphone/LED indicator
3. Silicone Ear-tips
4. Earphones Charging Contacts
5. Microphone
6. Charging case LED
7. USB-C Charging Port

Find Your Fit

1. Choose the size of silicone ear-tips that you feel the most comfortable with.
2. Gently insert the earbuds into ears and adjust to an appropriate angle for comfortable fit.

Tips: Choosing the right ear-Tips will give you a better sound quality and noise reduction experience.



Specification

Bluetooth version	V5.1
BT profiles support	HSP, HFP, A2DP, AVRCP
Bluetooth range	10 m / 33 ft
Frequency response	20 Hz - 20 kHz
Battery capacity	40mAh for each earbuds 300mAh for charging case
Charging time	Around 2 hours
Playing time	6-7 hours
Talk time	Around 4 hours
Speaker Driver	φ10mm
Earbuds weight	5g each
Case weight	40g

Power ON/OFF

Power ON

1. Open the charging case, take out the earbuds, it will power on automatically.
2. Long press left and right earbuds for 3 seconds, the earbuds will power on.





Power OFF

1. Put the earbuds into the charging case, the earbuds will power off automatically.
2. Long press left and right earbuds for 6 seconds, the earbuds will power off.

Remark: Earbuds power off when they stay out of range for over 2 minutes.


Charging

1. Fully charge both the earbuds and the charging case before the first use.
2. To prevent damage, use the provided USB-C cable.
3. Fully dry off the earbuds and the USB port before charging.
4. Charging takes around 2 hours.
5. When fully charged, 3 white LED lights will stay on.

EARBUDS	● Red LED on	 Charging
	● Red LED off	 Fully Charged
CHARGING CASE	● White LED flashing	 Charging
	● Three White LED on	 Fully Charged

Pairing

 1. When using PT-600 True Wireless Earbuds the first time. Open the charging case, the earbuds indicator lights flash red and blue the “pairing mode” is on.
2. Turn on Bluetooth on your mobile device.
3. Search and select “PT-600”.
4. When successfully connected, the LEDs off.

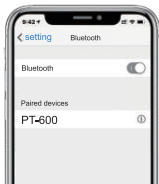

Multi Functions

Function	Left earbud	Right earbud
Play/Pause	Double tap	Double tap
Next song		Long press for 2s
Previous song	Long press for 2s	
Volume up		Single tap
Volume down	Single tap	
Answer a call	Single tap	Single tap
End a call	Double tap	Double tap
Reject a call	Long press for 2s	Long press for 2s
Active Siri/ Google Assistant	Triple tap	Triple tap

Factory reset

1. Make sure the earbuds are disconnected with device.
2. Take out the earbuds from the charging case.
3. Tap both the earbuds for 6 times quickly.
4. The two earbud red LEDs flash 3 times, indicating that the reset is complete
5. Place both the earbus inside the charging case and repeat the pairing process.

WARNING

1. Listening to earbuds at high volume levels, particularly over extended periods of time, may damage your hearing.
2. Supervise children when using equipment. This product is not a toy.
3. The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.