



K1

User Manual




1.GETTING STARTED

1.1.HDTV Connection :


- Connecting HD cable to both the device and HDTV set.
- Connecting device to power

1.2.Connecting diagram :

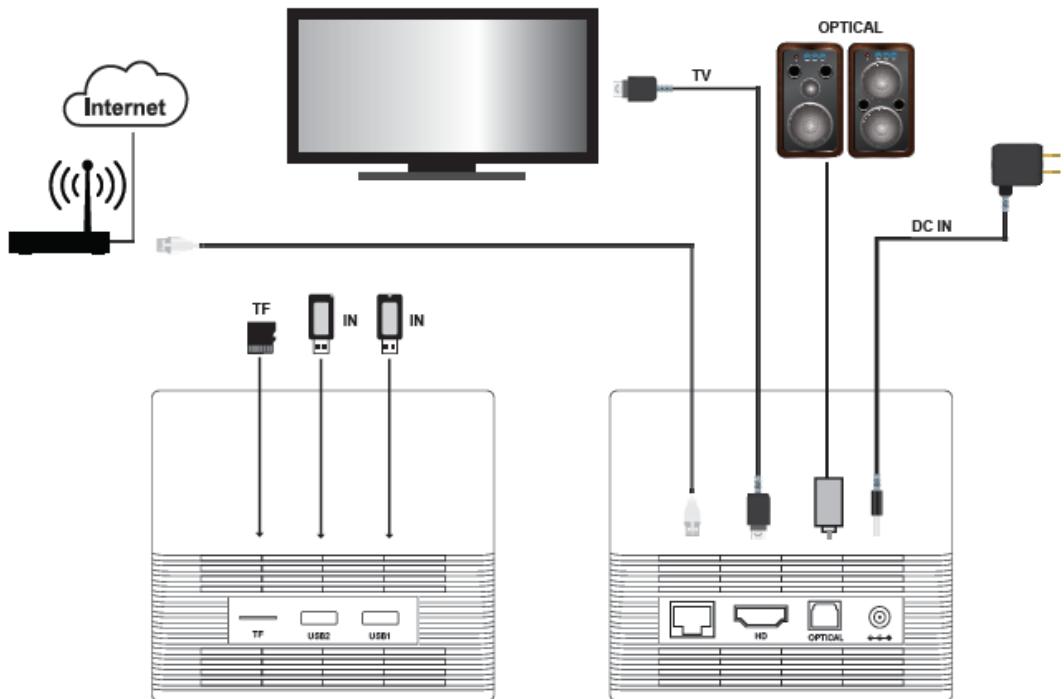

1.4.2.4G voice flying mouse

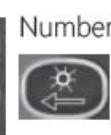

-  POWER: Power off or standby.
-  HOME: Fast key to go back to main menu.
-  MENU: Press to choose function menu of corresponding application in video,music,photo and website.
-  RETURN: Press to return back to previous menu.
-  VOICE: Apply to Google browser or APP with voice search
-  VOL: Press to increase/decrease the volume.
-  Navigation: Press to navigate left/right/up/down.
Press OK to confirm your choice.
-  Number keypad 0-9: Press to input Arabic number.
-  Backspace/backlight :
Short press to enter backspace/Long press to turn on or off the backlight.
-  Air mouse/Product breathing lamp:
Short press to turn on flying mouse or off,
Long press to turn on breathing light or off


1.5.The device power will be off when disconnecting the device from the power adaptor

2.Open Applications

Use remote control to move the arrow cursor to hoover over the desired program and click OK to open the selected program.

3.Switch in the Applications

Click on "My apps" to view installed programs, click program icon to switch between applications.

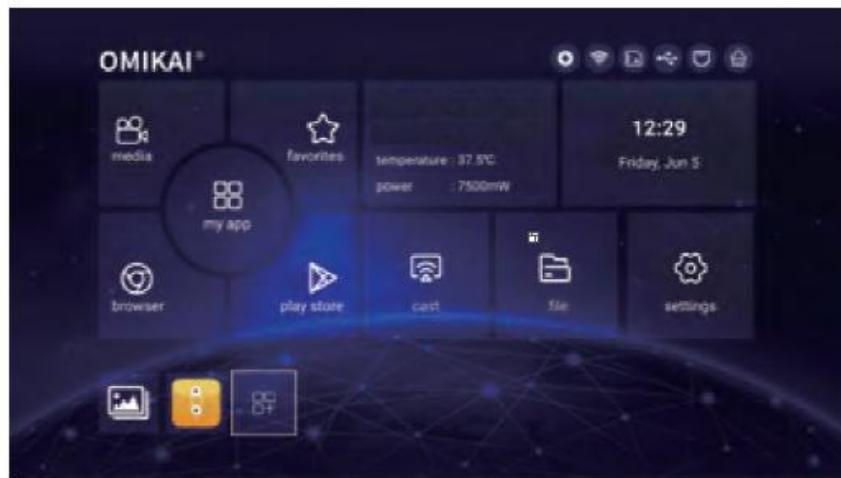

4.Close Applications

Click on the right key of the mouse to return to the previous step to close the application(applies when using a mouse).

5. My Apps


Move to "My Apps", click OK to enter.

All Apps' can be clearly distinguished from the icons.




6.WIFI Setting

- 6.1.Home Screen→Settings→Network→Select "Wi-Fi" to open WIFI setting.
- 6.2.Choose the network→Input the correct password→Connect to the network successfully

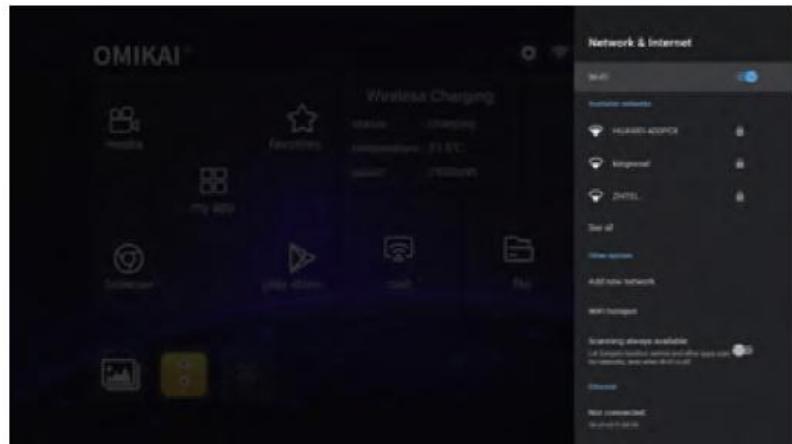


7. Ethernet Setting

- 7.1. Home Screen → Settings → Network → Select "Ethernet" to open Ethernet setting.
- 7.2. Connect network cable to the Ethernet port on the device → Once the cable is connected, network will be connected automatically.

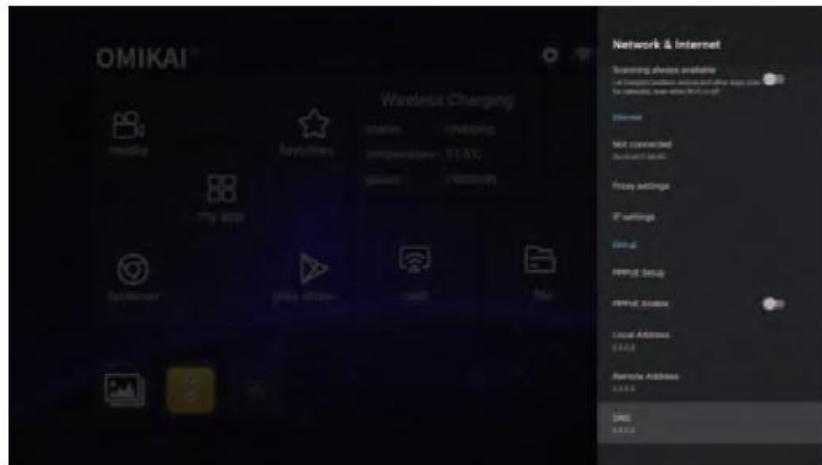

8.File Browser

- 8.1.Move to"File Browser" click OK to enter into the device list.
- 8.2.After inserting USB device or TF card,an USB icon would appear on the main screen to show the device is mounted.
- 8.3.After mounting successfully,one may copy,cut,paste or move the files and folders between local disk and external storage devices.

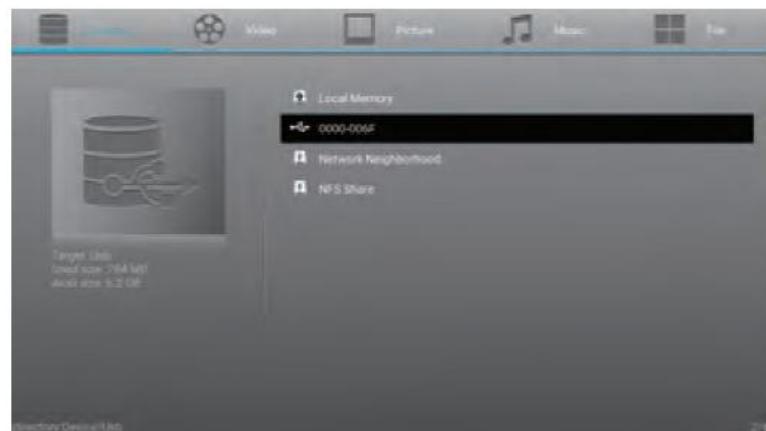

10.Trouble Shooting

For warranty purpose,please do not temper with the device. Should there is a fault occurred,please first consult the check list below before sending for repair.If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	★.Check if the power adaptor is properly connected to the power and the TV BOX ★.Press the power on the remote controller to turn on the power
No picture	★.Re-connect with HDTV cable ★.Check if the TV is switched on.
No sound or distorted sound	★.Adjust the volume. ★.Check that the speakers are connected correctly
No audio or digital output	★.Check the digital connecting. ★.Check if your amplifier is set correctly.
The player does not respond to the Remote Control Player does not respond to some operating commands during playback	★.Aim the remote control directly at the sensor in front of the TV Box ★.Reduce the distance to the TV BOX. ★.Replace the batteries in the remote control. ★.Operations may not be permitted. Refer to the user manual. ★.Possibility of system halted,re-insert with power adaptor to restart.
No sound during movies playback	★.The audio codec may not be supported by the TV BOX. You can change to the supported audio on playing menu. ★.Check the volume.
The contents of the USB flash drive cannot be read	★.The USB flash drive format is not compatible with the box. ★.If one of the USB can not be read,please turn off the TV BOX for 30 seconds and restart the TV BOX.
Slow operation of the USB flash drive	★.Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with HDTV connection	★.Check the connecting between the TV and the HDTV jack of box. ★.Check your TV system setup. ★.Check the volume.
The TV screen is blank and the player LED is blinking	★.Turn off your TV BOX, waiting for 30 turn it on again. ★.If under HDTV status,check if HDTV connection is correct or change another HDTV cable.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co - located for operating in conjunction with any other antenna or transmitter.