


DEXSCOUT



Mode:WJ-CP1
Portable Wearable Speaker

Get Your Speaker

Components At A Glance

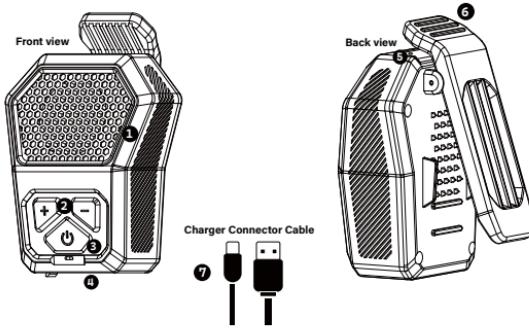

① Loud Speaker

③ ON/OFF Button

⑤ Microphone

⑦ Type C to USB

② Volume Button

④ Type-C Charge Port

⑥ Clip

Operation

Controls

- **To turn speaker on:** Press and hold the \diamond button for 3 seconds.
- **To turn speaker off:** Press and hold the \diamond button for 3 seconds.

Manage Your Music

- To play or pause music:
Press the \diamond button once
- **Forward (next song):** Press and hold "+" button for 3 seconds.
- **Volume increase:** Press "+" button." maximum volume" tone will hear if voice reaches maximum.
- **Backward (previous song):** Press and hold "-" button for 3 seconds.
- **Volume decrease:** Press "-" button." minimum volume" tone will hear if voice reaches minimum.

Call Control:

Use the \diamond button.

-**Answer / Hang up:**

Press the \diamond button.

-**Reject incoming call:**

Press the \diamond button.

-**Switch caller during call:**

Click the \diamond button.

-**Voice control-siri / google:**

Double-click the \diamond button.

Led Indicator

Led Indicator - Using Speaker

- **Speaker is power on and pairing to a Bluetooth speaker device:**
The red and blue LED flashes alternately.
- **Speaker is connected to a Bluetooth device:**
The blue LED stays on.
- **Speaker is powered on and not connected to a Bluetooth device:**
The red and blue LED flashes. If no connection can be made, the speaker will power itself off after 3 minutes.
- **Speaker is low battery level:**
The red LED will flash and you will hear the "battery low" tone.

Led Indicator - Charging Speaker

100% power = Green LED light stays on until cable is disconnected

80%-99% power = Green LED light flashes

20%-80%power = Blue LED light flashes

0%-20%power = Red LED light flashes

Bluetooth Mode

- Turn on the speaker, you will hear "power on-battery high (medium/low) -pairing".
- Then turn on the Bluetooth function of your phone and select "**WJ-CP1**" to connect.
- The speaker will say "your device is connected" when successfully connected.
- The speaker will say "your device is disconnected" when disconnect Bluetooth speaker.

Factory Reset:

Long press the "+" & "-" buttons for 5 seconds to reset when the speaker device is on, you will hear a beep tone, it means the speaker reset successfully.

Notes:

If your speaker was previously paired, be sure to "forget this device" in your Bluetooth device's "paired devices" list before resetting.

FCC Parts

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference , and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Notes: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

FCC Parts

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by affiliate, incorporation may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

Packing List

CP1 Speaker-----	1PCS
Charging Cable -----	1PCS
User Manual -----	1PCS

Technical Data-Speaker:

Music Time	Up to 10 Hours
Talk Time	Up to 8 Hours
Standby Time	>10 Days
Charging Time	Approximately 1.5 Hours
Operating Range	10 Meters (33 Feet)
Output Power	3.5W
Frequency Response	45Hz - 18KHz
Singnal to Noise Ratio	>90db
Input Power	DC 5V/0.4A
Battery Type	Li-ion Polymer 3.7V/600mAh

Storage Recommendations:

1. The best storage place is one that is cool and dry, away from direct sunlight and excess heat or cold.
2. For long storage, it is recommended to store the speaker in a cool dry place for optimal results.