

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm.

Welcome

Thank you for purchasing a Naki PulseMax. The PulseMax will provide you and your family with hours of education and entertainment from approved music, stories, stations and shows.

For more options and choices of content available to hear on your PulseMax be sure to visit the Portal at portal.naki.audio or simply use the QR code. Once you create a free account and link your PulseMax, you can add/remove content, use parental controls to limit usage, and more.

To get the most out of your PulseMax please refer to the online user guide which you can find here support.naki.audio or use this QR code.

Safety

Please refer to the online User Manual for all safety instructions.

Features

The PulseMax is an advanced but easy-to-use Wi-Fi connected audio system with the following modes:

- PulseMax plays pre-approved radio stations and podcasts from around the world.
- Bluetooth®-In for external music sources, such as from a smartphone, tablet or other media players.


The PulseMax also provides the following features:

- Color screen for easy control and clear information display.
- Clock with auto-update capability and dual independent alarms with Sleep/Snooze.
- Multiple network profiles for easy setup and portability.
- Multiple language options including Hebrew.
- Rechargeable battery.
- Hand recess to enable easy carrying.

In the Box


Carefully remove PulseMax from its packaging and place it down on a hard, flat surface. The PulseMax should be set upright, in a level position. After you unpack the box, you will find the following items:

- 1 PulseMax
- 2 USB-C power adaptor (select between US or EU depending on your region)
- 3 Quick Start Guide

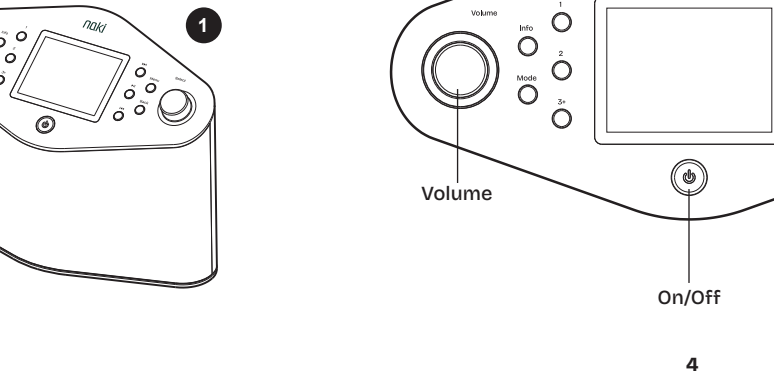


Controls

Press the ON/OFF button to power on the device. Rotate the SELECT dial to navigate up or down through menus, and click to make a selection. Rotate the VOLUME dial to adjust the volume during playback, or click to mute sound.

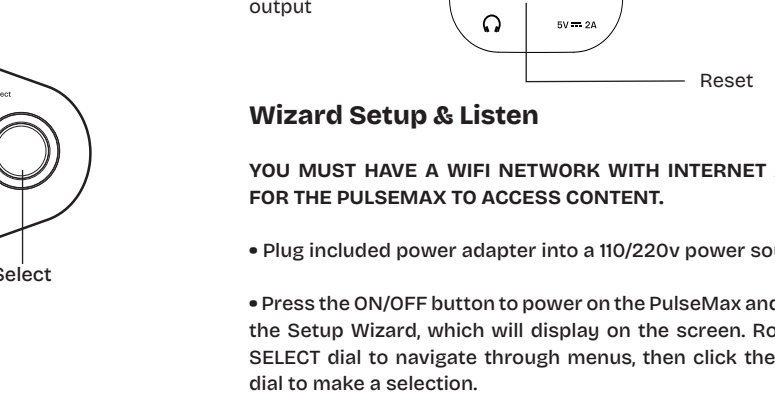

Connectors

The PulseMax has two connectors in the rear, a USB-C to power and charge the battery and jack to plug in wired headphones.

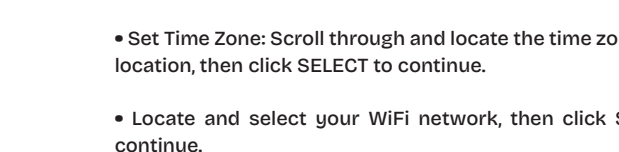

Wizard Setup & Listen

YOU MUST HAVE A WIFI NETWORK WITH INTERNET ACCESS FOR THE PULSEMAX TO ACCESS CONTENT.

- Plug included power adapter into a 110/220v power source.
- Press the ON/OFF button to power on the PulseMax and to start the Setup Wizard, which will display on the screen. Rotate the SELECT dial to navigate through menus, then click the SELECT dial to make a selection.
- Select a time format. Click SELECT dial on the unit's right side to accept.
- Update from Network: Select YES to automatically update the time and date on your PulseMax.
- Set Time Zone: Scroll through and locate the time zone of your location, then click SELECT to continue.
- Locate and select your WiFi network, then click SELECT to continue.
- Enter your WiFi password/key by rotating and clicking on the SELECT dial. Uppercase/lowercase letters, numbers and symbols are located by scrolling with the SELECT dial. When complete, rotate the SELECT dial until OK is highlighted, then click SELECT to confirm.
- Highlight Content List and click the SELECT dial. Rotate the Select dial to highlight the selection of your choice, and click SELECT dial to start listening.
- Press the ON/OFF button to place the device in Standby mode.

Presets

To save a preset, press and hold Preset 1 or 2 until PRESET SAVED appears. To recall from preset, press button 1 or button 2.

For additional preset slots, use the 3+ button. To save additional presets, press and hold the 3+ until SAVE TO PRESETS appears.

Highlight a slot in the menu and click the SELECT dial to save preset to slot.

To recall from Preset, click the 3+ button, use the SELECT dial to highlight a preset, and click the SELECT dial to begin playback.

