

Manual for the Remote Control

Thanks for choosing our product. In order to better use this product, please read this manual carefully before using. This manual will guide you how to correctly use and maintain this product.

Our company will keep providing you with high-quality products with the spirit of pursuing perfection and meticulousness. Thank you.

Product Feature

The Remote Control is exquisite and light with smooth control, long control distance, strong anti-interference capability, long service life, and beautiful appearance.

It can support up to 21 key-value codes, and millions of address codes with good frequency consistency and stable performance. It is especially suitable for supporting the use of various radio remote control systems.

Specifications

Product Name	Wireless Remote Control
Model	DD1601
Appearance Size	86*40.5*7.5mm
Battery	CR2025 or CR2032, DC3V
Operating Voltage	2.5V~3.4V
Working Current	≤10mA
Quiescent Current	≤3uA
Emission Source	RFID
Emission Frequency	433MHz
Operating Distance	8~20m (axis with no block and within operating voltage)
Effective Angle	120°
Surface Material	0.15mm PET
Keystroke Life	≥10,000 times
Operating	-25°C~+55°C
Storage Temperature	-25°C~+55°C
Weight	16g

Use Instruction

1. Please pull out the transparent battery separator at the bottom before use.
2. Press the corresponding buttons on the panel to realize the corresponding remote-control function. When a button is pressed, the LED indicator on the top of the panel will turn on.
3. Press the buttons on the panel. When receiving terminal receives the corresponding signal, corresponding function will be realized.

Trouble Shooting

1. If there is no response and the indicator is still off after the remote-control button is pressed when it is used for the first time.

Solution: The transparent battery separator at the bottom is not

removed. Please pull it out.

2. The indicator light is on when using the remote control, but there is no response from the receiving terminal.

Solution: 1) The Remote Control should be aimed at the receiving end, and ensure there is no obstruction in between to avoid remote control effect from being affected.

- 2) The distance is too far. Please move to a suitable distance before using the remote control.

3. After long-term use, the remote-control button does not respond after pressing and the indicator light does not turn on.

Solution: The battery is low. Please replace the battery of correct type, and pay attention to the direction of the battery when installing.

 **Explosive Hazard:** DO NOT throw this product into fire, as this may cause an explosion.

 **Attention:** Non-professionals are not allowed to disassemble this product, as this may cause permanent damage. If you have any questions, please contact our company or an authorized service provider.

Warranty

Thank you for purchasing our product. From the date you purchase this product, you are eligible for free warranty for 1 year (batteries excluded).

Warranty means that our company is responsible for repair or replacement of the products sold by the company in the event of failure or damage. All losses caused by other human factors will not be borne by the company.

Repair Procedure

Before requesting a repair, check the instructions to make sure that a problem indeed occurs to the product. If it cannot be resolved, please contact our company or authorized service provider and describe the cause of the failure in detail, including the product's model and usage condition. This information is very important for us to solve the problem quickly.

Damages caused by the customer due to improper use or failure without following the instructions in this manual or other irresistible natural disasters, etc. are not included in the warranty. In these cases, our company will not be responsible, and the repair procedure will be carried out in accordance with the procedure stated above, but repair cost will be charged.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution:

Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty Card

Model	
Name	
Purchase Date	
Address	
Service Provider (Sealed)	