

aiwa

Wireless Party Speaker

with Lighting Effect




Item: AI6003

User's Manual

WHAT'S INCLUDED


- AI6003 Wireless Party Speaker
- USB-C Charging Cable
- Wired Microphone
- Carry Strap
- User's Manual with Warranty Information

A CLOSER LOOK

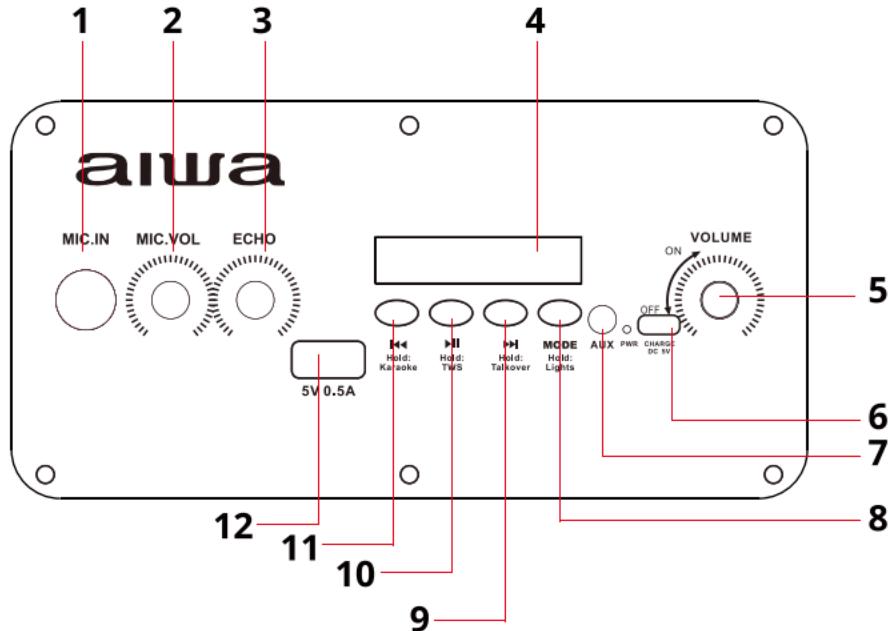


- 1. Microphone In Jack
- 2. Microphone Volume Knob
- 3. Echo Effect Knob
- 4. LCD Display Screen
- 5. Volume Control / Rotate for On/Off
- 6. DC 5V Charging Port
- 7. Aux In Port
- 8. Mode Button (hold for lighting)
- 9. Next Track (hold for talkover)
- 10. Play/Pause (hold for TWS)
- 11. Previous Track (hold for karaoke)
- 12. 5V, 0.5A USB Port (for charging)


CHARGING

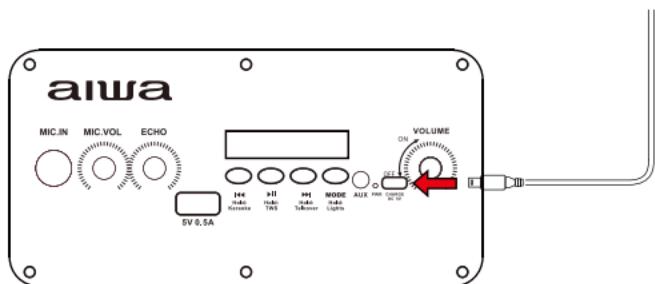

Insert one end of the included USB-C charging cable into the DC 5V charging port on your speaker.

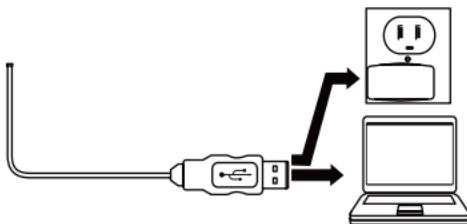


Insert the other end into the USB port of a computer or suitable USB charging adapter.

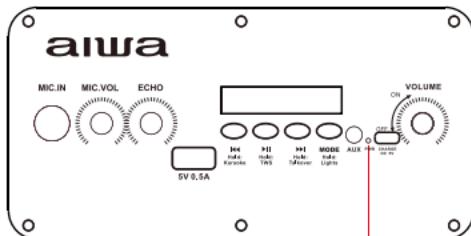

Charging (Indicator is ON)

Charging Complete (Indicator Off)

POWERING ON/OFF

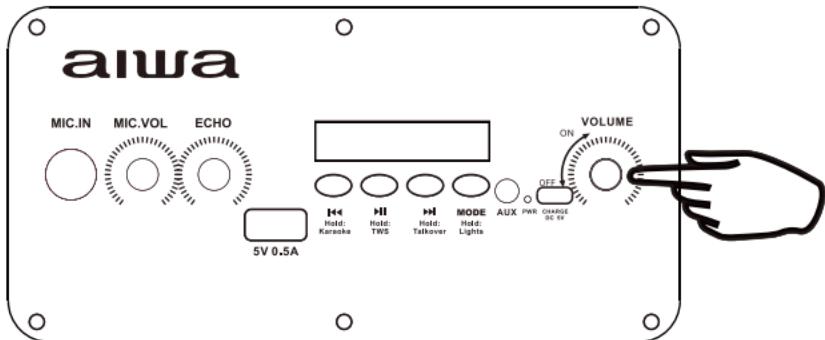


Turn the Main Volume Knob to the right to power on your speaker.

Turn the Main Volume Knob all the way to the left to power off your speaker.

NOTE: You can use your speaker while it charges.

BLUETOOTH PAIRING

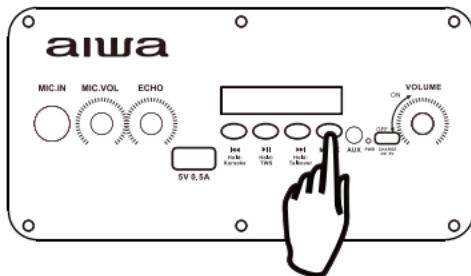

Power on your speaker. Then press the mode button repeatedly to toggle through your speaker's various modes. Make sure BT (Bluetooth) mode is selected.

NOTE: Your speaker has three modes:


- Select BT mode to pair your speaker to a Bluetooth enabled device.
- Select AUX mode to listen to music from a device connected to your speaker's Aux port.
- Select FM mode to listen to FM radio.

ADDITIONAL NOTE: Press and hold the Mode button to change the speaker's lighting modes.




Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA Party 6003."


LISTENING TO MUSIC

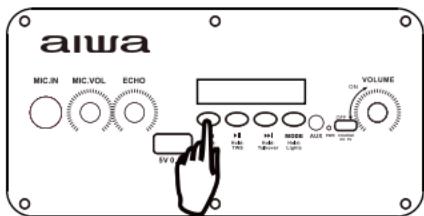


Press the **I◀** button to go back to the last track in a playlist.

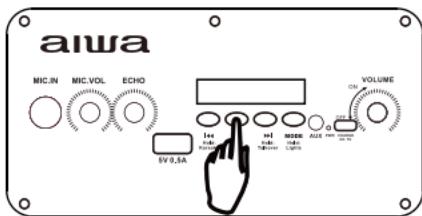


Press the **▶▶** button to play or pause a track.

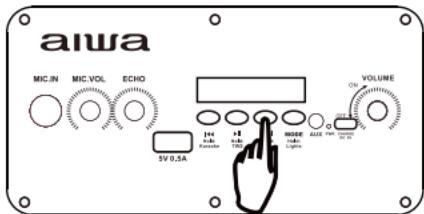

Press the **▶▶** button to go forward to the next track in a playlist.

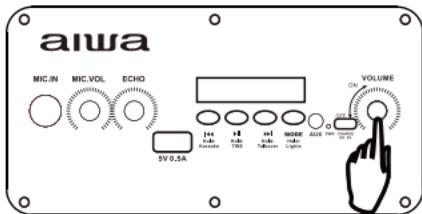


Twist the main volume to increase or decrease volume.

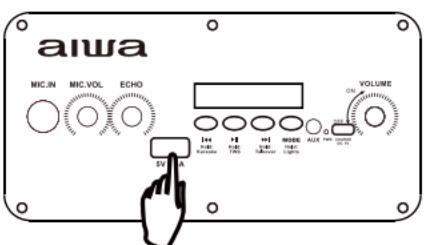

USB Port


USB powered devices can be charged by your speaker by plugging them into the 5V 0.5A charging port.

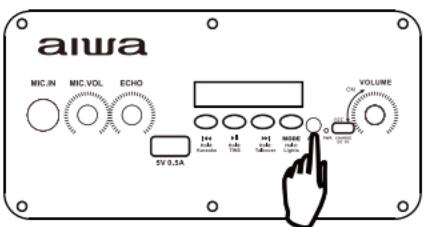


AUX IN Port

Connect one end of a 3.5mm Aux cable (not included) to the Aux In port on your speaker. Connect the other end to the headphone jack on your audio device in order to listen to music using a wired connection.


KARAOKE FUNCTIONS

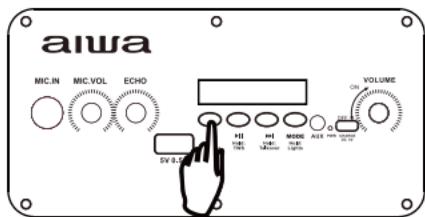


Press and hold the **◀◀** button to turn on or turn off karaoke function. Karaoke function reduces the volume of vocals in the music that you are listening to so that as you sing into your microphone, your vocals stand out.

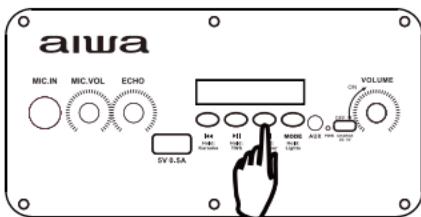

Press and hold the **▶▶** button to turn on or turn off talkover function. Talkover function reduces the volume of music compared to the audio of your microphone. Talkover function is useful to make quick announcements over music.

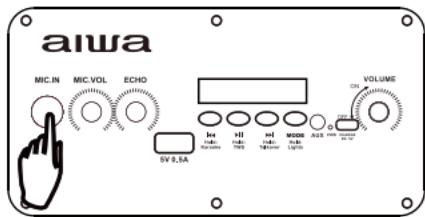


Plug the included microphone into the Microphone In Jack in order to use your speaker's karaoke function. Slide the microphone's power switch to the on position to power it on.

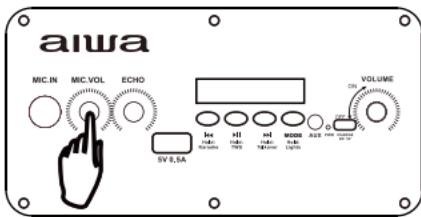

Turn the Microphone Volume Knob to make your microphone louder or softer. Turn the echo knob to add exciting echo effects as you sing!

ADDITIONAL FEATURES

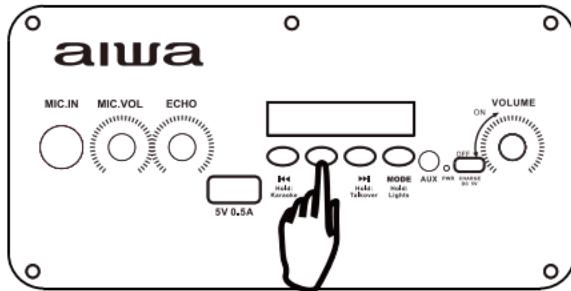

TWS Function

If you have two AI6003 Party speakers, enjoy high-quality sound by using the TWS pairing function.

First power on both speakers and put them in Bluetooth mode (but do not connect anything to them yet).

'bt' should be flashing on both displays.

Next press and hold the Play/Pause/TWS button on the first speaker.

't ON' will appear in the display and second speaker will now pair to it to will form a stereo pair.

'bt' will now be flashing on the first speakers display and the second one will have 'bt' showing non flashing.

Finally pair your phone/tablet etc to the first speaker in the normal way.

The first speaker display will then also stop flashing.

You can now play music to both speakers at the same time.

To disconnect the TWS pair press and hold the Play/Pause/TWS button on the first speaker (t OFF will appear and then the two speakers will disconnect from each other).

You can then go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA Party 6003."

SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge your speaker in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

Maintenance and Care

-Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.

-When your speaker is not in use, it should be stored in a cool, dry place.

-Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.

-Never expose your speaker to high temperatures, extreme cold.

-Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 5mm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna nr transmitter

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (877) 397-8200 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.



SAKAR®

©2022 Sakar International

195 Carter Drive

Edison, NJ 08817

www.sakar.com

Support: (877)-397-8200

support@sakar.com