

aiwa

Wireless Party Speaker

with Lighting Effects




Item: AI6004

User's Manual

WHAT'S INCLUDED


- AI6004 Speaker
- AC Adapter
- Wired Microphone
- User's Manual with Warranty Information

A CLOSER LOOK

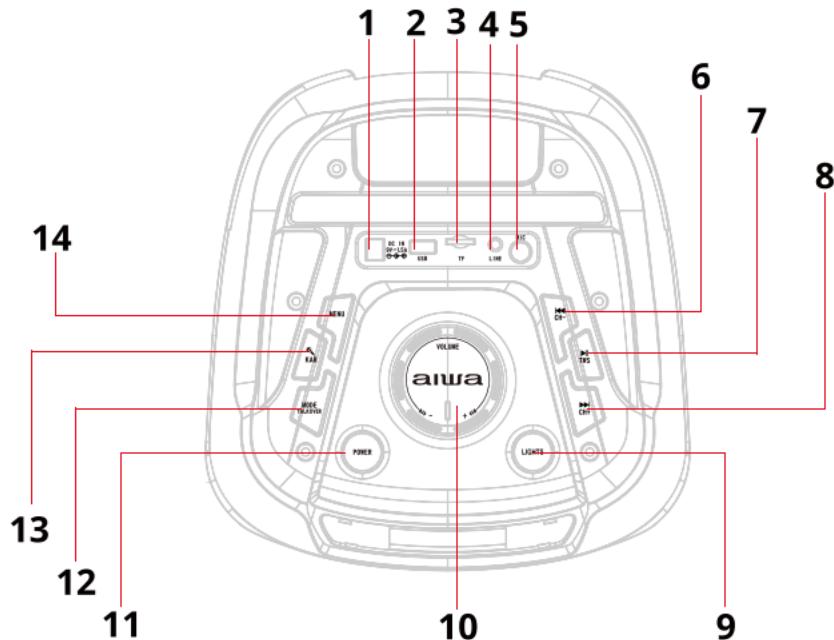


1. 9V 1.5A Charging Port
2. USB Input Port
3. Micro SD Card Slot
4. Aux In Port
5. Microphone In Jack
6. Previous Track
7. Play/Pause
(hold for TWS)
8. Next Track
9. LED Lighting Button
10. Master Volume
11. Power
12. Mode Button (hold for Mic Priority)
13. Karaoke Mode Button
14. Menu Button (treble/bass/
microphone volume/microphone
echo/microphone delay)

CHARGING

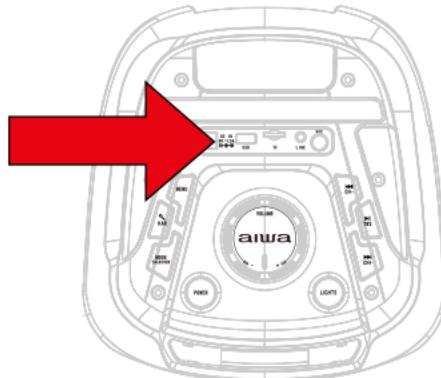

Insert one end of the included power adapter into the 9V 1.5A charging port.

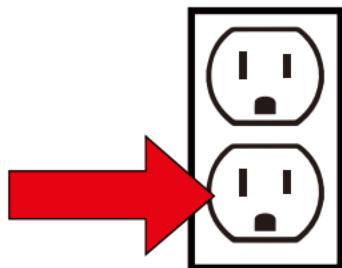

Insert the other end into a suitable wall outlet in your home.

NOTES:

1. You can use your speaker while it is charging.
2. Once fully charged your speaker can provide up to 4 hours* of playtime.


*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

POWERING ON/OFF



To power on or power off your speaker, press and hold the Power Button.

BLUETOOTH PAIRING

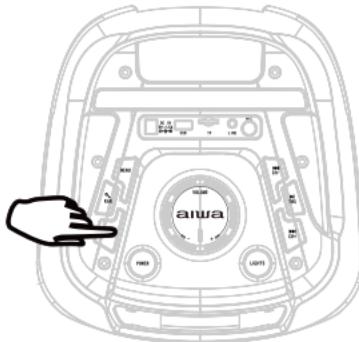

Power on your speaker. Then press the mode button repeatedly to toggle through your speaker's various modes. Make sure BT (Bluetooth) mode is selected.

NOTE: Your speaker has 5 modes:

- Select BT mode to pair your speaker to a Bluetooth enabled device.
- Select AUX mode to listen to music from a device connected to your speaker's Aux port.
- Select FM mode to listen to FM radio.
- Select USB mode to listen to .mp3 music files stored on a USB thumb drive.
- Select Micro SD mode to listen to .mp3 music files stored on a microSD memory card.




Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA Party 6004."


LISTENING TO MUSIC



Press the Previous Track button to go back to the last track in a playlist.

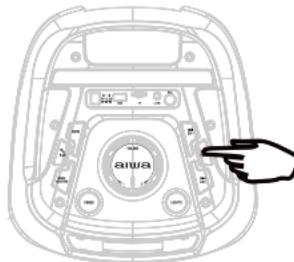

Press the Play/Pause button to play or pause a track.

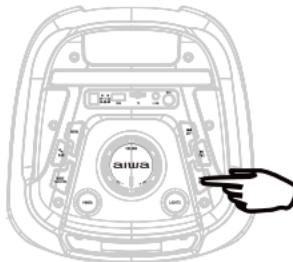

Press the Next Track button to go back to the next track in a playlist.



Twist the Master Volume knob to increase or decrease volume.



Long press the LED Lighting Button to turn lighting on or off. Short press to change the lighting patterns to add an exciting visual experience as you listen to music.