



# KARAOKE FUNCTIONS



Plug the included microphone into the Microphone In Jack in order to use your speaker's karaoke function. Slide the microphone's power switch to the on position to power it on.

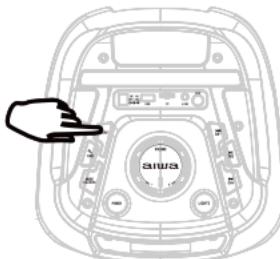

Press the Menu Button repeatedly to toggle between bass, treble, and echo sound effects.

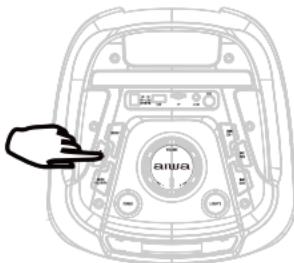


Press the karaoke button to turn on or turn off karaoke function. Karaoke function reduces the volume of vocals in the songs you are listening to so that as you sing into your microphone, your vocals stand out.



Press and hold the Mode button to turn on or turn off Mic Priority function. The Mic Priority function reduces the volume of music compared to the audio of your microphone. Mic Priority is useful to make quick announcements over music.

# ADDITIONAL FEATURES

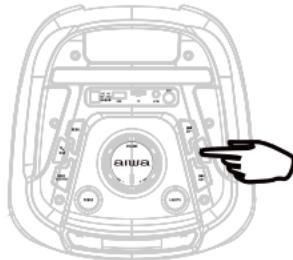

## TWS Function

If you have two AI6004 Party speakers, enjoy high-quality sound by using the TWS pairing function.

First power on both speakers and put them in Bluetooth mode.

Next press and hold the Play/Pause/TWS button on the first speaker (TWS ON will appear in the display).

The second speaker will now pair to the first and they will form a stereo pair.

Finally pair your phone/tablet etc to the first speaker in the normal way.

You can now play music to both speakers at the same time.

## Changing Modes

Your speaker automatically enters Bluetooth Mode when powered on. Press the mode button repeatedly to access USB, MicroSD, AUX and FM modes.

### USB Input Port

Plug a USB thumb drive into the USB Input Port on your speaker. Your speaker can play .mp3 music files from your thumb drive when in MP3 mode.

### MicroSD Card Slot

Slide a Micro SD memory card into the Micro SD Card Slot on your speaker. Your speaker can play .mp3 music files from your card when in MicroSD mode.

### AUX IN Port

Connect one end of a 3.5mm Aux cable (not included) to the Aux In port on your speaker. Connect the other end to the headphone jack on your audio device. In order to listen to music using a wired connection select Aux mode.

### FM Radio Mode

Select FM mode to listen to music from available FM radio stations. Press the last track and next track buttons to change stations.

# SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge your speaker in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

## **Maintenance and Care**

-Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.

-When your speaker is not in use, it should be stored in a cool, dry place.

-Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.

-Never expose your speaker to high temperatures, extreme cold.

-Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

# FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna nr transmitter

# WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

## To Obtain Warranty Service and Troubleshooting Information:

Call (877) 397-8200 or visit our website at [www.aiwa.co](http://www.aiwa.co).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.



**SAKAR®**

©2022 Sakar International  
195 Carter Drive  
Edison, NJ 08817  
[www.sakar.com](http://www.sakar.com)  
Support: (877)-397-8200  
[support@sakar.com](mailto:support@sakar.com)