

PAIRING YOUR DEVICE

Turn on the speaker by holding the power button (Figure 1) down for approximately 2 seconds; you should hear a power-up noise and see a flashing white LED light on the front of the speaker to indicate that the device is on and ready to pair. In the wireless pair settings of your mobile device, connect to the device named “Hydrobump”. You will hear a noise and see the white LED light turn solid, ensuring a successful pair. The speaker will automatically turn off if no devices are paired after 15 minutes or if no music playing /pause after 60 mintues. To connect to a new device, (while turned off) hold down the power button for 5 seconds until you hear noise. This tone means it’s scanning for a new device.

POWER OFF YOUR SPEAKER

Holding the power button (Figure 1) down for approximately 5 seconds until hear the power-off noise.

VOICE ASSISTANT


Holding the power button (Figure 1) down for approximately 1 second to active voice assistant and short press to quit it.

CHARGING

Connect the USB charging cable to a power source and insert the micro USB tip in the charging port located underneath the port flap. Let the Hydrobump reach full charge (approximately 3 hours if the battery was completely drained) before use. The LED light will turn red while the speaker is charging, and turn off once fully charged.

FUNCTIONS

- 1. Power button
- 2. Previous Track (long press)
Volume Down (short press)
- 3. Play/Pause/Call (short press)
- 4. Next Track (long press)
Volume Up (short press)
- 5. Work LED light
- 6. Micro USB Charge Port
- 7. Speaker
- 8. Strap

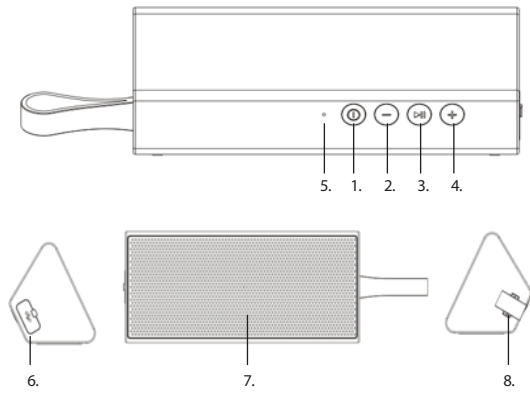

SPECIFICATIONS

- Dimensions: 2.7" x 2.6" x 7.2"
- Speaker Driver: 5 W
- Playtime: 6-7 Hours (@ 50% volume)
- Wireless Range: ≥33 ft
- Battery: Lithium ion 3.7V / 2200mAh
- Battery Charge Voltage: 5V / 1000mA
- Charging Time: 3-3.5 Hours
- IPX Rating: IPX7 Waterproof
- Built-In Microphone

LED INDICATOR

Power on: White LED

Pairing: Flashing white LED

Connected: Solid white LED

TWS Connection: Flashing white LED

Low Battery: Slow flashing red LED

Charging: Solid red LED

Origaudio™

www.origaudiopromo.com

H Y D R O B U M P

USER MANUAL



WATERPROOF WIRELESS SPEAKER

Your music knows no limits with the Hydrobump in TOW! This handheld wireless speaker is IPX7 waterproof, meaning you can take it to the beach, the pool, or even out in the rain.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.