

Warning : No part of this manual can be changed without agreement. The company reverses the rights to modify the technology, components, software and hardware. You may ask the distributors for more product information. No part of chapter in this manual can be copied or transmitted in any format.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Mini mobile Receipt Printer

Mini mobile Receipt Printer User Manual

Please keep use manual for reference

Packing :


Printer	1PC
Power charger	1SET
Data cable	1PC
Battery	1PC
User manual	1PC
Paper roll	1ROLL
software disk	1PC
Hang String(Optional)	1PC
Holster(Optional)	1PC

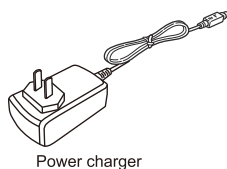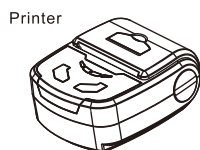

Install Paper roll

The installation method is as follows:

- (1) Install paper roll
- (2) Install battery

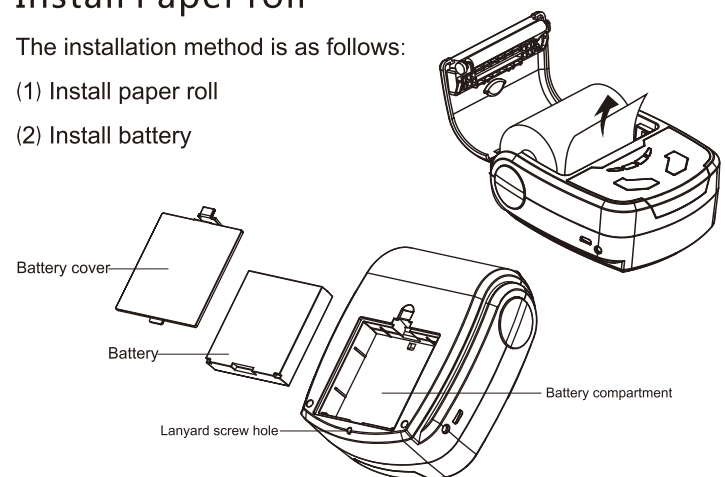

Note: The protective film of the battery needs to be removed before use otherwise the printer cannot be used!

Printer function introduction

Button name, LED and buzzer function :

① Power button

- A.Turn on: Press and hold the power button 2 seconds when the power is off, the printer enters the working state, and the power blue LED is on.
- B.Turn off: Press and hold the power button 3 seconds during the power-on state, the printer power is off, and all the LED are off.

② FEED button

Press this button to feed paper. If you press this button for a long time, the paper will be fed continuously.


③ LED and buzzer

POWER LED:

- a. Blue LED: Power on or Charging status
- b. Blue LED off: Battery is full

STATUS LED:

- a. Three red lights Glowing: Battery capacity is approximately 80%-100% or a power adapter is plugged in.
- b. Two red lights Glowing: Battery capacity is about 50%-80%.
- c. one red lights Glowing: Battery capacity is about 30%-50%.
- d. one red light flashes: The battery power is less than 30%, the print speed is reduced, and the printer needs to be charged.

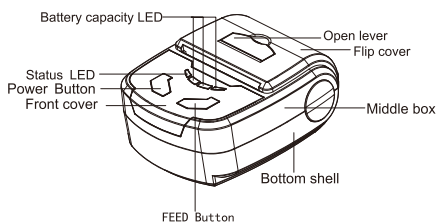

Buzzer

- a. Out of paper and overheating, the buzzer sounds every 2 seconds.
- b. Bluetooth connection: The buzzer rings once.

Self test

When the printer is turned on, turn it off first, then press and hold the FEED button and press POWER Button, wait 2-3 seconds, both buttons are released at the same time, the printer will print out the current status and printer settings.

3

Attention

1. Put printer on stable surface, level surface where avoid vibration.
2. Don't use and store printer in high temperature, high humid and serious polluted place.
3. Connect power adapter properly to grounded receptacle. Avoid using the same socket with large power consumption devices that can lead to power fluctuation.
4. Avoid water or other objects go into printer. Once happened, turn off printer immediately.
5. Print without paper roll will damage printing head seriously.
6. Unplug printer from power receptacle if do not use if for a long time.
7. Only use approved accessories, never try to disassemble, repair or remodel it.
8. Use standard power adapter.
9. Use high quality paper, this ensures the printing quality and life of printer.
10. Please turn off power before plug/unplug cable.
11. Printer is used only under 5000 meters.

Printer cleanup

One of the followings occurred, please clean printing head.

1. Printing is not clear.
2. Any vertical column is not clear.
3. Paper feed noisily.

5

Enter hexadecimal mode

When the printer is turned on, turn it off first, then press and hold the FEED button and press POWER button wait for 10 seconds. Both buttons are released at the same time. The printer first prints "Hexadecimal Dump" on the roll. The printer enters the HEX print mode at this time.


Initialization settings

When the printer is turned on, turn it off first, then press and hold the FEED button, and then press and hold POWER button, wait for 2 seconds, release the POWER button, wait for 20 seconds or so, after all the indicators of the printer go out, release the FEED button, At this point, the initialization has been completed. Press the POWER button again to start up and work normally.

Printer connection

A. Connect the adapter to the printer interface

B. Connect the interface to the user device. (When USB is connected to a mobile phone, users need to prepare their own USB data cable)

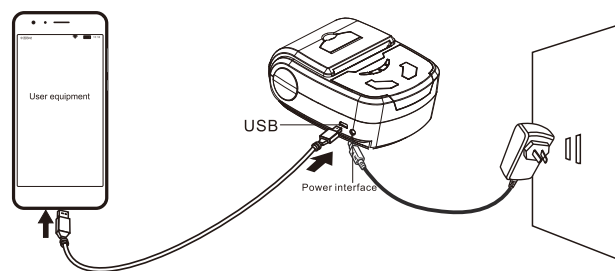

4

Printing head cleaning steps :

1. Turn printer off, release power cord. Open top cover, take out paper roll.
2. Wait till printing head cooling if it just finished printing.
3. Clean printing head completely using swab with alcohol (without water).
4. Until alcohol completely volatilized, close top cover.
5. Connect power again, print self test to check if it is clean.

⚠ Notice :

1. Please make sure power off when maintaining printer.
2. Don't touch or scratch printing head surface, roller and sensors.
3. Avoid gas, acetone or other organic solvent.
4. Wait till alcohol completely volatilized, close top cover and connect power again. Try print self test to make sure it works properly.

Claim

It is A level product and may cause radio jamming under working environment.

If so, It might require user take a proper measure to avoid it.

Manufacturers have the right to modify the contents of the instructions without making prior declarations!

6