


# Quick Start Guide

## MT800

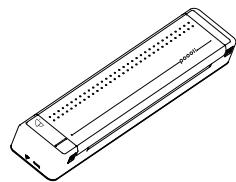


### Operation Procedures (From Mobile Phone)

1. Power on: Hold down the power button for 3 seconds, and then release it when the printer is turned on. (Power button is touch button)




Note: In power-on status, hold down the power button for 3 seconds to turn off the printer.

2. Loading paper: Put the paper into the paper inlet in parallel. Printer will feed a distance automatically after it detects the paper. If the buzzer sounds once when paper feeding stops, it shows that the paper is loaded successfully and the printer is ready.

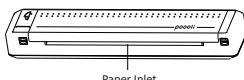

-7-

### Packing List

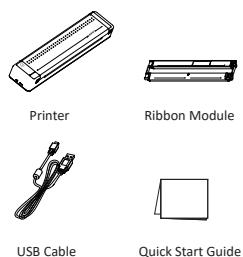

#### Note:

- 1) The packing items are actually dependent on the order.
- 2) The ribbon module is embedded in the printer when leaving the factory.

-1-

3. Download "Poooli A4" APP: Scan the QR code below to download the APP.




4. Connect with the printer: Open APP, click "Unconnected device" on the top right corner, find "Poooli A4-XXXX" (XXXX indicates last four digits of Bluetooth address) in the list of "Connectable devices", click to connect. After connection succeeds, return to the homepage.

5. Print: Choose the file to print, click the print icon on the top right corner to enter print preview, click "Print now" that the printer will conduct printing.


-8-

### Appearance and Components

#### ■ Front

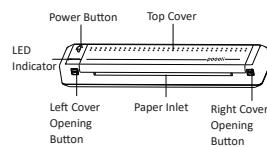


#### ■ Left

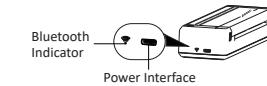

Note: indicates Bluetooth Function.

-2-

### Inner

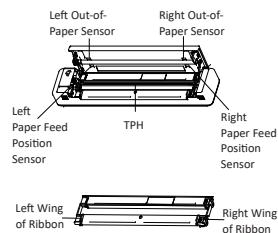

### LED Indicator

White LED indicator stays on: Printer is in standby status

Green LED indicator stays on: Printer is in charging mode, and green LED indicator will be off when fully charged

Red LED stays on: Printer is out of ribbon, please replace it


-3-

### NOTE:

Poooli A4 is only suitable for computer USB port power supply, please use the exclusive USB charging cable to connect to the computer for charging.

#### 2. Install Driver:

- 1) Double click the driver program.
- 2) Choose the setup language "English" and click "OK".

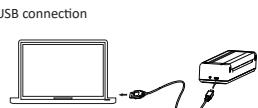


#### Bluetooth connection



-9-

### Loading Ribbon

1. Press the [PUSH] button on both sides of the printer at the same time, then lift the printer cover upward.

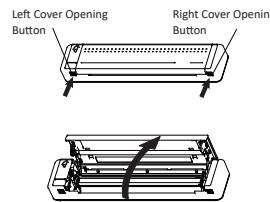

### NOTE:

The environmental condition of the ribbon is as below:

Operating Temperature: 5°C~35°C

Operating Humidity: 20%~85%RH

Storage Temperature: -5°C~45°C

Storage Humidity: 20%~85%RH


-4-

### NOTE:

To avoid errors when installing ribbon, please make sure that the arrow direction marked on the ribbon module is the same as the arrow direction marked on the printer.




### 5) Click "Finish".

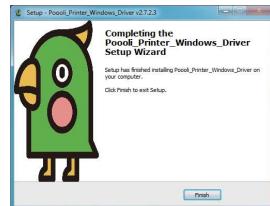


-11-


2. Hold the left and right wings of the ribbon by your hands, then align it to the place with the arrow marked on the printer and press it down.

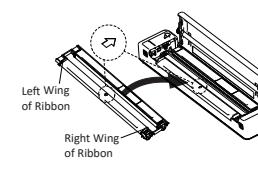

3. Rotate the ribbon rewind wheels of both top left and lower right (or top right and lower left) towards the center simultaneously to make it smooth.

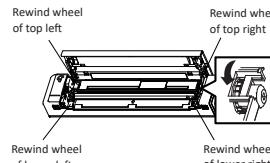

4. Press down the cover by hands until it clicks into place.

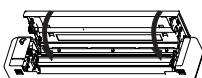

-5-

### Removing Paper

#### NOTE:

Don't pull the paper out forcefully while the printer cover is closed, or it may damage the printer. Please remove the paper as follows.

1.

2.

3.

4.

5.

6.


7.

8.

-12-

1. Press the [PUSH] button on both sides of the printer at the same time, then lift the printer cover upward.

2. Remove the paper.

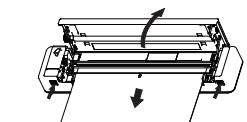

3. Rotate the ribbon rewind wheels of both top left and lower right (or top right and lower left) towards the center simultaneously to make it smooth.

4. Press down the cover by hands until it clicks into place.

5. Hold the left and right wings of the ribbon by your hands, then align it to the place with the arrow marked on the printer and press it down.

6. Rotate the ribbon rewind wheels of both top left and lower right (or top right and lower left) towards the center simultaneously to make it smooth.

7. Press down the cover by hands until it clicks into place.

8. Remove the paper.

-13-

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna