


## iScribe WIFI Quick Start Guide

- Once package is opened, please charge the pen using the USB cable for 1.5 hours.
- Download the iScribe application from the provided web link.
- Click On iScribe Setup file, the below shown iScribe icon will appear on your desktop.

 


- Double click /Open the 'iScribe' app, the iScribe window will open

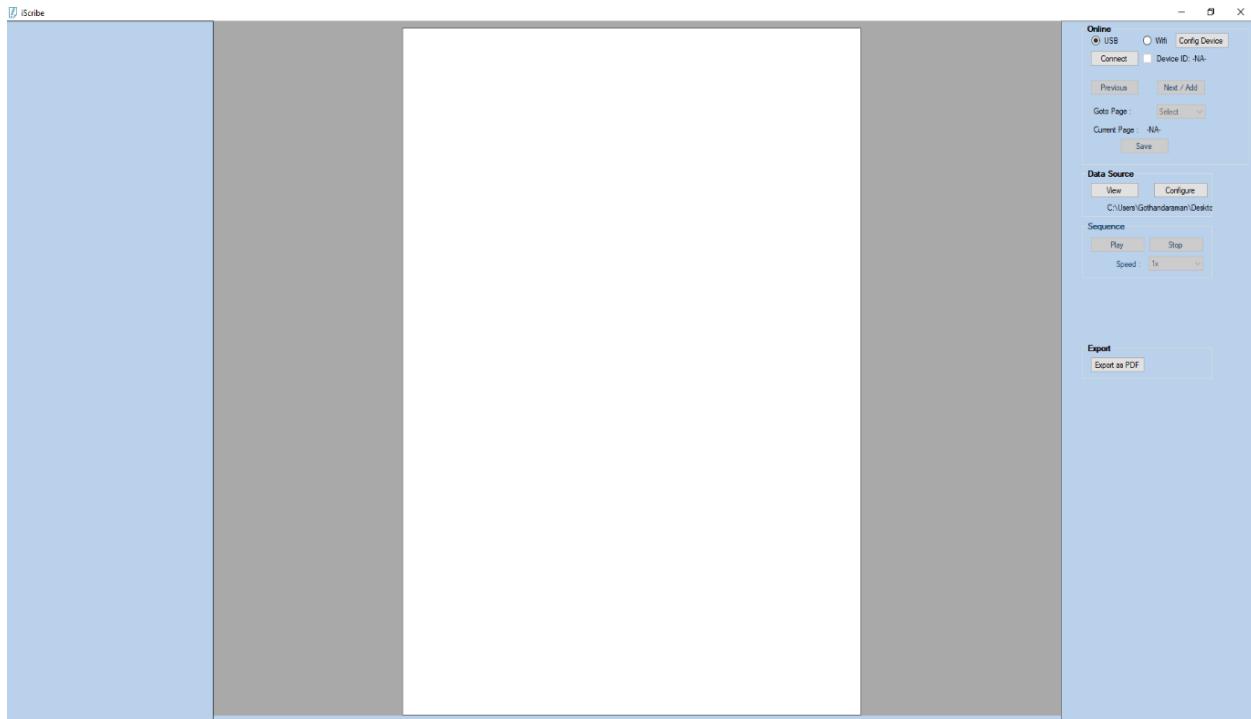

Step 1: Create a new folder on Window's Laptop/PC and rename it as 'Output-iScribe' (Custom name by user)

- a. Select the 'Configure' button on app and select the 'output-iScribe' folder on the route path.




- b. Once select the output folder, the output folder will be displayed.


C:\Users\Gothandaraman\Desktop

Note: Now you have configured the output path to save all your files/writings.

 
- c. Switch on the iScribe device. Once done, connect the iScribe device and laptop/PC through USB cable.

- d. Select 'USB' button  **USB** and click 'Connect' button 

 - e. Once 'Connected', the Connect button will change in to 'Disconnect' button.




- f. Insert normal (up to A4) size paper/notebook on the device and start writing with our 'Pen'.
- g. Once start writing, your writings will be display on the Application screen.

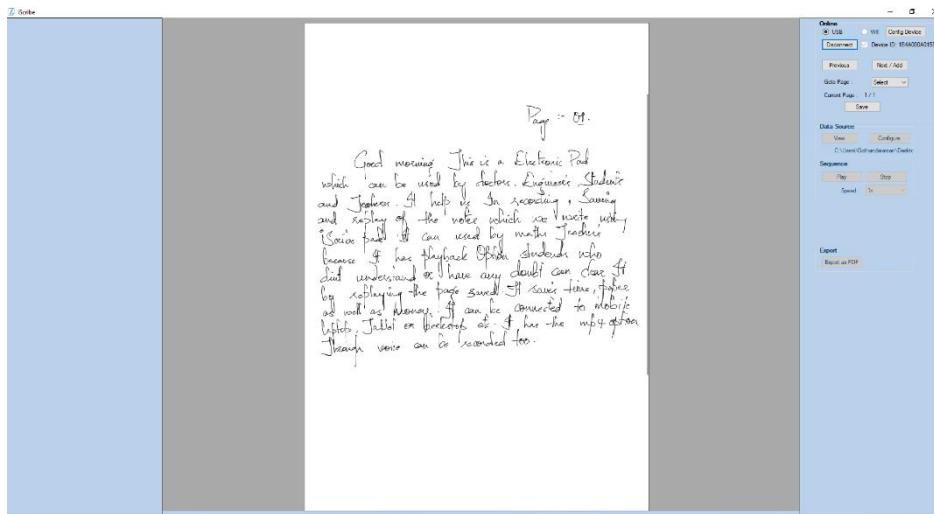


h. To Add/Edit on previous/next page, you can use button 'Previous' & 'Next/Add'.




- i. Button 'Goto Page' will help to jump in between the pages to edit.

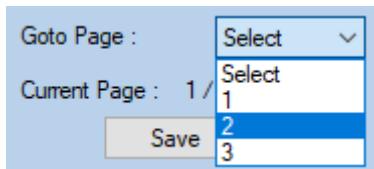


j. Button 'Pen Color' will help to choose any color from pallet and write in different pen color

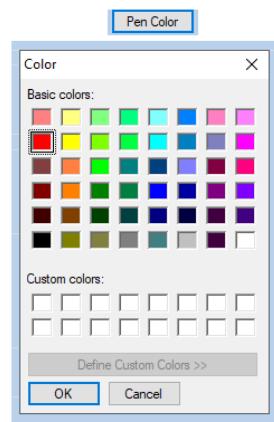

 
k. Once finish the writing on page(s), Press button 'Save'.




I. Once press button 'Save', the written pages will be saved in the output folder with title.

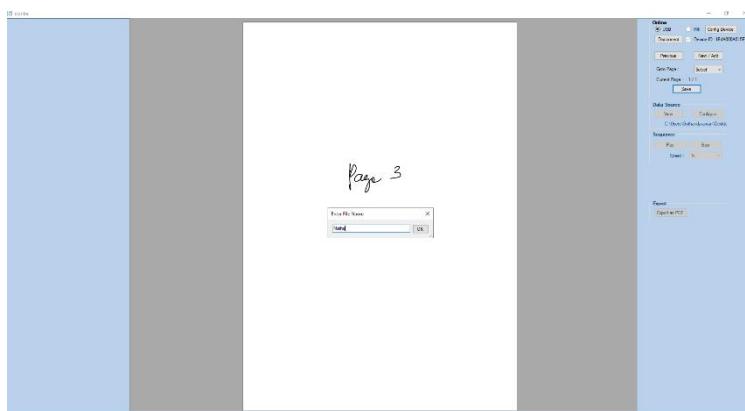


m. If you want to preview the stored files, Press button 'View'

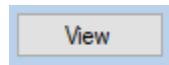


n. Once click 'View', the files will be displayed with 'Title\_Date & Time stamp' on the left side window.

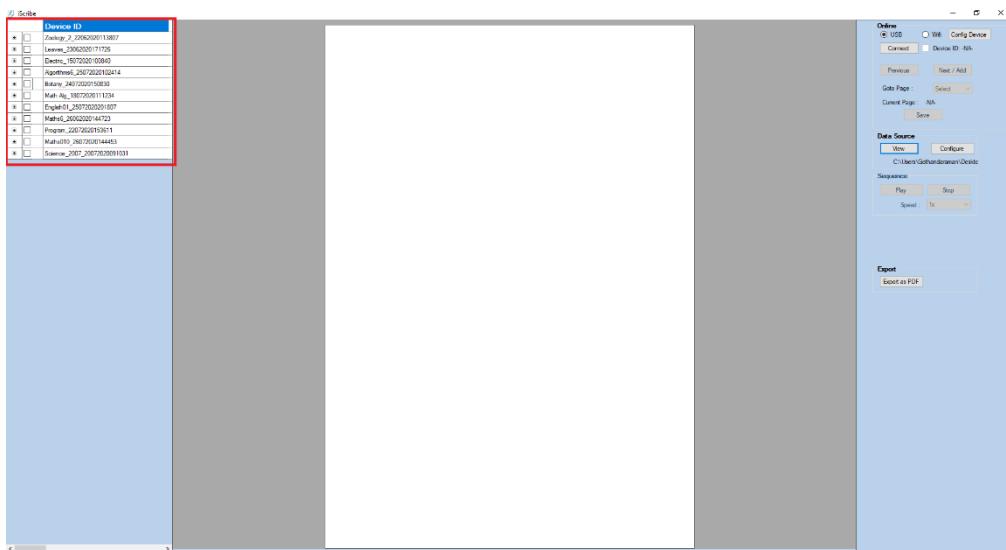


o. Select the particular file, you can view and also play back using the button 'Play'.

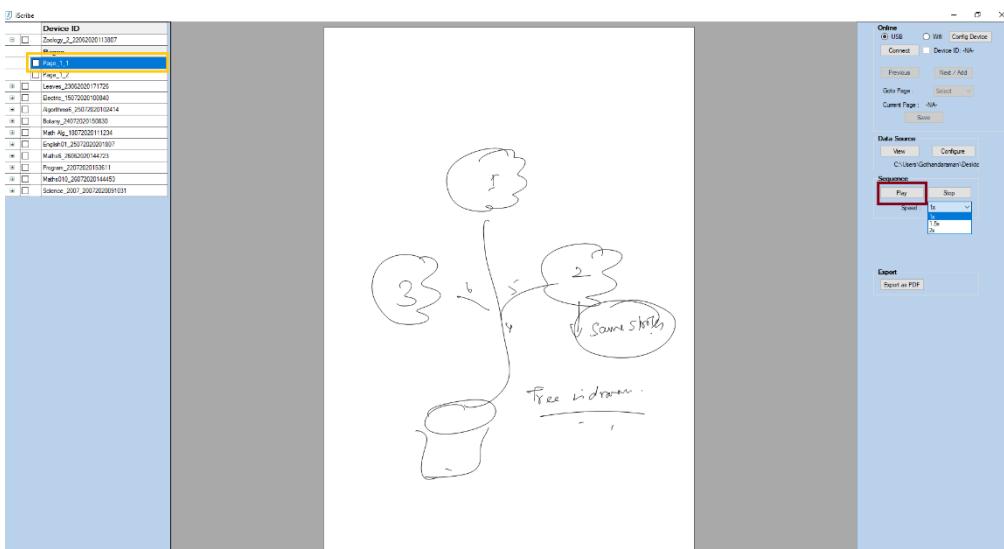


p. Increase/Decrease the speed of playing sessions using button 'Speed'

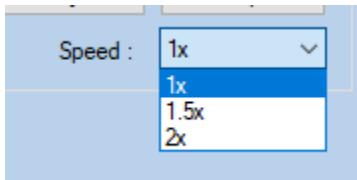

 
q. If need to stop in between press button 'Stop'



r. To export as pdf format, select the Particular parent file and press the button 'Export as PDF'

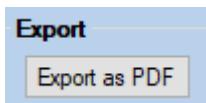



s. The exported pdf file will be stored in output folder on the particular title folder along with the XML file.

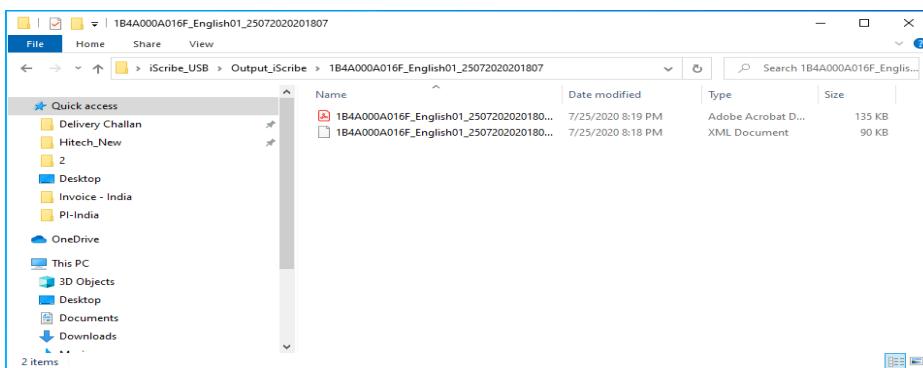

t. To replace the ink refill. Take the refill extractor and place the ink refill in the middle of the extractor. Hold the pen firmly, and apply pressure with the extractor against it and pull the used refill out.



u. To insert the new refill. Slide the new refill in to the pen and gently press the new refill until it is lodged properly in place.

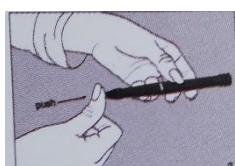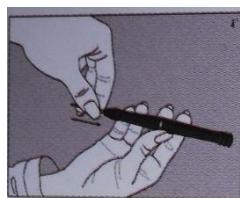

**Important:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

**Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.