

**KINGHAT**

# Digital Trail Camera

## HH-762(4G)



**KINGHAT®**

***Shenzhen Kinghat Technology Co., Ltd.***

Add: A401, B401, Building A,B, Mingjinhai Gushu Industrial Zone,  
Guxing Community, Xixiang Street, Baoan District, Shenzhen, China



## Content

<b>1. GENERAL INFORMATION</b>	2
1.1. Product use and scope of use	2
1.2. Product features	2
1.3. Working environment and conditions	3
1.4. Principle	3
1.5. Product structure	4
<b>2. QUICK START</b>	5
2.1. The battery	5
2.2. Insert SD card	5
2.3. Set the "TEST" mode	5
2.4. Enter real-time mode	6
<b>3. ADVANCED SETTINGS</b>	7
3.1. parameter setting	8
3.2. Files formatting	10
<b>4. WARRANTY</b>	11
<b>5. Appendix I: TECHNICAL PARAMETERS</b>	12
<b>6. Appendix II: PACKAGE CONTENT</b>	14
<b>7. Appendix III: FAQ</b>	15
<b>8. TROUBLESHOOTING</b>	16

## Preface

Welcome to using HH-762 series of digital trail camera, we are greatly honored that the HH-762 series of digital trail camera can get your trust.

In order to make you use our products conveniently and have a general understanding, we make the operating instructions specifically for you. Including the characteristics of the product, structure characteristics, technical characteristics, keypad operation function, simple instructions, troubleshooting, maintenance, etc. This is your essential guide when using this product. Before using, please read the instruction carefully, I believe it will be great helpful to you to use the product effectively.

In addition, if you have any questions when you using this product, please inquire by phone or email, we will serve you wholeheartedly.

## 1. GENERAL INFORMATION

### 1.1. Product use and scope of use:

HH-762 is a high-definition, waterproof product specially designed for outdoor. It can be using for anti-theft, security around houses, animal monitoring and observation, and outdoor hunting. Its concealment, waterproof and dust-proof design can realize the intelligent monitoring of suspicious persons and animals under outdoor conditions, and automatic photographing or taking videos for recording and evidence collection. Equipped with 4G communication module, cloud server real-time push, remote setting, camera status query and other functions.

### 1.2. Product features:

- 1) 55-degree camera lens, 5 mega pixel high definition CMOS image sensor, up to 1920×1080p video recording.
- 2) high resolution of 5MP, 8MP, 10MP, 12MP, 16MP, 20MP and 30MP can be selected;
- 3) Sending MMS and mail on 4G;

- 4) The trigger time can reach 0.4 seconds;
- 5) Built in 2.0 inch HD display ;
- 6) Support SD card capacity up to 64GB;
- 7) Dust-proof and waterproof grade: IP66;
- 8) Operating temperature range: -20°C ~ 70°C;
- 9) Built-in 42 pieces of infrared lamps;
- 10) Date, time, temperature and phase can be printed on the photo;
- 11) In the "Photo +video" mode, the camera can capture pictures and video at the same time each time it is triggered;
- 12) After 3 minutes, the power will be turned off automatically when there is no key operation;
- 13) Extremely long battery standby time (in standby mode, it can last 4 months with 8 AA batteries);
- 14) The serial number setting function allows you to print the code on the photo. This helps multiple camera users to identify the location when viewing photos;
- 15) Password lock protection can be set;
- 16) Automatic switching between day and night, color photos taken in day time, black and white photos taken in night time;


### 1.3. Working environment and conditions:

Operating temperature range: -20°C ~ 70°C, working both indoors and outdoors.

### 1.4. Principle

It is equipped with a 4G communication module and is pushed in real time by a cloud server. It is equipped with a high-sensitivity PIR infrared sensor. When a human body (or animal) moves, the temperature change of the external environment will be triggered by induction and automatically captured. Picture or record high-definition video. This camera can realize more applications by setting the timing, interval and other functions.

### 1.5. Product structure

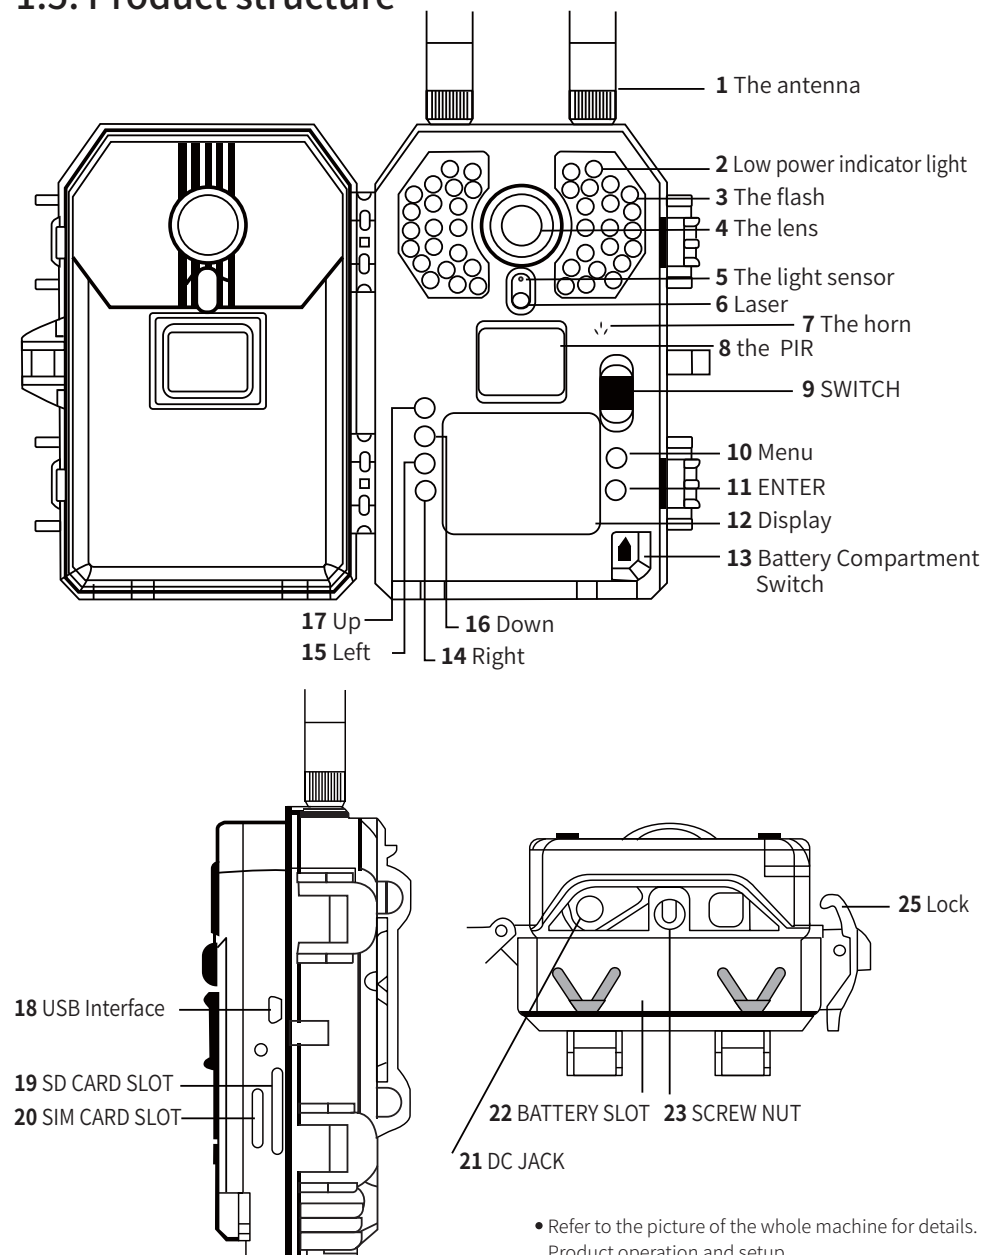

## 2. QUICK START

### 2.1. The battery

Press and hold the "Battery compartment switch" figure 13 to release the "BATTERY SLOT" figure 22. Recommending using 8\*AA high-performance alkaline battery, Ensuring that the positive and negative poles of the battery match the symbol mark of the shell.

If you don't use the camera for a long time, please remove the battery in the camera to avoid possible damage to the camera due to leakage.

In addition, the camera can also work on external DC power supply (8V/2A), solar cells, etc. In "TEST" mode, when the battery power is low, the display will show "low power".

### 2.2. Insert SD card

This camera has no built-in memory, so it cannot work without a SD card, which can support up to 64GB capacity. Before the SD card is inserted into the SD slot, please check whether the card capacity exceeds 64GB and make sure that the card has been tested.

### 2.3. Set the "TEST" mode

Switching the switch to the "test" position and enter the setting mode. In this mode, like a normal digital camera, you can capture pictures or video, or enter the menu to set parameters. There are four shortcut function keys on the keyboard, as shown in Figure 26:

- 1.Short press "up" button to set camera recording
- 2.Short press "down" button to set camera snapshot
- 3.Short press "left" to turn on laser positioning
- 4.Short press "right" to set the manual photo, and the picture or video (depending on the Setting of the camera) will be saved into
- 5.the SD card.Short press "OK" to browse and play back pictures /videos on the display screen, and use "up" and "down" to guide.

6.When browsing pictures, you can zoom in or out by short pressing left"or "right". as shown in Figure 27 :

7.When browsing pictures and videos, you can also press "MENU" to delete one, delete all, slide or protect as your own wishes.



Figure 26



Figure 27

### 2.4. Enter real-time mode

When the position of the switch is "on", it will enter the real-time mode. The monitoring indicator will flash white for 15 seconds. At the same time, it will start to work without manual operation. When the animal enter the PIR sensing area, they will start to take photos or record videos immediately.

If the animal wanders away from the PIR sensing area, the camera will turn off the power and enter standby mode.

instruction:

In general, it is recommended that you place your camera from 3 to 6 feet off the ground.

To avoid potential false triggers due to temperature and monitoring interference, please don't aim your camera at a heat source (e.g. the sun) or near a tree trunk. Ideally, moving north or south, away from the branches near the front of the camera.

### 3. ADVANCED SETTINGS

The tracking camera has factory Settings, you can change the settings as needed, please make sure the camera is in the setting mode.

How to get into 4G	Press menu key, press left or right, can enter
4G	Turning on 4G will automatically search the network
Operator setting	Select the country's card network
MMS Settings	MMS sending can be set with ON
Email Settings	Select OK can send photos via email
Way to send	Set the MMS receiving phone, the receiving mailbox, one to four phone Numbers and one to four email Numbers
Send the number	the maximum number of photos sent is 99. If the set quantity is 10, only 10 photos can be sent in a day. The order of photos is in the order of taking photos.
Daily	turn on the time setting, if it's 9 o'clock, it will send a message to your cell phone or email at 9 o'clock every day to remind you of the current situation of the camera, power, etc.
If you want to send MMS/email, select the network, open MMS/email, set the number/mailbox to send, and send the number of messages per day	
FTP setup Support sending server	
GPRS Settings	Support general defaults

### 3.1. parameter setting

Short press “MENU” to enter or exit the menu. Move the mark by short pressing “UP/DOWN”, change the setting by short pressing “LEFT/RIGHT” and confirm the change by short pressing “OK”. It is customary to remember to save the change by short pressing “OK”, otherwise you will lose your new settings.

Parameter	Settings (bold default)	Describe
Model	<b>Photo</b> Video Photo+video	Choose to take a picture or video. In “Photo+ video” mode, first take a picture, then take a video
language	<b>English</b>	English, Français, Deutsch, Español, italiano, Japanese, 简体中文, 繁体中文, Portugues, pyccknn, Nederlands, Swendish, Polski
Photo Resolution	30MP 20MP 16MP 12MP 10MP 8MP <b>5MP</b>	Select the required image pixel, 5MP ~ 30MP is optional, the image quality will be better with higher resolution, but the occupied space of SD card is larger, so it will take a long time for larger files to be written to SD card, which will slightly reduce the shutter speed.
Video Resolution	<b>1080P</b> 720P WVGA VGA	Select the video resolution (pixels per frame), the video quality of the higher resolution will be better, but the created file will occupy a larger space capacity of the SD card.
Capture series	<b>1</b> 2 3	In the photographing mode, set the continuous photographing function, it will number the photos in the order of triggering each time
Video Length	<b>10S</b>	Options: From 5s to 10min

PIR interval	<b>60S</b>	Options:From 5s to 24H Select the shortest time interval for the camera to wait, and the PIR will be triggered as soon as the animal appears. In the selected compartment, the camera will not capture or take pictures, which can prevent the SD card from storing too many redundant pictures.
PIR sensitivity	<b>High</b> Medium Low	Select the sensitivity of PIR, high sensitivity is suitable for indoor and less interference environment, medium and low sensitivity is used in outdoor or more interference environment. Temperature also affects sensitivity. Use high sensitivity when the ambient temperature is hot, low sensitivity is suitable for cold weather.
Set system time	OK	Short Press "ENTER" to set the date
Date stamp	<b>On</b> Off	If you want to have a date/time water print on each picture, you can choose "date/time". Select "date", the water print on the picture has only date. Select "off", there will be no watermark on the picture.
Time setting	On <b>Off</b>	If you want the camera to work at a specific time of the day, you can choose on. For example, if the start time is set at 18:35 and the end time is set at 8:25, the camera will be functional from 18:35 of the day to 8:25 of the next day, otherwise, the camera will not be triggered to take photos or video.
Time interval	On <b>Off</b>	If you choose "on", no matter whether the camera detects any animal or not, it will automatically capture pictures or video according to the interval you set, which helps to observe the growth process of cold-blooded animals like snakes or flowers.
Password	On <b>Off</b>	Set a password to protect the camera from unauthorized users

Daily	On <b>Off</b>	Select "on" to open the setting time. If it is 9 o'clock, it will send a message to the mobile phone or email to remind the current camera situation, power, etc.
Key tone	<b>On</b> Off	The default setting is on. When it is on, it will be a sound when you press the button.
SD storage	<b>Stop saving when card is full.</b> Cycle saving when card is full	Select cycle mode, when the card is full, the previous file will be overwritten and work continue.
Format	Yes <b>No</b>	When formatting the SD card, all files will be deleted. When your SD card has been used on other devices, it is strongly recommended that you format the SD card. Note: Firstly backup the files that your SD card needs to keep.
Default Temperature unit	<b>Celsius</b> Fahrenheit	Short press "OK" to restore to your factory settings.
Firmware	OK	Version view or upgrade

### 3.2. Files formatting

The pictures and videos of the camera are stored in the folder “\DCIM\100MEDIA” in SD card. The image file’s name is saved as DCIM0001.JPG, and the video file’s name is saved as DCIM0001.MOV. In "on" mode, you can use the USB cable to download these files to the computer, or you can put the SD Card in the card reader and insert it into the computer, and you can browse the files without downloading them to the computer.

MOV video files can be played on most multimedia devices, such as Windows Media Player, Quick Time, etc.



## 4. WARRANTY

We are proud of our products. We always keep our promises. We provide superior warranty period and service. If you buy our products, you will enjoy the warranty. We guarantee that our products are free from defects in materials and workmanship during the original purchase date. This warranty does not cover damage caused by users, such as misuse, abuse, improper operation or installation, or repair by unauthorized technicians.

During the warranty period, we will repair your camera free of charge or replace it with the same or similar model according to our choice. This warranty only applies to the original retail buyer of our authorized distributor. Please ask for a warranty card when purchasing. Any replacement product provided under the original warranty shall be warranted in the warranty period of the original product.

This warranty only applies to malfunctions caused by defects in materials or workmanship in normal use. Normal wear of the product is not included.

If you return the product within the warranty period, please contact your seller or our dealer.

## 5. Appendix I: TECHNICAL PARAMETERS

Model	Parameters
Image sensor	5 mega pixel color CMOS
Lens	F=3.0; FOV=55°; with auto IR-CUT
Infrared lamp	42pcs 850nm infrared lamp
LCD display	2.0-inch HD color display
Keypad	Six keys, one three-way switch
Memory	SD card (up to 64GB capacity supported)
Image size	5M/8M/10M/12M/16M/20M/30M
Video size	1080P, 720P, WVGA, VGA
PIR sensitivity	High, Medium and Low
PIR sensing distance	65 feet /20 meters (at 25°C)
PIR sensing angle	55°
Working mode	Day and night
Triggering time	0.4 seconds (when using a 2GB SD card)
Trigger interval	5s~24h
Number of consecutive photos	1~3
Video length	5s~10min
Photo + video	Take a picture first and then take a video

Playback Zoom in	1-8 times
The time stamp	On/off
Time	On/off, timing Settings
Password	4-digits
Device serial number	4-digits
Audio	On/off
Language	English, Français, Deutsch, Español, italiano, Japanese, 简体中文, 繁体中文, Portugues, pyccknn, Nederlands, Swendish, Polski
Supply voltage	8 x AA batteries or DC adapter: 12v/2A
Standby current	<0.1mA
Standby time	4 months (8×AA)
Automatic shutdown	When the keyboard has no operation, it will automatically shut down after 3 minutes
Power consumption	150mA(+850mA when the infrared lamp is light on+ ), at DC 12V
Low battery alarm	7.4V
Interface	USB, SD card slot, DC socket
Install	Strap or tripod
Waterproof grade	IP66
Working temperature	-20℃~+70℃
Working humidity	5%~95% RH
4G communication	Support

GPS	Support
SIM card	Support
Apps	Support
Cloud server	Support
Name of the camera	Support
Password	Support
Speaker and microphone	Support
Product Dimension	140*105*75mm

## 6. Appendix II: PACKAGE CONTENT

Name of attachment	Quantity
Digital camera	1
USB cable	1
Camera strap	1
User manual	1



## 7. Appendix III: FAQ

Question	Answer
Forget password	Use the universal password: OPEN
Night video is difficult to obtain at low voltage	After the camera is turned on, the prompt "it is difficult to obtain night video under low voltage" appears, indicating that the power is very low. When the battery voltage is lower than 8.5V, the infrared lamp cannot be turned on. At night, the camera cannot capture pictures and videos. The power consumption of the infrared lamp is very large, exceeding the normal current. It is recommended that you set the recording time to be shorter or as required. In the daytime, the camera does not need to turn on the infrared lamp, but can still record videos.

## 8. TROUBLESHOOTING

1. Can't start the machine: Replace 8 pieces of new alkaline 1.5V batteries, ensure that the positive and negative poles of the batteries are installed correctly.
2. The machine does not take photos or record video: Please check whether the battery is Low battery. If the TF card with the ferrule is used, please replace the ferrule. It is recommended to use the SD card.
3. Card error \ video playback stuck \ video does not play smoothly on the computer:
  - 1) Please format the SD card with the camera system menu "format".
  - 2) Please confirm whether the speed of the SD card is up to class 10.
  - 3) Please try to replace an SD card or copy the file to the computer's hard disk to play.
4. 4G cannot communicate: Please confirm whether the antenna is installed in place, APN and other parameters are set correctly, and whether the SIM card supports.
5. Forget password: Please unlock with a backup password: OPEN.
6. ON mode can only be entered when 4G is turned off, and ON MODE can only be entered when 4G is inserted into THE SIM and searched to the network.
7. In general, it is recommended that you place your camera from 3 to 6 feet off the ground.  
To avoid potential false triggers due to temperature and monitoring interference, please don't aim your camera at a heat source (e.g. the sun) or near a tree trunk. Ideally, moving north or south, away from the branches near the front of the camera.

<b>EIRP:</b>	BAND2: 22.24 dBm BAND4: 22.74 dBm BAND12: 22.80 dBm
<b>Antenna Type:</b>	External antenna
<b>Antenna Gain:</b>	0.11dBi for LTE BAND2 1.49dBi for LTE BAND4 0.06dBi for LTE BAND12

### FCC ID warning

**Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

"This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body."