

volkano™

Gemini Series

2 X TRUE WIRELESS BLUETOOTH SPEAKERS

 **Bluetooth®**



INSTRUCTION MANUAL

*Please read these instructions carefully and
retain for future reference.*

**V1.1
VK-3133-BK**



HIGHLIGHTS

- SD Card Input
- USB Input
- FM Radio
- Carry Straps
- True Wireless
- Bluetooth®
- Speakerphone
- 10 W Peak Power


PACKAGE CONTENTS

- Volkano Gemini Series Pair of True Wireless Bluetooth® Speakers
- USB Charging Cable
- Instruction Manual

SPECIFICATIONS

- Bluetooth®:
 - Version: 5.0
 - Range: 10 m
 - Chipset: JL
- Battery: 500 mAh, 3.7 V
- Sensitivity: 85 dB
- Charge Time: 3 Hours
- Battery Type: Li-Ion
- Playback Time: 1.5 – 2 Hours
- Total Power Output: 6 W RMS / 10 W Peak
- Max. Size for USB Drive: 16 GB
- Charge Input / Power Supply: 5 V DC, 0.5 A
- Driver: 2 x 2"
- Impedance: 4 Ω
- Signal to Noise Ratio: 90 dB
- Frequency Response: 120 Hz – 20 kHz

IDENTIFYING PARTS

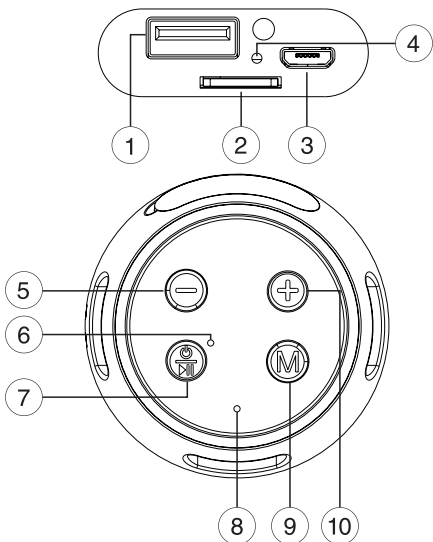

1. USB Port
2. Micro SD Card Slot
3. Micro USB Charging Port
4. Charging LED Indicator
5. ⏮ Previous Song / Previous Station / Volume Down Button
6. LED Indicator
7. ⏻ Power / Play / Pause / Answer Call / Auto Scan Button
8. Microphone
9. ⏭ Mode Button
10. ⏭ Next Song / Next Station / Volume Up Button

CHARGING

Please fully charge the Gemini Speaker before using for the first time.

Connect the USB A end of the Charging Cable to a USB Charging Port and insert the Micro USB end to the port on the Gemini. Make sure it is properly connected. The red indicator light will be lit while the Gemini is charging. When the battery is full, the red indicator light will automatically switch off.

INSTRUCTIONS FOR USE:

POWER ON AND OFF

To power on, press the  Power Button. The speaker will play the start-up audio tone. To power off, press the  Power Button. The blue Indicator Light will blink repeatedly when the Gemini is powered on.

PAIRING WITH BLUETOOTH® DEVICES

Your speaker must be paired to a Bluetooth® device before it can be used. It is only necessary to pair your speaker once with each device.

Pairing Speakers / Daisy Chaining:

The Gemini Speakers need to pair to each other before connecting to your Bluetooth® device. Simply turn both speakers on allowing an automatic pairing. Once successfully paired, a short tone will play.

To manually connect the Gemini Speakers to each other:

1. Switch both speakers on by pressing and holding the Power Button for about 3 seconds or until the speaker switches on
The speaker will automatically enter Bluetooth mode, shown by flashing LED light.
2. In Bluetooth mode, Press and hold the Mode “M” Button on one of the speakers for about 3 – 4 seconds to enter TWS pairing mode.
3. The speakers will connect and emit a tone once connected, the speaker can now be paired to Bluetooth device.

Pairing the Gemini Speakers with your Bluetooth Device:

1. Open the Bluetooth® Menu on the device you wish to pair. Some devices require you to select “Search for Devices” or “Add New Device” in order to create a Bluetooth® pairing.
2. With the speaker turned off press the  Power Button. Navigate to Bluetooth® Mode if the speaker is not already in Bluetooth® Mode, the speaker will play a pairing voice prompt while awaiting a Bluetooth® connection.
3. Wait until you see “Gemini” on your device screen.
4. Select “Gemini” on your device and follow any further prompts to pair. Once pairing is complete, the speaker will play a short tone and will be ready to play audio via Bluetooth®. The blue indicator light will blink at a slower rate when pairing is complete.

Note: If you are unsure on how to access your Bluetooth® Menu on your device, please refer to your device’s instruction manual.

LOCATING THE BLUETOOTH® MENU

iPhone, iPad, and iPod Touch:

- a) On your device, go to Settings.
- b) Select Bluetooth®. If Bluetooth® is not on, turn it on.
- c) The iPhone / iPad / iPod will automatically search for new devices.

Android Phones and Tablets:

- a) On your device, go to the Settings Menu.
- b) Select Bluetooth® (on older Android devices Bluetooth® is found in the Wireless and Networks Menu). If Bluetooth® is not on, turn it on.
- c) Select “Search for Devices” if your phone or tablet does not automatically search for new devices.

CONNECTING WITH PAIRED DEVICES

Once the speaker is switched on, it will automatically connect with the last paired Bluetooth® device that is on and within range. If the speaker does not connect automatically, open the Bluetooth® Menu on your device and select “Gemini” from the Bluetooth® device list.

CONTROLS

Function	Operation
Increase Volume	Long press the  Next Song / Next Station / Volume Up Button
Decrease Volume	Long press the  Previous Song / Previous Station / Volume Down Button
Next Track	Short press the  Next Song / Next Station / Volume Up Button
Previous Track	Short press the  Previous Song / Previous Station / Volume Down Button
Play / Pause Track	Short press the  Play / Pause / Answer Call / Auto Scan Button

To navigate between the USB, Micro SD, Bluetooth® and Aux Modes short press the  Mode Button.

Function (Bluetooth® and USB Modes)	Operation
Navigate to Next Track	Short press the  Next Song / Next Station / Volume Up button
Navigate to Previous Track	Short press the  Previous Song / Previous Station / Volume Down button
Play or Pause Track	Short press the  Play / Pause / Answer Call / Auto Scan button

2. FM Radio

Function (FM Radio)		Operation
Increase Volume		Long press the  Next Song / Station / Volume Up button
Decrease Volume		Long press the  Previous Song / Station / Volume Down button
Navigate up through saved channels		Short press the  Next Song / Station / Volume Up button
Navigate down through saved channels		Short press the  Previous Song / Station / Volume Down button
Auto Station Scan		Short press the  Play / Pause / Answer Call / Auto Scan button

Note: Auto station scan will store the station found into the channel you have selected.

3. Controlling Phone Calls

Function		Operation
Incoming Call	Answer Call	Short press the  Play / Pause / Answer Call / Auto Scan button
	Reject Call	Press and Hold the  Play / Pause / Answer Call / Auto Scan button for 2 seconds
Call In Progress	End Call	Short press the  Play / Pause / Answer Call / Auto Scan button

FM Radio Mode

Press the  Mode Button to toggle the speaker into FM Radio Mode.

Micro SD Card Mode

To enable Micro SD Card Mode, insert a micro SD card into the Micro SD Card Slot. The speaker will automatically enter Micro SD Card Mode.

USB Mode

To enter USB Mode, insert a USB flash drive into the USB Port. The speaker will automatically enter USB Mode.

TROUBLESHOOTING

1. My smartphone cannot find any new Bluetooth® devices?

- Ensure the device has entered the pairing mode.
- Ensure the device is within an effective working range.

2. Bluetooth® device cannot pair up?

Ensure your mobile phone allows new connections and has not reached the maximum number of allowed devices.

3. The device does not play music or answer calls when it is connected to a Bluetooth® mobile phone.

- Ensure your mobile phone supports A2DP and HSF (Hands-Free) profiles.
- Ensure your mobile phone is within an effective working range.

4. When paired with my computer, Windows asks for a new driver. Can you supply this?

We recommend you find compatible drivers for your computer online.

5. Why can I not remotely control the Pause / Play / Previous / Next functions when music is playing?

This feature needs the Bluetooth® device paired with the speaker to support AVRCP (Audio / Video Remote Control Profile). Please ensure your device supports this.

SAFETY PRECAUTIONS

- Never use your speaker near water or in areas where it can come into contact with water. Never handle the speaker if it was dropped in water or any other liquid. If the product comes into contact with water while switched off, but still plugged in, this is a safety hazard.
- Always make sure your hands are dry before touching the plug or power connections.
- Do not operate the product with a damaged cord or plug, or after it malfunctions, has been dropped, or damaged in any manner.
- This speaker is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with the speaker. Packaging must never be left within reach of children, as it is potentially dangerous.

ENVIRONMENTALLY FRIENDLY DISPOSAL

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

	This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and reproductive harm. For more information, go to www.P65Warnings.ca.gov.
WARNING	



DISCLAIMER

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Volcano is under license. Other trademarks and trade names are those of their respective owners.

All product and company names are trademarks™ or registered® trademarks of their respective holders. The use of them does not imply any affiliation with or endorsement by them.

WARRANTY

The Volcano Gemini speakers comes with a standard 12-month limited warranty against manufacturing defects and faults.

Should your Gemini speakers be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.

NOTE:

The warranty does not apply to a product that:

- a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b.) Has been misused or neglected.
- c.) Has been damaged accidentally or by Force Majeure including fire and flooding.
- d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.