 


4. User Instruction

 


For first use, open the seat cover and insert the wires into the socket, red to red, black to black. While connecting the connectors to the storage battery, make sure they are connected in correct polarity.

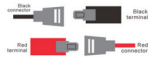

Before Use

- Unscrew the screw and remove the seat cover.
- Connect the battery terminal (red to red, black to black).
- Replace the seat cover and tighten the screws.

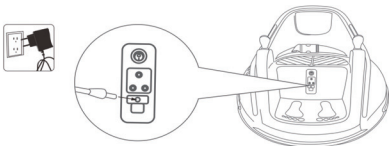

1. The unit will not operate while charging.
2. Charge after each use.
3. Turn off the power when not in use.

Charging the battery

- Plug the charger into the charging port.
- Insert the charger's power plug into a stable matching AC power as shown above.
- Fully charge the battery for 4-6 hours.
- Do not charge the battery for more than 10 hours.
- Make sure the battery and charger are not damaged. Do not charge if any sign of wear or damage is found.
- To ensure safety, the vehicle must be charged by adults.

03

4. User Instruction

Operating the vehicle

- Press the power switch to turn on the vehicle.
- Push or pull the control sticks to move the vehicle.
- Release the control sticks back to the center position to stop.

WARNING:

 
Constant close supervision by an adult is needed when your child is operating the vehicle.

5. Remote Controller

Features

- Supply voltage: 2 x 1.5V
- Frequency: 2450 MHz

Button description

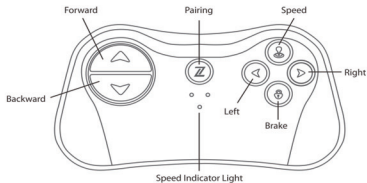

- Forward: Direct the ride-on car to move forward
- Backward: Direct the ride-on car to move backward
- Pairing: Pair the ride-on car with a remote controller
- Left: Direct the ride-on car to turn left
- Right: Direct the ride-on car to turn right
- Speed: Adjust the speed of the ride-on car's movement as low, moderate or high
- Brake: Immediately stop the ride-on car and render it immovable until unlocking

04

6. Care and Maintenance

- Turn off the product and disconnect the battery if the product is not in use for a long period of time.
- Check the product regularly and make sure there are no missing or loose parts. Re-tighten any loose parts if necessary.
- Make sure there are no cracked or broken plastic parts.
- Always use the product away from any heat source, cover it with a tarp and away from wet weather.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

RF Exposure Statement

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase the separation between the equipment and receiver.
- Do not use the product or receiver near a body.
- Encourage the user to correct the interference by one or more of the following measures:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment uses Class B digital modulation and may cause harmful interference to radio communications when used near a radio receiver. If interference occurs, the user is encouraged to take one or more of the following measures:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
FCC Caution

- 1. Turn on the power of the ride-on car, press and hold the pairing button until the speed indicator light switches on without flashing.
- 2. Release the pairing button, and the speed indicator light will switch off.
- 3. If the speed indicator light switches on again, then the pairing is successful. If not, please repeat steps 1 and 2.

- 4. Once successful pairing is all you need, no more pairings are needed in later use.

5. Remote Controller

3. Parts and Features

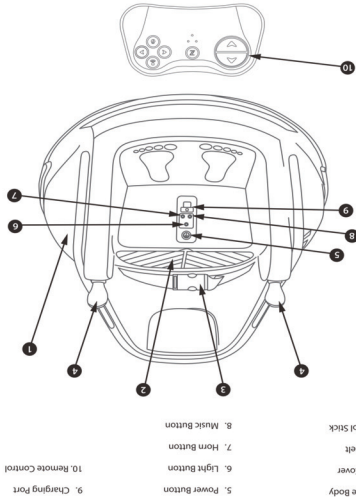

02

05

1. Safety Instruction

When using an electrical product, basic safety precautions should always be followed including the following.

Read all instructions carefully before use.

- To protect against electrical shock, do not immerse cord, charger, transformer, battery, or the product in water or other liquid.
- Only use charging devices, transformer, and battery provided or recommended by the manufacturer.
- For your child's safety, the product should be assembled by an adult.
- This toy is not intended for children below 37 months.
- Close supervision is necessary when your child is using the product.
- Unlatch the battery if not used for a long time.
- Do not use this product as a traffic tool.
- Do not use this product on a public road, raceway, by the swimming pool, or at any potentially dangerous places.
- Do not use this product on slippery surfaces.
- Always keep hands, hair and clothing away from moving parts.
- Maximum user weight for this product is 66 lb / 30 kg.
- Do not change, modify or add any electrical wiring on this product.
- Avoid using this product in a tight environment to prevent damage to the product or injury to the user.
- Do not use this product in the dark. Only operate this product during daytime or in well lit areas.
- For your child's safety, please make sure to fasten the seat belt when using this product.
- A helmet and safety gear are recommended when using this product.
- To avoid accidents, do not stand on the product. Sitting is the only permissible position when riding in the product.

Note:

1. When charging you must turn off the power switch.
2. It is recommended to charge 4-6 hours before first use, but no more than 10 hours.
3. When the speed of the vehicle is significantly slowed during normal driving, the battery power is insufficient. Please charge it in time.
4. Please charge 8-12 hours after each use, but do not exceed 20 hours.

2. Product Specification

Motor: 6V/25W*2
Battery: DC 6V 4.5AH
Charger: 6V 500mA / 6V 700mA
Speed: 3km/h
Recommended for ages: 3-8 years
Maximum user weight: 66 lb / 30 kg
Dimensions: 69*69*40 cm (L*W*H)

Battery charge time: 8 - 12 hours
First charging time: 4-6 hours
Max charging time: 10 hours
Battery (temperature tolerance): 104°F
Battery life: 300 times
Power mode: rechargeable

01

6. Care and Maintenance

- Clean the product with a cloth. Use a non-wax furniture polish to restore shine to plastic parts. Do not use abrasive cleaner.
- Do not clean the product with water or wash the product with a hose or immerse any parts in water or other liquid.
- Occasionally use lightweight oil to lubricate moving parts.

7. Troubleshooting

Problem	Possible Reason	Solution
Vehicle does not move	Low Battery	Fully charge the battery
	Fuse protection	Replace with a new fuse
	Disconnected / Badly connected Battery	Reconnect the battery
Vehicle does not run very long	Low Battery	Fully charge the battery
	Old Battery	Replace battery if necessary
	Low Battery	Fully charge the battery
Vehicle runs very slow	Old Battery	Replace battery if necessary
	Vehicle is overloaded	Make sure user's weight is under 60 lb / 30 kg
	Vehicle is being used in harsh environment	Avoid using the vehicle in harsh environment
Vehicle needs a push to go forward	Poor wire connection	Check if the battery connectors are firmly connected.
	Disconnected / Badly connected Battery	Reconnect the battery
Battery does not charge	Disconnected / Badly connected Charger	Make sure the charger is firmly plugged into the power source and connected to the charging port
	Charger not working	Replace the charger
Charger feels warm with charging	Normal	

 
06

3+

WARNING: Read the manual before use. Do not use the product if the manual is not read. Do not use the product if the manual is not read. Do not use the product if the manual is not read.

Read the manual carefully before allowing your child to ride your new ride-on toy. This manual contains important safety, performance and maintenance information. Connect the battery before use. This product is packed with the battery disconnected. Importer: 306 REED STREET • BUILDING M 48809 UNITED STATES

Instruction Manual

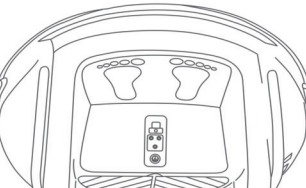

Item number: FR2005

Ride On Bumper Car with 360 Rotation

8. Fuse Maintenance

- Do not change the structure and circuit system of this product without authorization. Any inspection and repair work must be performed by professionals or under the guidance of technical personnel.
- This product is equipped with a self-resetting fuse with automatically cut off power for 15-20 seconds and then restart. Use the self-resetting fuse only to avoid the fuse to cut off.
- Do not dry anything behind the product.
- Do not allow any water or other liquids to immerse the circuit or any of the electrical components such as batteries.

CAUTION

WARNING: Read the manual before use. Do not use the product if the manual is not read. Do not use the product if the manual is not read. Do not use the product if the manual is not read.