


X1 Pro Stylus User Manual

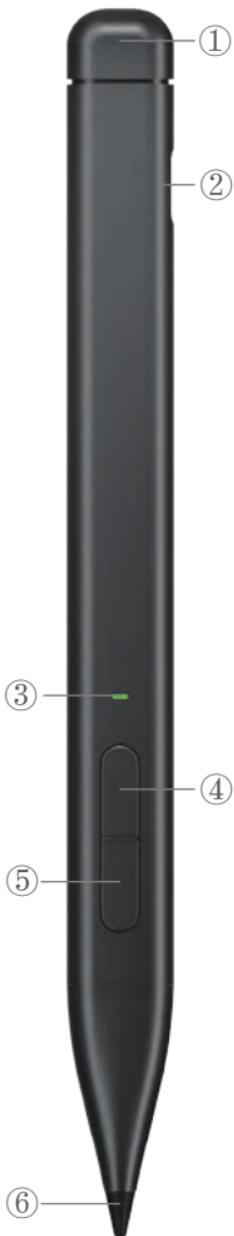

- ① Windows ink button
- ② Type-C charging port
- ③ LED indicator light
- ④ Eraser / Power on
- ⑤ Right mouse
- ⑥ Nib

How to use?

- Click the power button to start the device.
- The onboard power management program automatically shuts down after ten minutes of inactivity.

How to using Windows ink workspace settings

- The demonstration is under Windows 10 system.
- Before connecting to the device, it is necessary to ensure that the device supports Bluetooth connectivity.
- Press and hold the top function key for 3 seconds, and the indicator light will flash blue. Enter Bluetooth adaptation status.
- Click [Start Menu] - [Settings] - [Bluetooth and Other Devices] - [Add Bluetooth or Other Devices] - [Bluetooth] to enter the Windows Bluetooth search status, and click to match [Ulogic Pen]. Click on [Start Menu] - [Settings] - [Pen and Windows Ink] to set the top Windows ink function button.
- At most three operation commands can be set. They are single click, double click, and triple click.

Compatible

- Compatible with all touchscreens that support Mpp 2.0 or MPP 1.51 protocols.

Warranty terms

- This product is guaranteed for 12 months.

Note

1. Do not use this product on other surfaces other than the screen to avoid damage to the screen caused by the wear of the pen nibs.
3. The nib will wear out due to long-term use and friction, please replace the nib regularly to avoid damage to the screen.
4. Please keep the pen out of the reach of children or pets to avoid other injuries caused by accidental swallowing by children or pets.
6. Do not use any solution or liquid to clean this product, so as to avoid the solution or liquid flowing into the product during cleaning, which will cause the product to get wet or damage the internal components.
7. Some screen stickers may affect the writing experience.
8. Radio frequency radiation from electronic

Indicator light

- Red light flashing (Charging prompt)
- The red light flashing once (Low voltage protection)
- Red light will turn green after flashing (Low battery)
- Blue light flashing (Bluetooth matching status)

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
● Increase the separation between the equipment and receiver.
● Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
● Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specifications

Name	Stylus
Model	X1 Pro
Protocol version	MPP 2.0
Pressure	4096
Battery Capacity	70 mAh
Use time	≥60 hours
Charging time	≤1 hour
Input voltage	5V 200mA
Accessory	Capacitive pen * 1,CtC adapter * 1, Nib * 1,

Tip: If there is ink leakage when replacing the nib, please recharge the device before use.