

MT1622 INSTRUCTION MANUAL**OPERATION:**

Connect the device to a power source using the included USB cable.

3 x AAA batteries can be installed as a temporary back-up power source to keep the clock running during a power outage.

1 x Button Cell battery (CR2032) will hold the set time (without display), should the AAA batteries become depleted.

GENERAL TIME/DATE SETTINGS:

1. Long press "SET" to enter general setting mode, then short press "SET" to scroll through each setting option below.
2. While YEAR is flashing, short press "UP" or "DOWN" to adjust the number.
3. Short press "SET". While MONTH is flashing, short press "UP" or "DOWN" to adjust the number.
4. Short press "SET". While DAY is flashing, short press "UP" or "DOWN" to adjust the number.
5. Short press "SET". While 24Hr/12Hr is flashing, short press "UP" or "DOWN" to switch between 24Hr or 12Hr.
6. Short press "SET". While HOUR is flashing, short press "UP" or "DOWN" to adjust the number.
7. Short press "SET". While MINUTE is flashing, short press "UP" or "DOWN" to adjust the number.
8. Short press "SET" one final time to finish setting. If there is no operation for 20 seconds, the setting mode will shut off and clock will return to display mode.

DISPLAY OPTIONS:

Short press "UP" to scroll through display options: temperature, date, or seconds can be displayed next to the hours and minutes.

BRIGHTNESS SETTING:

Short press "DOWN" to scroll through 4 brightness settings: L1, L2, L3, L4.

TEMPERATURE DISPLAY:

Long press "DOWN" to switch temperature display between °C (Celsius) and °F (Fahrenheit).

* Temperature range: 0 °C ~ 50°C (32 °F ~ 122 °F).

* Temperature detection cycle: 60 seconds

* Accuracy: +/- 1 °C (1.8 °F)

ALARM CLOCK SETTING:

1. Short press "SET" to display Alarm A1. Short press "UP" or "DOWN" to switch Alarm A1 on "On" or off "--".
2. Long press "SET" to adjust HOUR for Alarm A1. While HOUR is blinking, short press "UP" or "DOWN" to adjust the number.
3. Short press "SET" to adjust MINUTE for Alarm A1. While MINUTE is blinking, short press "UP" or "DOWN" to adjust the number.
4. Short press "SET" to scroll through and display Alarms A2 and A3. Repeat step 1-3 to set each alarm.
5. Short press "SET" to exit setting mode. If there is no operation for 20 seconds, the setting mode will shut off and clock will return to display mode.

POWER SAVING MODE:

1. Long press "UP", when "Sound" shows up on display, short press "UP" or "DOWN" to turn touch control on or off.
2. When power saving mode is on, display will shut off after 15 seconds if the device is not being used. To activate the display, simply tap the top of the clock or short press any button on the control panel.
3. When power saving mode is off, display will remain on.

WIRELESS PHONE CHARGING:

1. Place your phone on top of the clock with the display screen facing up and it will start charging automatically.
2. Charging function only operates when the clock is powered using a USB cable.
3. The charger only works with phones that have the wireless charging function.
4. The charging function will not work on phones with a thicker case, a support ring on the back, or other backside obstruction.
5. Specs of the wireless charger –
 *Input: 5V/2A
 *Output: 5V/1A

WIRELESS SPEAKER:

1. Turn on Bluetooth on your phone / tablet / audio device and connect to BT201-AUDIO to activate the speaker.
2. Specs of speaker –
 *Bluetooth 5.0
 *Output: 4Ω/3W
 *Play Range: ≤10 meter (33 feet)

CAUTION & SAFETY:

1. Do not expose to moisture, sunlight, or other heat sources.
2. Keep away from children and ensure all adults who use this product read and follow these instructions and warnings.

3. Battery must be recycled and disposed of properly.
4. Operation temperature range between 32 °F and 113 °F.
5. Use correct voltage charge, 5V only.

FCC Part15:

CAUTION: Risk of Fire and Burns. Do Not Open, Crush, Heat Above 45°C /113 °F or Incinerate. Follow Manufacturer 's Instructions.
ATTENTION: Risque d' incendie et de brûlures. Ne pas incinérer, ouvrir ou endommager, ne pas exposer à une chaleur au-dessus de 45°C / 113°F. Merci de suivre les instructions du fabricant.

IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. To reduce the risk of injury, close supervision is necessary when the product is used near children.
3. Do not put fingers or hands into the product.
4. Do not expose the product to rain or snow.
5. Use of a power supply or charger not recommended or sold by the product manufacturer may result in a risk of fire or injury to persons.
6. Do not use the product in excess of its output rating. Overloading outputs above rating may result in a risk of fire or injury to persons.
7. Do not use the product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
8. Do not disassemble the product. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
9. Do not expose the product to fire or excessive temperatures. Exposure to fire or temperature above 100 °C may cause an explosion.
10. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference
- (2)This device must accept any interference received, including interference that may cause undesired operation.