

# Tunes+ Wireless Bluetooth Speaker

User's Guide for Model ISB275W v3438-01



## Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding -type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction



**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



**WARNING:** Risk of cancer and reproductive harm from exposure to DEHP. See [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,



## Features

- Bluetooth: range approximately 59 ft
- USB and MicroSD ports
- LED light changing modes
- Rechargeable battery: up to 4 hours with lights off and 50% volume

## Includes

- User's guide
- USB-C to USB cable

## Controls and Functions

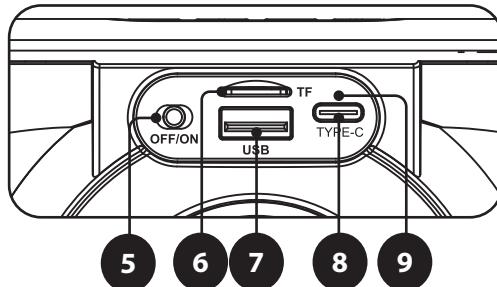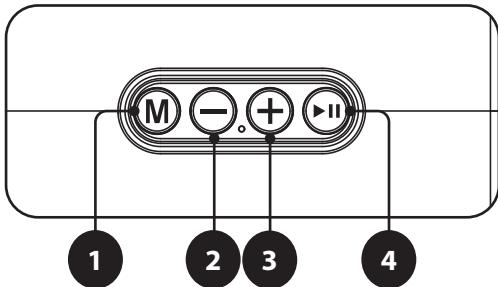

1. **Mode:** Press to change audio sources. Press and hold to change the light mode. Press twice to turn the light on/off.
2. **Prev/Vol -:** Press to decrease the volume. Press and hold to go to the previous track.
3. **Next/Vol +:** Press to increase the volume. Press and hold to go to the next track
4. **Play/Pause:** Press to pause or resume playback. Press to answer an incoming call during Bluetooth mode. Press and hold to reject an incoming call. Press and hold during Bluetooth mode to initiate Party Plus/TWS mode.


5. **Power:** Switch on/off.
6. **MicroSD Slot**
7. **USB port**
8. **DC Power In**
9. **BT/Charging Indicator Light**

## Charging the Speaker

Charge fully before use. The charge time is approximately 5–6 hours.

When the speaker is charging, the **Charging Indicator Light** will display a solid red light. When charging is complete, the indicator will turn off.

Using a USB-C to USB cable (included), connect the **DC Power Input** on the speaker to the USB port of a powered-on computer or USB power adaptor (not included) to charge the speaker.

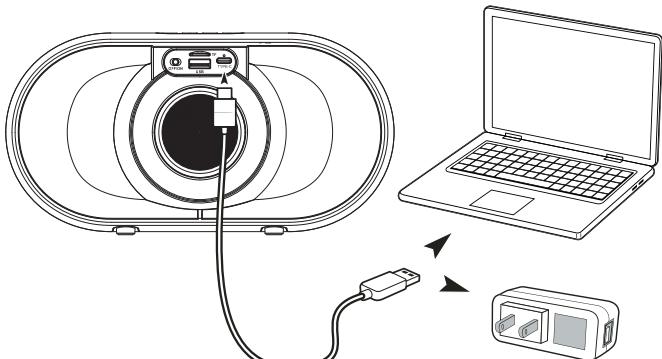

## Bluetooth Wireless

### Pairing & Playing Audio

1. When powered on, the speaker will enter Bluetooth Mode automatically.
2. Using the Bluetooth setting on your device, search for new devices and select **ISB275**. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
3. When successfully paired, a voice prompt will announce "Bluetooth connected."
4. Use the controls on the connected device to select and begin playing audio. Use the controls on the speaker or the connected device to play, pause, and adjust volume.

**Note:** The unit will automatically connect to the last paired device when powering on. If your device becomes unpaired or it is unable to connect, press the **Play/Pause** button twice to disconnect and enter pairing mode. A voice prompt will announce "Bluetooth is connecting" start from step two to connect to your device.

### Party Plus Mode

Pair two **ISB275** speakers wirelessly to double the audio from your Bluetooth device.

1. Power on both speakers. Press and hold the **Play/Pause** button on one **ISB275** speaker to enter Party Plus mode. The speaker will chime, indicating it is ready to pair. After the speakers successfully connect, a voice will announce the connection.
2. Using the Bluetooth setting on your device, search for new devices and select **ISB275**.
3. To exit Party Plus Mode, press the **Play/Pause** button twice on either speaker.

**Note:** When powered off while paired, the two speakers will reconnect again after powering on.

### MicroSD


Supports MicroSD cards up to 64GB.

1. Insert a MicroSD card into the **MicroSD Slot** on the speaker.
2. The speaker will automatically switch to **MicroSD** mode. To enter either playback mode from another source, press the **Mode** button.

### USB

Supports USB drives up to 64GB.

1. Insert a USB drive into the **USB Port** on the speaker.
2. The speaker will automatically switch to **USB** mode. To enter either playback mode from another source, press the **Mode** button.

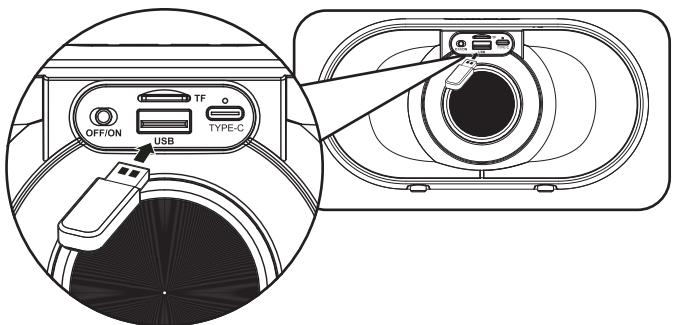

### Customer Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

For Warranty Information and the most up-to-date version of this User's Guide, go to [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Customer Service: **1-888-999-4215** | Email Support: **prodinfo@dpiinc.com** | Email Parts: **partsinfo@dpiinc.com**



Copyright © 2025 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

