

 
 
 
Reference Size for Different Dogs

Size	Neck Girth (IN)	Chest Girth (IN)	Back Length (IN)	Weight (LBS)	Breed
X-Small	7.8 - 8.6	9.8 - 11.8	7.4	1 - 10	Chihuahua, Yorkshire, Terrier
Small	7.8 - 9.4	11.4 - 14.1	9.0	11 - 25	Poodle, Pomeranian
Medium	9.0 - 11.0	13.7 - 16.5	11.0	26 - 40	Shin Tzu, Maltese Dog
Large	10.6 - 12.2	16.1 - 18.5	12.2	41 - 70	Miniature Schnauzer, Pekingese
Large	11.8 - 13.3	18.1 - 20.8	13.7	71 - 90	English Cocker Spaniel
Large	12.9 - 14.5	20.4 - 23.2	15.7	91 - 110	Beagle
X-Large	16.9 - 18.9	29.9 - 33.0	23.6	N/A	Husky
X-Large	18.5 - 20.4	34.6 - 38.1	23.6	N/A	Labrador Retriever
X-Large	20.4 - 24.4	36.2 - 39.3	27.5	N/A	Golden Retriever, Old English Sheepdog

Transmitter: 3.7V 300mAH LIP
Receiver: 3.7V 400mAH LIP

Made in China

Read Full
User Manual
Before
Use!

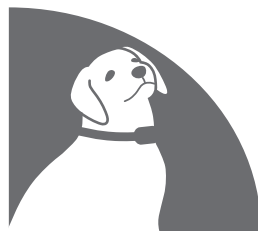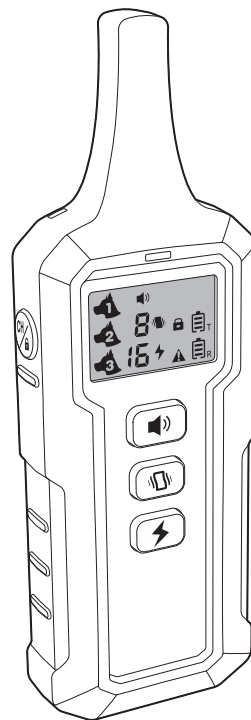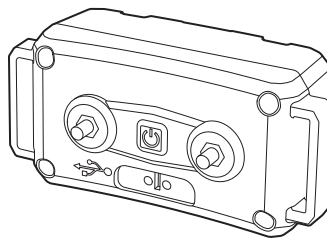

DOG TRAINING COLLAR

More Effective and Safer Training Collar
for Dogs with Our Advanced Technology

Important Safety Information

WARNING:

Not for use with aggressive dogs. Do not use this Product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your Veterinarian or certified trainer.

CAUTION:

Safety during on-leash training. It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

Risk of skin damage. Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible re-position the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a leash to the electronic collar; it will cause excessive pressure on the contacts.

- Never connect a leash to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a leash, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.

These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.


Table of Contents

Components _____	4
How the System Works _____	5
Key Features _____	6
Definition of the Product _____	7
Operating Guide _____	9
• How to Turn the Remote Training Collar On/Off _____	9
• How the Transmitter Buttons Work _____	10
• How to Fit the Receiver Collar _____	11
• How to Find the Best Vibration/Shock Level for Your Pet _____	13
• How to Maximize the Distance _____	14
• Charging the Device _____	15
• How to Pair the Remote Transmitter & Receiver Collar _____	17
• How to Test the Functions _____	18
General Training Guide _____	19
Frequently Asked Questions _____	20
Trouble Shooting _____	21
FCC _____	22
Reference Size for Different Dogs _____	23


Components



 Remote Transmitter

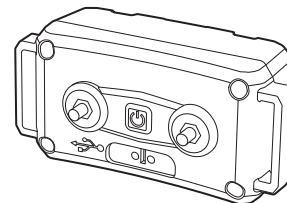

Receiver Collar

 


Test Bulb




Steel Probe x 4



 Silicone Covers x 4



USB Cable

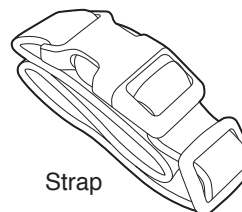 

Strap



User Manual

How the System Works

The Remote Training Collar is easy to use with an advanced digital display that tells you exactly what level of stimulation you are using.

 
 
This Remote Training Collar assists you in controlling your pet without a leash in a designed remote range. At the push of a button, your remote sends a signal activating your dog's Receiver Collar. He receives a safe but annoying stimulation. He'll quickly learn the association between his behavior and your correction; in no time, you'll have a better-behaved pet. The Remote Training Collar has been proven safe, comfortable, and effective for both small and large dog breeds.

Using the Remote Trainer consistently and correctly, any basic obedience commands can be taught and many misbehaviors that your pet exhibits can be corrected.

Key Features


1. Separated function buttons on Remote Transmitter, easy for training.
2. Receiver Collar Waterproof Guaranteed, no problem for short time swimming.
3. 16 levels shock & 8 levels vibration, provides behavior correction for more dogs.
4. Receiver Collar low battery indicating & charging indicating.
5. Rechargeable with High Quality Lithium Battery, with work time twice Increased.

Definition of the Product

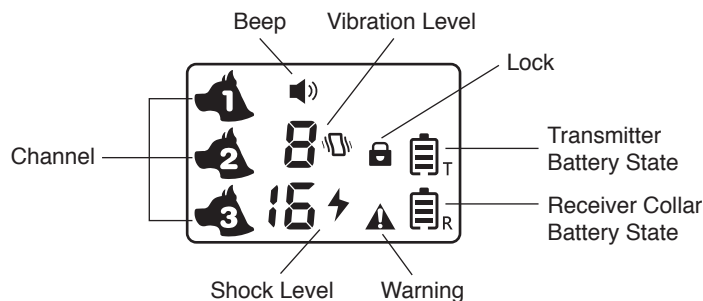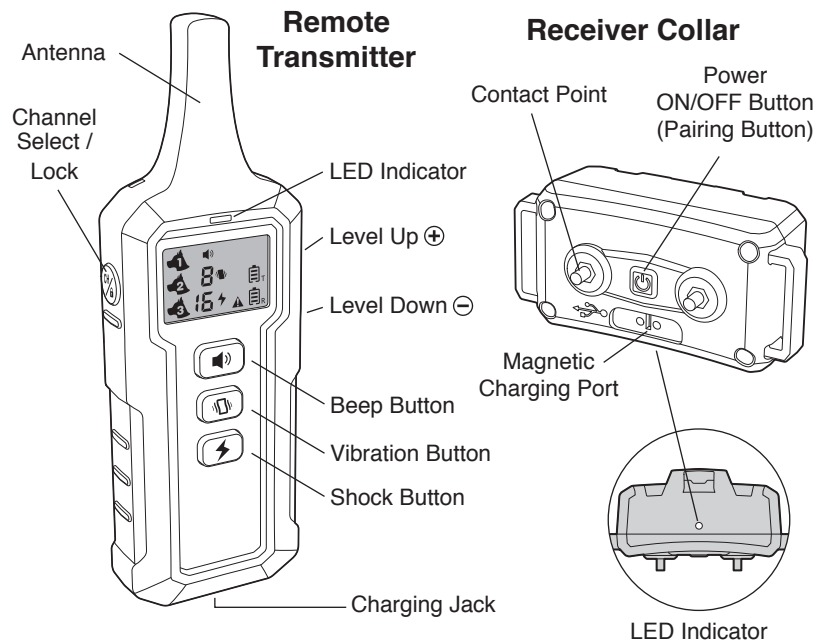

Safety Tips

 This product is not intended for use on dogs under 6 months old or less than 8 pounds. This product must NOT be used on aggressive dogs. If you are unsure if this product is appropriate for your pet, please consult your veterinarian or a certified trainer.

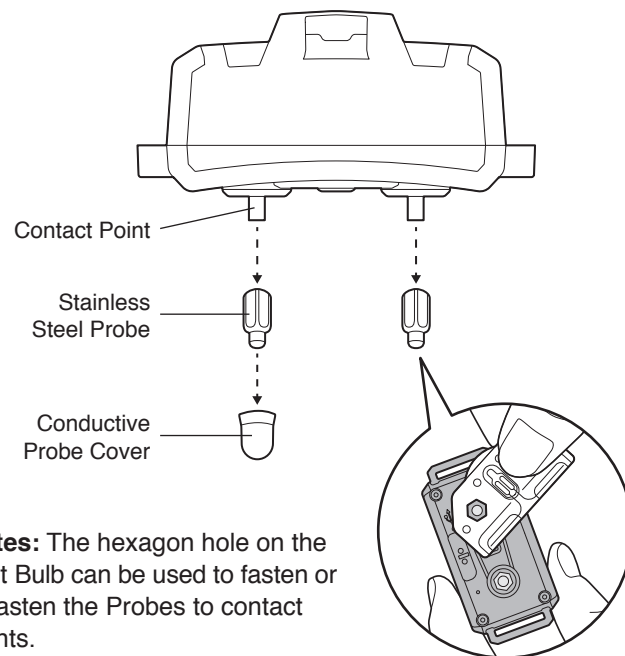





Notes: The hexagon hole on the Test Bulb can be used to fasten or unfasten the Probes to contact points.

Step 1 How to Turn the Remote Training Collar On/Off


To turn the Remote Transmitter ON/OFF

1. Press any button on the Remote Transmitter to turn ON. The backlight will be on.
2. If the Remote Transmitter left unused for 6 seconds, backlight will be off and enter into "STANDBY" status. If unused for 30 seconds, LCD display will be turned OFF and enter into "DEEP SLEEP" status. To activate the transmitter in separate cases, you can simply press any button to wake up the Remote Transmitter.

To turn the Receiver Collar on

















Press the Power button , the Receiver Collar will a sound "BEEP" and BLUE LED indicator is blinking per 5 seconds. The Receiver Collar will be into "DEEP SLEEP" status if there is no movement within 10 minutes. BLUE LED indicator is blinking per 30 seconds. Press // buttons on Remote Transmitter will activate the Receiver Collar.

To turn the Receiver Collar off

Press the Power button  again, the Receiver Collar will a sound "BEEP-BEEP" and BLUE LED indicator turns off.

Notes: To extend the life of the batteries, turn off the Remote Transmitter and Receiver Collar when you are ready not to use them for a long time.

Step 2 How to Remote Transmitter Buttons Work

1. Press // once to send a beep, vibration and shock command to Receiver Collar. The corresponding icon on the LCD display will flashing.
3. Press the Channel/Lock  button to select channel 1 , channel 2  or channel 3 .
4. Press the Level UP  / DOWN  Buttons to adjust the Vibration Level . Level 1 is the weakest and level 8 is the strongest. Level 0 indicates no Vibration.
5. Press the Level UP  / DOWN  Buttons to adjust the Shock Level . Level 1 is the weakest and level 16 is the strongest. Level 0 indicates no Shock.
Notes: Starting at Level 1 on the digital display. If your pet shows no reaction, moving up to the next level. LCD display will shown warning icon  at Level 8-16. Your pet should not vocalize or panic when receiving stimulation. If this happens, the shock level is too high and you need to go back to the previous level.
6. Press and hold the Channel/Lock  button to locked the level of Vibration and Shock. The LCD will displayed the icon "🔒". To Adjust the level of Vibration and Shock, press and hold the Channel/Lock  button again to unlocked.
7. If the Remote Transmitter left unused for 6 seconds, backlight will be off and enter into "STANDBY" status. If unused for 30 seconds, LCD display will be turned OFF and enter into "DEEP SLEEP" status. To activate the transmitter in separate cases, you can simply press any button to wake up the Remote Transmitter.

Step 3 How to Fit the Receiver Collar

Important: The proper fit and placement of your Receiver Collar is important for effective training. The Contact Points must have direct contact with your pet's skin on the underside of his neck, or he cannot feel the static shock.

 
To assure a proper fit, please follow these steps:

1. Make sure that the Receiver Collar is turned off.
2. Have your pet standing comfortably (Fig 1).
3. Place the Receiver Collar on your dog's neck close to the ears. Center the Contact Points underneath your dog's neck, touching the skin (Fig 2).


Note: It is sometimes necessary to trim the hair around the Contact Points to make sure that contact is consistent.

CAUTION: Do not shave the pet's neck as this may increase the risk of skin irritation.


4. The Receiver Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck (Fig 3).
5. Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the receiver collar.

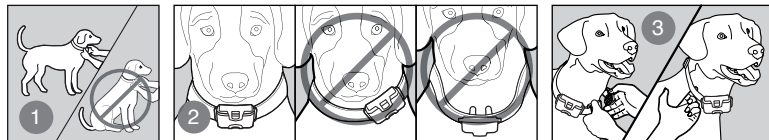

 6. Re-thread the collar:
Attached the strap to the bark collar. Take out the slide buckle from the collar first. Follow the steps instructed to thread the collar.

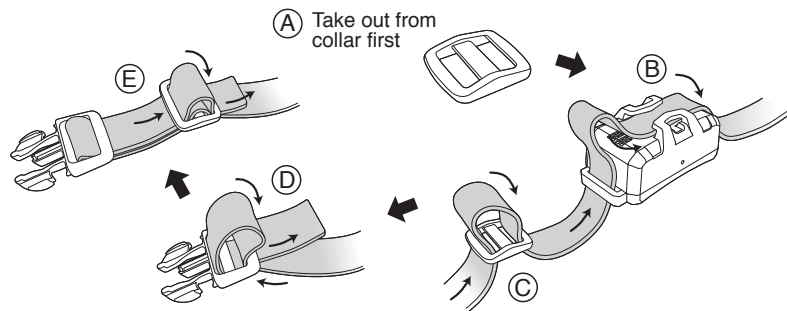

 7. Trim the collar as follows (Fig 4):
 - a. Mark the desired length of the collar with a pen. Allow for growth if your pet is young or grows a thick winter coat.
 - b. Remove the Receiver Collar from your pet and cut off the excess.
 - c. Before placing the Receiver Collar back onto your pet, seal the edge of the cut collar by applying a flame along the frayed edge.

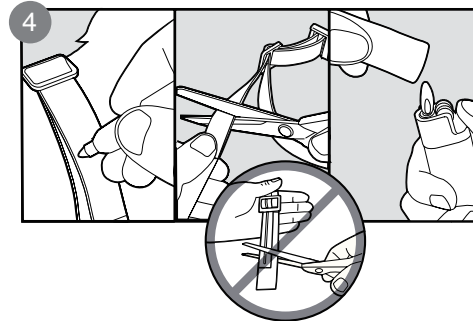

Step 4 How to Find the Best Vibration / Shock Level for Your Pet

Important: Always start at the lowest level and work your way up. The Remote Training Collar has 8 Levels for vibration and 16 Levels for static shock, with level 1 being the lowest level and level 8 of vibration and level 16 of shock being the highest. This allows you to choose the stimulation level that is best for your pet. Once you have placed the receiver Collar on your pet, it is time to find the stimulation Level that is best for him. This is called the Recognition Level. A slight change in your pets behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for him.

Follow the steps below to find your pet's recognition Level:

1. Starting at Level 1 on the Digital Display, press the Vibration/ Shock Button.
2. If your pet shows no reaction, repeat the Stimulation Level several times before moving up to the next level.
3. YOUR PET SHOULD NOT VOCALIZE OR PANIC WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS
4. Move up through the stimulation Levels until your pet reliably responds to the stimulation.

5. If your pet continues to show no response at the highest Level, check the fit of the Receiver Collar. If your pet has long or thick hair, please use the longer set of Contact Points in package. Then go back to #1 and repeat the process.

If this still does not yield any results, your pet's hair will need to be trimmed around the Contact completing all of these steps, your dog still does not indicate he is feeling the stimulation, please contact our customer service.

Step 5 How to Maximize the Distance

Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. For Maximum signal strength, keep the device properly charged.



Maximum Range



Typical Range



Minimum Range

*Avoid touching the antenna or the range may decrease substantially.

Step 6 Charging the Device

The Remote Training Collar use Lithium-Polymer batteries. DO NOT charge the device near any flammable substances. Fully charge the Remote Transmitter and Receiver Collar before use. Charge the Remote Training Collar if:




- The indicator light on the Receiver Collar is blinking rapidly.
- There is only 1 battery level bar left on the Remote Transmitter LCD display.
- The indicator light on the Remote Transmitter and Receiver collar will not come on.

Charging Steps:



1. Plug the adaptor into a standard wall outlet.
2. Connect the USB cable connectors to the charging jack on Receiver Collar and Remote Transmitter.
3. Connect the USB cable port to the power adapter, power band or your PC.

 
 
 
Notes:

Remote Transmitter:

- Plug the adaptor, the battery icon on the LCD display will scroll when charging.
- When fully charged, the Battery bar is fully  and stop running.
- When the battery bar is only 1 battery  level display, please charging immediately.
- When the battery bar is empty , please stop to use and charging immediately.

Receiver Collar:

- Touch the magnetic charging cable to the back of the receiver. Plug the adaptor, the Blue LED flashing indicates in charging.
- When the battery bar in Display is in lower level / , please stop to use and charging immediately.
- If the Blue LED light on Receiver Collar flashes slowly once per 5 seconds indicates low battery. Please charge the device immediately. The Blue LED light will flash once per 8 seconds at normal working status.
- When fully charged, the Blue LED indicator will be come solid.

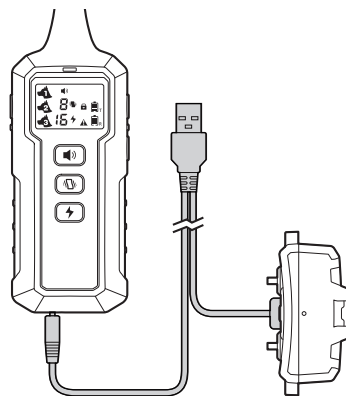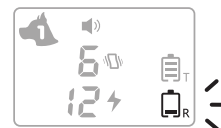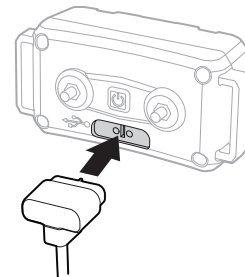




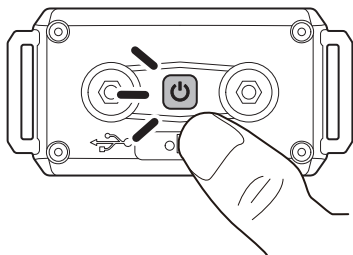 
⚠ Warning:


Please use those with 5V output voltage. The output voltage information is usually described on the surface of power adapter. Power adapter with output voltage over 5V may cause damage to the training collar.

Step 7 How to Pair the Remote Transmitter & Receiver Collar

If your Receiver Collar does not beep when you press the Beep Button on the Remote Transmitter, or you feel the Receiver Collar is not responding to the Remote Transmitter, follow these steps to pair.


1. Press the Power button on the Receiver Collar to turn on the Receiver Collar.
2. Press the Power button of Receiver Collar for 3 seconds to enter the pairing mode. You will hear a "Beep" sound and the Blue indicator consecutive blinking. You will now have 15 seconds to finish the pairing.
3. Select the Channel 1, 2 or 3. Press the // on the Remote Transmitter, and you will hear a long "Beep" sound from the Receiver Collar indicating that pairing is completed. Then Receiver Collar will respond to your operations on the remote.




Tips: You can choose Channel 1 / Channel 2 / Channel 3 to pair the Remote Transmitter & Receiver Collar. The system can pair 3 Receiver Collars at the same time. If you can not pair the device successfully, it maybe caused by the signal interference. Please change to another place to try or contact our service center. If you bought the dual Receiver Collars version, follow "Step 7" above to pair the other receiver (Choose the other channel by pressing the channel button  on the Remote Transmitter).

Step 8 How to Test the Functions


Beeping Test

 
- Press the  Button to test the Beeping function.
- The Receiver Collar will beep indication that the beeping function works.

Vibration Test

- Press the  Button to test the Vibration function.
- The Receiver Collar will vibrate indicating that the Vibration function works.

Shock Test

- Secure the Test Bulb on the Receiver Collars' Contact Points.
- Press the  Button to test the shock function.
- The Test Bulb will light up indicating the static shock stimulation works, Test Bulb become brighter at higher shock levels.

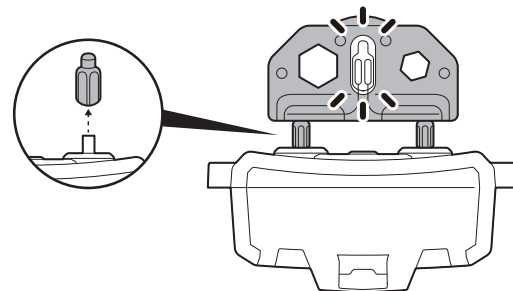

General Training Guide

General Tips

- Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with training, your pet may become confused.
- Be consistent. Correct your pet every time he misbehaves.
- Unless you can supervise him, it is recommended that you restrict your pet from situations in which he has a history of misbehaving. However, setting up a situation as a training session can dramatically improve your chances of success.
- If your pet reacts to the beeps by hiding or acting fearful, redirect his attention to a simple and appropriate behavior, such as the "sit" command.
- Pets should be at least 6 months old before using the Trainer.
- Only let responsible family members use the Trainer. It is not a toy!
- Other pets in hearing range will be affected by the training beeps. Therefore, training sessions should be conducted out of hearing range of other pets.

CAUTION: Never use the Remote Trainer to correct or eliminate any form of aggressive behavior. We recommend you contact your local veterinarian or professional trainer to determine if your pet might be aggressive. See page 1 for more information.

Frequently Asked Questions

Is the Stimulation safe for my pet?

ANS: While the Stimulation is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results.

How old does my pet have to be before using the Remote Training Collar?

ANS: Your pet should be able to recognize basic obedience commands such as "Sit" or "Stay". Pets should be at least 6 months old before using the Trainer.

Once my pet is trained and has been obeying my commands, will he have to continue to wear the Receiver Collar?

ANS: Probably not. You may need to reinforce training with the Receiver Collar from time to time.

Is the Receiver Collar waterproof?

ANS: Yes. Receiver Collar is IPX7 waterproof, but make sure to keep the area dry when charging.

Notes: Remote Transmitter is not waterproof.

Why sometimes I get short remote range with the Remote Training Collar?

ANS: The range of the Remote Training Collar will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. See "How the System Works" for tips on maximizing your range.

How long can I continuously deliver stimulation to my pet?

ANS: The maximum amount of time you can press the Stimulation Button and deliver stimulation to your pet continuously is 10 seconds. After this, the Remote Transmitter will time-out, and the Stimulation Button must be released and pressed again.

My pet does not respond when I press a button

- Make sure the Receiver Collar has been turned on.
- If your range has reduced from the first time you used the Remote Training Collar, the battery(s) may be low in either the Remote Transmitter or Receiver Collar.
- Many factors can impact the amount of range you have with the Remote Trainer. For a list of these factors, see "How the System Works".
- Test the Receiver Collar. See "How to test the functions" for details.
- Increase the Stimulation Level. Refer to "How to find the best Vibration/Shock Level for your pet" for more information.
- Make sure the Receiver Collar's Contact Points are placed snugly against your pet's skin. Refer to "How to Fit the Receiver Collar" for more information.

The Receiver Collar will not turn on

- Make sure the Receiver collar has been charged. For the initial charge, be sure to charge it for 4 hours. Subsequent charges only take 2~3 hours.

The Receiver Collar is not responding to the Remote Transmitter

- Verify the Receiver Collar is on.
- If the indicator light is blinking rapidly, fully charged the Receiver Collar.
- If the first two solutions did not resolve your problem, see "How to pair the Remote Transmitter & Receiver Collar."

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.