

**Dog Training Collar**

**Manual**

**Please Read the Manual before Use**




The pictures maybe different from the actual product  
please in kind prevail!

## Features

1. Rechargeable: Rechargeable Remote Control and Receiver
2. It works well, even in rainy day.
3. Adjustable Levels: The adjustable level of Vibration mode and Shock mode are 01-06.
4. Three training mode: Shock/Vibration /Sound.
5. Three channels: Select the channel, up to 3 Receivers and 1 Remote Control.
6. Automatic power saving: If no operations within 5 minutes, the Remote Control and Receiver will go into standby mode.

## Tips

1. Please charge it before using it for the first time, and continue until the charging indicator is on.
2. Eliminate one bad behavior or disobedience to appropriate orders at a time, if you train too quickly, your pet maybe confused or even repelled.
3. Before using the Shock mode, try vibrating your pet first.
4. Observing the dog's reaction to ensure the training intensity is not too much.
5. Check your dog's skin, make sure it don't get hurt by shocking.

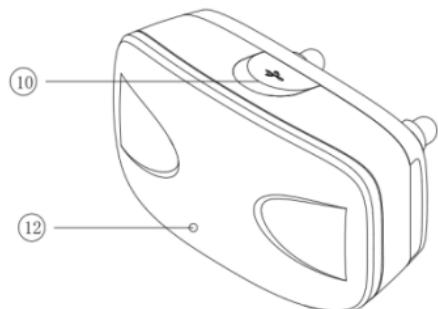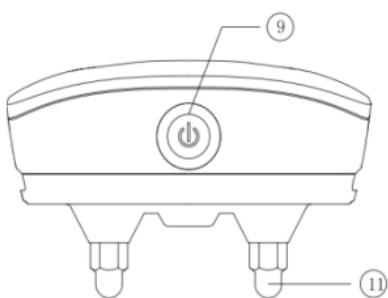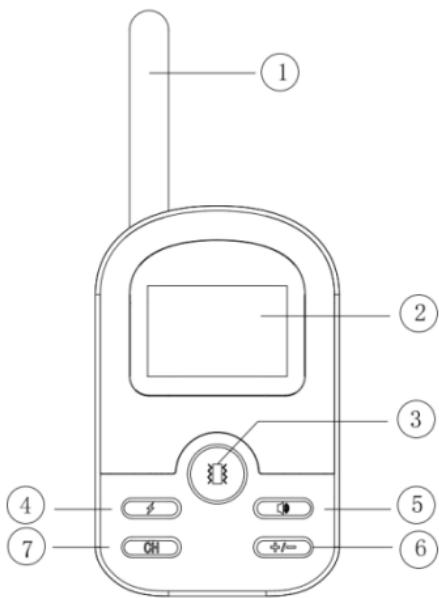

## Key Definition

- ① Antenna: Transmit the signal strongly.
- ② LCD screen : Display modes, levels and channels.
- ③ Shock button: Turn on the screen, press the Shock button, press the + or - button to adjust the level from 01-06, press the Shock button to make the receiver shock again.
- ④ Vibration button: On the screen, press the Vibration mode, press +/-button to adjust the levels from 01-06, press Shock button to make the receiver vibrate again.
- ⑤ Sound button: press to choose Sound mode, don't need to adjust the levels. Just press to make the receiver sound Bee~~
- ⑥ button+/-: press +/- to adjust the levels.
- ⑦ Channel button: choose your training channel among Ch1/CH2 /Ch3 by press this button.
- ⑧ Charging port: Type-c Charging Port.
- ⑨ Power button: press to turn on the receiver, press again to turn it off.
- ⑩ Charging :The hole of the Charging port Type-c.
- ⑪ Contact points: When installing the metal cap, be sure to contact to pet's skin. Perform safety corrections.
- ⑫ Indicator light: The light will flash when we press the Shock/Vibration/Sound button. When it's charged, the indicator will be light up like breathing.

## **Please charge the Remote Control and the Receiver before use it at the first time.**

1. Charge the remote control:
  - 1.1. Plug the cable into the charging hole.
  - 1.2. Connect the USB charging adapter and plug it into outlet.
  - 1.3. When it's charged, the battery icon in the screen will be flashing; after charged fully, it will stop flashing.
2. Charge the receiver:
  - 2.1. Open the rubber cover of the receiver's charging hole.
  - 2.2. Plug the cable to the charging hole
  - 2.3. Connect the USB charging adapter and plug it into outlet.
  - 2.4. The indicator green LED light up like breathing;  
After being charged fully, the green LED light will stop breathing and always on.

### **NOTE:**

1. Please charge the remote control and receiver for more than 5 hours at the first charging.
2. When the receiver is charged, it's in sleep mode, and can't receive the signal from the remote control.
3. There will be showing empty battery icon on the screen of the remote control if it's low power.
4. If the receiver running out of power, the indicator light will be on per second.

5. Please charge them fully before you keep them idle for a long time, it's necessary to charge them every month.

## **Auto Power Saving Function:**

1. If there is no operations on the remote control within 10 seconds, the back lit of screen will be off. If there is no operations within 30 seconds, the remote control will be in sleep mode, and the screen display will be shut off. Pressing any buttons can activate the Remote.
2. If there is no signal in the receiver within 5 minutes, it will go into standby mode; you could press Shock or Vibration or Sound button to activate it.
3. You could turn the receiver OFF by pressing the power button of the Receiver.

## **Pair the Remote Control with Receiver**

1. Press the shock button or vibration button to turn on the Remote
2. Choose a channel CH1 or CH2 or CH3 by pressing the CH button
3. Adjust the level by pressing + or — button, make sure the level above 01
4. Press the Power button of the receiver for 3 seconds, you will hear a sound like Bee~, and the indicator light is flashing; Then quickly, Press the Vibration button or

Shock button within 10 seconds after the sound Bee~, you can hear a sound Bee~ again , which means the pairing is successfully.

5. If you have 2 or 3 receivers just choose the different channels, and pair as the above steps.

### **Note:**

Please remember the channel you have chosen to pair, if you use another channel without pairing, you can't control the receiver.

### **Test the training collar set (After paired successfully)**

#### **1. Test the Shock function**

Take out the test bulb and put it on the Receiver's contact point

Press the Shock button (make sure the level above 01).

The test bulb will be on

#### **2. Test the Vibration function**

Press the Vibration button (make sure the level above 01)

The receiver will vibrate

#### **3. Test the Sound function**

Press the Sound button (don't need to adjust the level)

The Receiver will sound bi~bi~

### **How to wear the Receiver to your pet**

#### **1. Put the Receiver on dog's neck**

2. Make sure the contact point reaches to the skin of dog, and choose the suitable metal cap.
3. Adjust the belt collar, make sure your dog feels comfortable.

## **F.A.Q**

**Q:** What's the length of this training collar?

**A:** 23.6 IN (60 CM)

**Q:** How much weight of dogs does this training collar suits for?

**A:** above 20 lb.

**Q:** Is the Receiver waterproof?

**A:** Yes, it's totally waterproof.

**Q:** How long does my dog get training every time?

**A:** 10-15 min.

**Q:** What should I do if the training collar set doesn't work?

**A:** 1. Check the battery power of the Remote and Receiver, if it's low power, charge them.

2. Check the level, if you choose Vibration mode or Shock mode, adjust to above 01.

3. Check the Receiver, if you don't turn it on, press the Power button of the Receiver.

4. Check the channel, if you choose the different channel, press up/down button to adjust

5. Repair the Remote with the Receiver.

6. Check the metal screw cap if they are too short, change to install the longer cap.

1. Frequency: 433MHZ

2. Transmitter:

2.1、Battery Capacity: 3.7 V300ma LIP

2.2、Electric Charging Voltage: USB DC 5V

2.3、Electric Charging Current: 200mA

2.4、Discharging Current: 100mA

2.5、External Size: 120\*50\*38mm

2.6、External Material: ABS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.


-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.


## The Main Accessories:

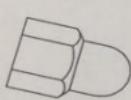


E-Shock Probe

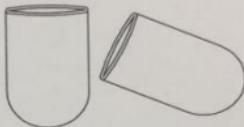

Rubber sleeve

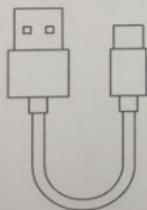

Charging Cable

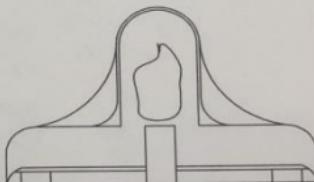

Test Unit (light)



Collar

Thank you very much for choosing our product