



CLEANING AND MAINTENANCE



6. Rinse the dust bin with tap water. It is not necessary to wash every time.
Please do not put it into the washing machine to do the cleaning.

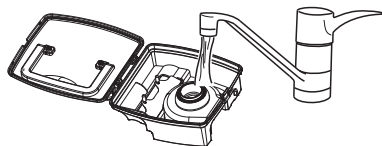



7. Periodically clean the filter with a soft bristle brush.

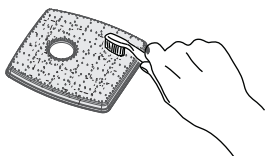

8. Once dry, reinstall the filter and the dust bin lid.

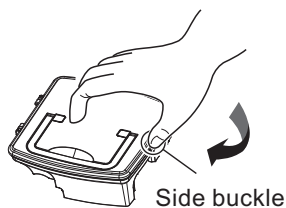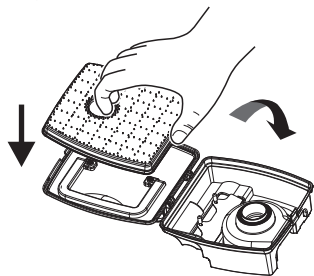

9. Place back the dust bin and the Top Cover

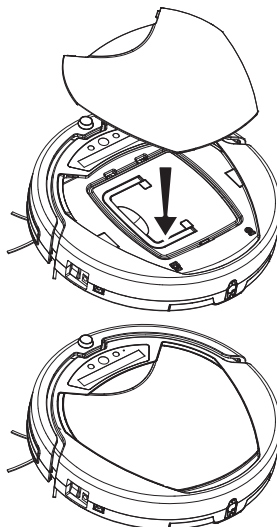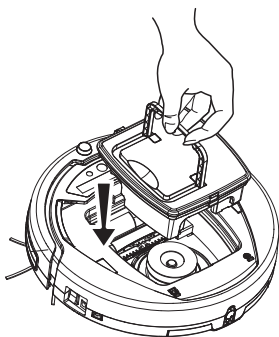


ATTENTION!! Before starting the cleaner, please be sure the dust bin filter has properly installed in case any damage occurs.

CLEANING AND MAINTENANCE


Cleaning Intake:

After repeated use, dirt and dust can accumulate around the intake of the M680GMA and the working efficiency can be reduced. To ensure the best efficiency and constant airflow, the intake should be cleaned periodically.

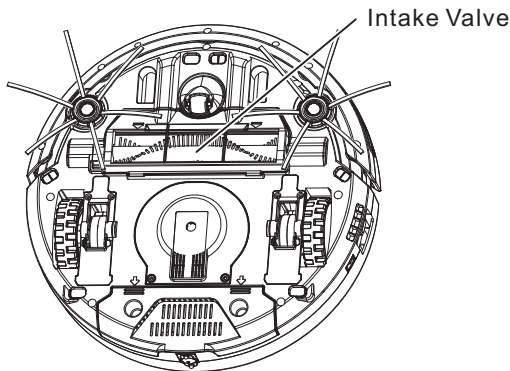

Cleaning Side Brushes:

1. After being used for a period of time, the brushes need to be replaced for working more effectively.
2. Turn off the power, place bottom of the cleaner upward on a flat surface. Hold two opposite sides of the brush (see diagram below), and evenly pull upward to remove the brush.
3. The side brushes can be rinsed and if they become crooked, you can soak them in hot water to make them recover to the original shape. Install the brushes back after cleaning.

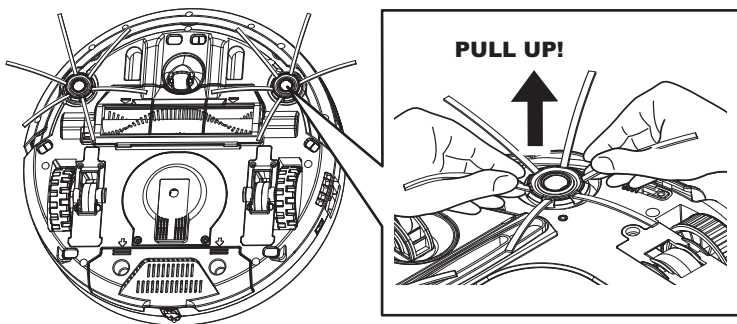





CLEANING AND MAINTENANCE

Cleaning TPE Roll Brush:

After repeated use, dirt and dust can accumulate around the intake and TPE Roll Brush of the M680GMA and the working efficiency can be reduced. To ensure the best efficiency and constant airflow, the intake should be cleaned periodically.

1. After being used for a period of time, the TPE Roll Brush need to be replaced for working more effectively.
2. Turn off the power, place bottom of the cleaner upward on a flat surface. Hold removable VAC-SWEPT and pull upward, then pull upward the TPE Roll Brush clean with a soft bristle brush(see diagram below). Rinse it with tap water. It is not necessary to wash every time.









Please do not put it into the washing machine to do the cleaning.

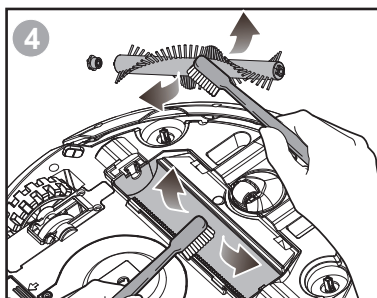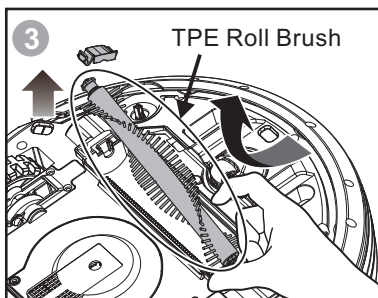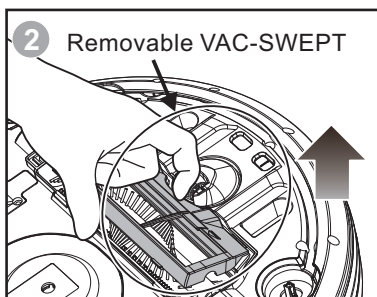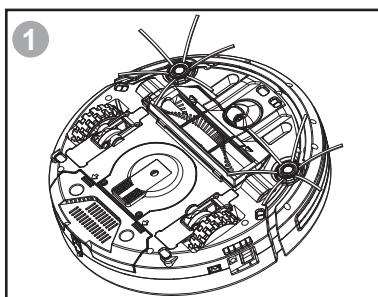

CLEANING AND MAINTENANCE

Maintenance of Main Wheels:

Follow below Instruction if Cable is twined or strangled or Clean needed.

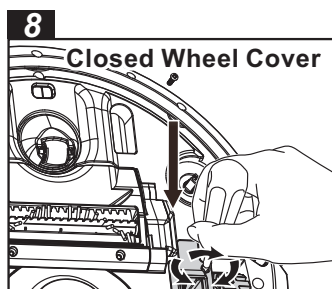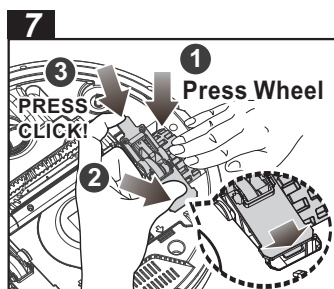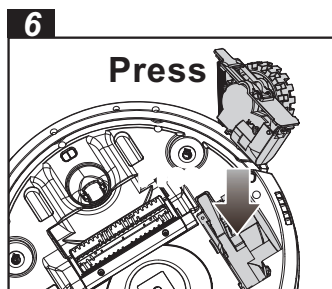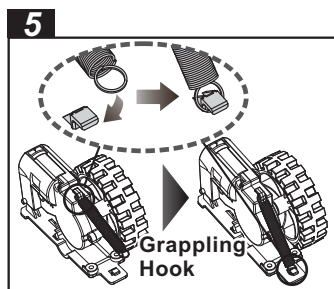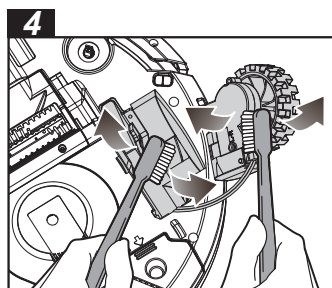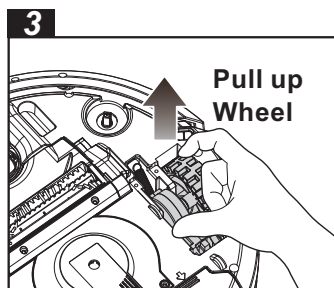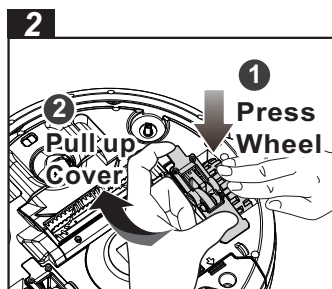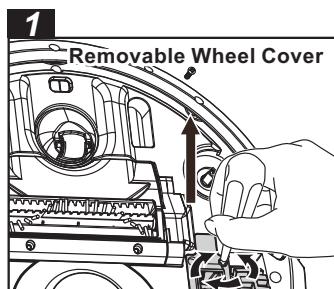

TROUBLE SHOOTING

	Problem	Possible Cause	Solution
1	Turn on the power switch with no LED display shown.	1. Battery is not installed correctly. 2. Very low battery.	1. Install the battery according to the manual. 2. Charge the battery according to the manual.
2	Vacuum on but can not collect dirt or hair.	1. The dustbin is full. 2. The filter is not installed correctly.	1. Clean the dustbin. 2. Re-install the filter correctly.
3	The side brush becomes crooked, not good to sweep.	Being used for a long time.	If it becomes crooked, you could soak it in hot water to have it recover to its original shape.
4	Unit circles around only.	One of the wires of the wheels is loosened.	Open the wheel cover and connect the loosened wire of the wheel set properly or contact your local dealer for service.
5	Cannot start the unit.	1. The battery is not installed properly. 2. Battery power is low. 3. The dust bin is not installed properly.	1. To install the battery properly, please refer to page 13 for battery installation. 2. Have the battery fully charged. 3. Place back the dust bin and turn it on again.
6	Unit could not vacuum effectively when it is turned on.	The dust bin filter is not properly installed.	Install the dust bin filter properly.
7	The LED display shows error.	E1, E2, E3, E4, E5, E6, E7 and Beep 3 times.	Please refer to table A on page 21 for solving the problems.

*** If the solution can not solve the problem, please contact to you local dealer for service. ***

WARNING OF BATTERY & ADAPTOR USAGE

- 1. The protective devices cannot be reset or replaced after a short circuit or an overload.**
- 2. Please follow the voltage and current specified and printed on the packing labels. Check with salesman or local power company if it is uncertain.**
- 3. To avoid the hazard from battery short circuit, please follow the instruction of installing battery exactly.**
- 4. The adaptor is applied indoors only.**
- 5. Do not keep on using the equipped battery if the packing cast is broken or the battery is leaking.**
- 6. If battery is leakage, please handle with rubber gloves to avoid making contact with skin.**
- 7. Never touch the adaptor, plug and cable with wet hands.**
- 8. Unplug, stop recharging, and take out the battery before clean the unit.**
- 9. Remove the battery before dispose the unit.**
- 10. Unplug or turn off the unit before take out the battery.**
- 11. Recycle the disused battery properly.**
- 12. Keep battery away from inflammable area.**
- 13. Do not soak the battery into water or raindrop.**

WARNING OF BATTERY & ADAPTOR USAGE

- 14. Do not try to disassemble the battery.**
- 15. Do not disregard kids playing with battery.**
- 16. Do not contact eyes, skin, clothes with battery leaking fluid, wipe the leaking battery with dry cloth before recycle it properly.**