材质: 80G双铜+正反印刷+风琴折


尺寸: 88x76mm(折后尺寸)











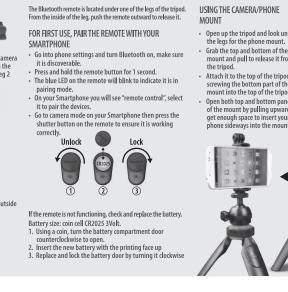

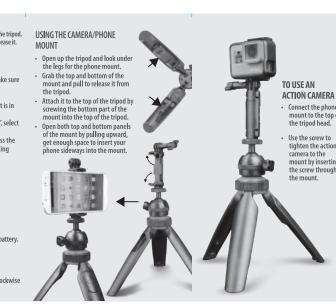

USING THE MICROPHONE WITH A CAMERA

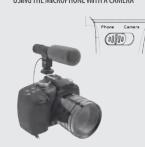

 Mount the microphone on top of the camera using the microphone's cold shoe, found underneath the microphone. Slide it into the top shoe of the camera. Rotate the knob until the microphone fits securely on Move the introphone's switch to the Camera's setting, the red light indicator will turn on .
 Connect the microphone's plug into the camera's 3.5mm audio jack.
 The microphone should now be working with your

position. For an iPhone 7 or newer, you will first need to connect a Lightning to 3.5mm adapter to your iPhone (this adapter is not included).

USING THE MICROPHONE WITH A PHONE

- Fully charge the light before first use. Connect the included micro USB cable from the
- (in) adapter in normalization includes), For an Android phone with a USB-C port and no 3.5mm jack, you will first need to connect a USB-C to 3.5mm adapter to your phone (this adapter is not included)

 Connect the microphone's 3.5mm plug to the jack on the lightning or USB-C adapter. For other models of Smartphones, connect the microphone's 3.5mm plug directly into the jack on the phone.


 The microphone should now work with your phone.
- turn the light on. press the power button. To increase the brightness to high, quick press
 - turn the light off. indicator LED will blink rapidly, in 4 minutes the light will power off and needs to be recharged.

CHARGING THE LIGHT

- lighting effects.
- light to a USB charger (not included). Let charge until the blue blinking power indicator light stays on, charge time
- Using the light Connect the light to a standard tripod or to a • Press and hold the power button for 2 seconds to To increase the brightness to medium, quick
- the power button again. Press and hold the power button for 2 seconds to When the internal battery power is low the blue

USING THE DIFFUSER FILTERS

- This kit features 3 color diffusers to get different

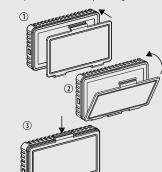

- Insert the tabs on the bottom of the diffusers into the slots on the bottom of the light. Gip the diffuser to the top of the light.

Questions? Problems? Picked up the wrong item? Before returning to the Store, please give our customer service team a chance to help.

Mdigipower*

Mizco International, Inc.

Cranford, New Jersey

All rights reserved.

- email us at TechSupport@Mizco.com FC (Form
 - product has been handled or used in any manner which is inconsistent with the instructions accompanying the product or the intended use of the product. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty does not extend to equipment used with the product. This warranty is valid only if the product is used on a compatible device as specified on or attached to the product package. To verify compatibility, please check the product package for details or visit: www.bigiPowerSolutions.com.

 Repair or replacement, as provided under this warranty, is your exclusive remedy. We shall not be liable for any incidental or consequential damages. DigiPower hereby expressly disclaims any and all implied warranties of merchantability and fitness for a particular purpose.
- for a particular purpose.

 Some states/countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

 Some states/countries do not allow limitations on implied warranties, so the above limitation may not apply to you.

 This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and country to country. DIGIPOWER is a registered trademark of Mizco International Inc.
- WARRANTY INFORMATION FOR DIGIPOWER
 PRODUCTS, A DIVISION OF MIZCO INTERNATIONAL, INC.

 We warrant all Digipower branded products against defects in interference that may cause undesired operation.

 10 This device may not cause harmful interference, and 10 This device may not cause harmful interference received, including interference that may cause undesired operation.
- For disposal in countries outside of the European Union This symbol is only valid in the European Union (EU). If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.

 - old devices can be returned free of charge to suitable collection points.
 these are collected there professionally or prepared for reuse. Old appliances may contain harmful substances that can harm the environment and human health. The raw materials contained can contribute to environmental protection through their recycling.
 - 3. the deletion of personal data on the waste equipment to be disposed of must be carried out by the end user on his own responsibility.